


TrueSteam with TrueIAQ

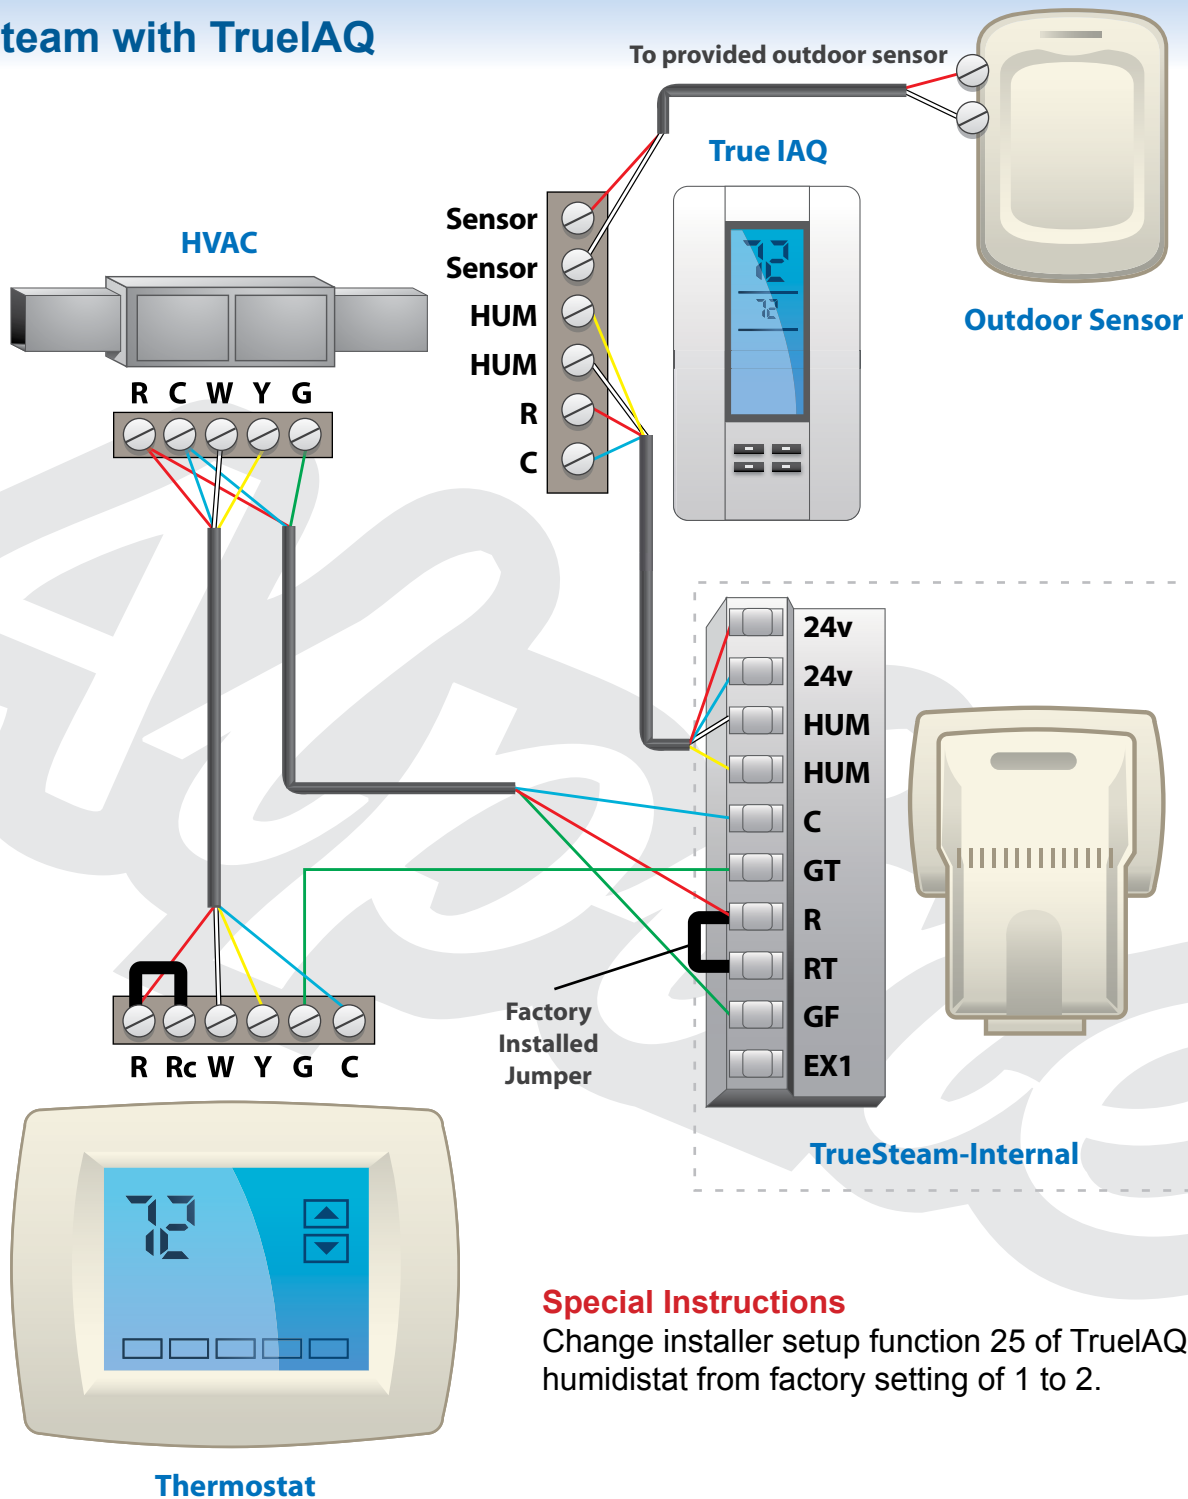

Special Instructions

Change installer setup function 25 of TrueIAQ humidistat from factory setting of 1 to 2.