

Installation Instructions for VC-132(M) Outdoor Vent Cap



Note: This vent cap is approved for use on outdoor installations only!

Step 1: Locate and Remove Mounting Screws

The screws are located towards the top, back of the heater as shown in figure 1. Remove the inner screw on each side of the heater



Figure 1: Location of mounting screw.

Step 2: Install Flue Gasket

Locate the supplied gasket and slide it over the flue. Continue sliding it down the flue until in rests on top of the heater as shown in figure 2.



Figure 2: Flue gasket installed.

Step 3: Install the Vent Cap

Locate the hole on the bottom of the vent cap. Slide the vent cap over the flue (with the louvers facing forward) as shown in figures 3a and 3b. The cap will rest on the top of the heater.



Figure 3a: Slide vent cap over flue.



Figure 3b: Vent cap installed.

Step 4: Secure the Vent Cap

Secure the vent cap to the heater using the screws removed in step 1.