

Installation Instructions

Description

The QuickNet-Check monitor is used to verify the continuity of the QuickNet heating cable and the integrity of its outer jacket during the installation process. The monitor connects to the cold leads of the cable and, if the heating cable is damaged, the alarm on the monitor will sound. The monitor can also be re-used for subsequent installations and to help troubleshoot any problems that may arise.

Tools Required

- Phillips (No. 1) screwdriver


Other Materials Required

- *QuickNet System Installation Manual* (H57704)
- *QuickStat® Thermostat Installation and Operation Manual* (H57725)
- Two (2) AAA batteries



Kit Contents

Item	Qty	Description
A	1	QuickNet-Check monitor

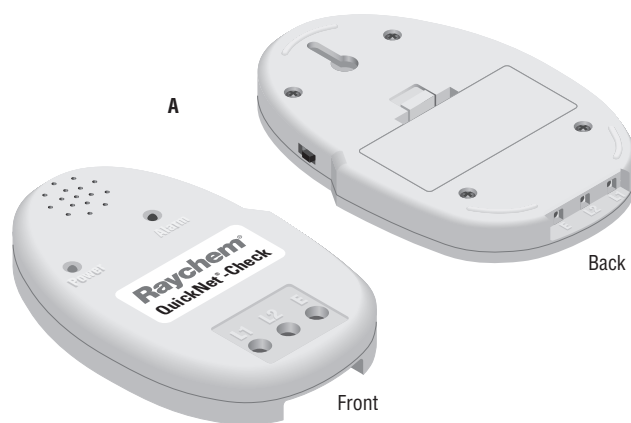

⚠ IMPORTANT:


- **Do not** power the QuickNet Floor Heating System with the QuickNet-Check installed. Doing so can damage the monitor and the heating mat.
- Use of the QuickNet-Check monitor **does not** replace performing the three commissioning tests as outlined in the *QuickNet System Installation Manual* (H57704). The Insulation, Heating Cable and Sensor Resistance tests **must** be performed as stated in the Installation Manual and the readings must be recorded for the warranty to apply.

QuickNet-Check Installation Instructions

Installing the batteries

- Open the battery cover and insert the two (2) AAA batteries into the compartment. Make sure the batteries are installed in the proper orientation. See Figure 1.
- Replace the battery cover and switch the unit "ON".
- The alarm should sound and the red light should light since there is no connection to a mat or cable. If this does not occur, please make sure that the batteries are properly installed or replace the batteries.
- During normal use, the green light indicates that the QuickNet-Check monitor is monitoring the mat or cable for damage. Should the green light go out, replace the batteries before continuing work.

Figure 1

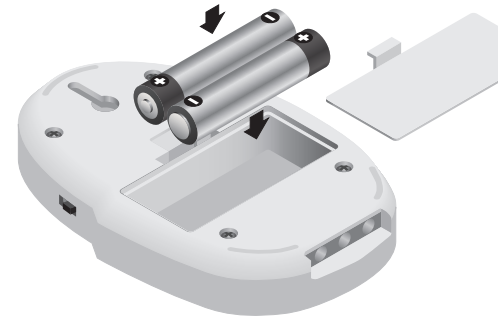


Connecting the QuickNet heating mat to the QuickNet-Check monitor during installation

- Verify that the mat is not connected to a power source.
- Connect the QuickNet heating mat(s) at the beginning of the project to detect for faults in the heating cable.
- Connect one QuickNet mat as shown in Figure 2; Connect two mats in series as shown in Figure 3.
- Turn monitor ON.
- The green light should light to indicate that the QuickNet-Check monitor is operating properly.
- The alarm will sound and the red light will light if the monitor detects damage to the heating cable or if the lead wires come loose. The two types of damage that can be detected are:
 - A break in the continuity of the heating element
 - A short to the ground wire
- If the alarm sounds, verify that the lead wires are properly connected. If the lead wires are properly connected, stop the installation and contact Tyco Thermal Controls at 800-545-6258.
- It is strongly recommended that you keep the QuickNet-Check monitor turned ON and attached to the cold leads throughout the installation of the heating mat. Detecting a fault in the heating cable before setting it in mortar can help to save both time and rework cost.

Figure 2



Figure 3

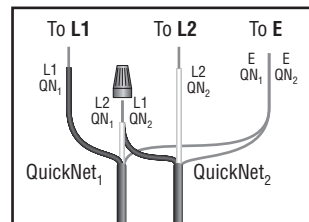

Connecting the QuickNet heating mat to the QuickNet-Check monitor to troubleshoot issues after installation

- Turn off the power to the QuickNet floor heating system at the circuit breaker before starting any work.
- Remove the QuickStat Thermostat and disconnect the cold leads, power wires and floor sensor leads by following the instructions in the QuickStat Thermostat Installation and Operation manual (H57725).
- Connect the cold leads to the QuickNet-Check monitor as shown in Figure 2 and turn monitor ON.
- If the alarm sounds, contact Tyco Thermal Controls at (800) 545-6258.
- If the alarm does not sound, refer to the Troubleshooting section of the QuickNet System Installation Manual (H57704).

Tyco, QuickNet and QuickStat are trademarks of Tyco Thermal Controls LLC or its affiliates.

Worldwide Headquarters
Tyco Thermal Controls
 307 Constitution Drive
 Menlo Park, CA 94025-1164
 USA
 Tel (800) 545-6258
 Tel (650) 216-1526
 Fax (800) 527-5703
 Fax (650) 474-7711
 info@tycothermal.com
 www.tycothermal.com

Canada
Tyco Thermal Controls
 250 West St.
 Trenton, Ontario
 Canada K8V 5S2
 Tel (800) 545-6258
 Fax (800) 527-5703

Important: All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their particular application. Tyco Thermal Controls makes no warranties as to the accuracy or completeness of the information, and disclaims any liability regarding its use. Tyco Thermal Controls' only obligations are those in the Tyco Thermal Controls Standard Terms and Conditions of Sale for this product, and in no case will Tyco Thermal Controls or its distributors be liable for any incidental, indirect, or consequential damages arising from the sale, resale, use, or misuse of the product. Specifications are subject to change without notice. In addition, Tyco Thermal Controls reserves the right to make changes—without notification to Buyer—to processing or materials that do not affect compliance with any applicable specification.