

# AEPF AIR HANDLERS

## INSTALLATION & OPERATING INSTRUCTIONS



**RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION.**

### **ATTENTION INSTALLING PERSONNEL**

Prior to installation, thoroughly familiarize yourself with this Installation Manual. Observe all safety warnings.  
During installation or repair, caution is to be observed.

It is your responsibility to install the product safely and to educate the customer on its safe use.



# CONTENTS

<p><b>Important Safety Instructions</b> ..... 3</p> <p><b>Shipping Inspection</b> ..... 3</p> <p><b>Codes &amp; Regulations</b> ..... 3</p> <p><b>Replacement Parts</b> ..... 4</p> <p><b>Pre-Installation Instructions</b> ..... 4</p> <p><b>Location</b> ..... 4</p> <p><b>Ductwork</b> ..... 4</p> <p style="padding-left: 20px;"><i>Return Ductwork</i> ..... 4</p> <p style="padding-left: 20px;"><i>Return Air Filters</i> ..... 4</p> <p><b>Electric Heat</b> ..... 4</p> <p><b>HKR Installation</b> ..... 5</p> <p><b>Electrical Supply Wire and MOP</b> ..... 5</p> <p style="padding-left: 20px;"><i>Building Electrical Service Inspection</i> ..... 5</p> <p style="padding-left: 20px;"><i>Wire Sizing</i> ..... 6</p> <p style="padding-left: 20px;"><i>Maximum Overcurrent Protection (MOP)</i> ..... 6</p> <p style="padding-left: 20px;"><i>Electrical Connections – Supply Voltage</i> ..... 6</p> <p style="padding-left: 20px;"><i>Air Handler Only (Non-Heat Kit Models)</i> ..... 6</p> <p style="padding-left: 20px;"><i>Air Handler With Non-Circuit Breaker Heat Kits</i> .. 6</p> <p style="padding-left: 20px;"><i>Air Handler With Heat Kits</i></p> <p style="padding-left: 20px;"><i>Containing a Circuit Breaker</i> ..... 6</p> <p style="padding-left: 20px;"><i>Low Voltage Connections</i> ..... 6</p> <p><b>Refrigerant Lines</b> ..... 6</p> <p style="padding-left: 20px;"><i>Tubing Preparation</i> ..... 6</p> <p style="padding-left: 20px;"><i>Post Brazing</i> ..... 6</p> <p style="padding-left: 20px;"><i>Piping Size</i> ..... 7</p> <p style="padding-left: 20px;"><i>Special Instructions</i> ..... 7</p> <p><b>Downflow Conversion</b> ..... 7</p> <p><b>Horizontal Conversion</b> ..... 8</p> <p><b>AEPF MOTOR ORIENTATION</b> ..... 9</p> <p><b>Condensate Removal</b> ..... 9</p> <p><b>ACHIEVING 2% LOW LEAKAGE RATE</b> ..... 10</p> <p><b>AEPF Motor</b> ..... 10</p> <p style="padding-left: 20px;"><i>Motor Speed Adjustment</i> ..... 10</p> <p style="padding-left: 20px;"><i>Dipswitch Functions</i> ..... 10</p> <p style="padding-left: 20px;"><i>CFM Delivery</i> ..... 10</p> <p style="padding-left: 20px;"><i>Thermostat “Fan Only Mode”</i> ..... 10</p> <p style="padding-left: 20px;"><i>CFM Trim Adjust</i> ..... 10</p> <p style="padding-left: 20px;"><i>Humidity Control</i> ..... 10</p> <p style="padding-left: 20px;"><i>Two Stage Heating</i> ..... 10</p> <p><b>Thermostats</b> ..... 11</p> <p><b>Start-Up Procedure</b> ..... 11</p> <p><b>Regular Maintenance</b> ..... 11</p> <p><b>THERMOSTAT CONNECTIONS</b> ..... 11</p>	<p><b>COOLING ONLY -</b></p> <p style="padding-left: 20px;"><b>2 STAGE HEAT THERMOSTAT</b> ..... 12</p> <p><b>COOLING ONLY -2 STAGE HEAT</b></p> <p style="padding-left: 20px;"><b>(1ST ROOM THERMOSTAT &amp; 2ND OT</b> ..... 12</p> <p><b>COOLING ONLY -</b></p> <p style="padding-left: 20px;"><b>2 STAGE HEAT (THERMOSTAT ENABLED OT)</b> .. 13</p> <p><b>HEAT PUMP -</b></p> <p style="padding-left: 20px;"><b>WITH 1 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>1 STAGE AUXILIARY HEAT</b> ..... 13</p> <p><b>HEAT PUMP - 2 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>1 STAGE AUXILIARY HEAT</b> ..... 14</p> <p><b>HEAT PUMP - 2 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>2 STAGE AUXILIARY -</b></p> <p style="padding-left: 80px;"><b>1 OUTDOOR THERMOSTAT</b> ..... 14</p> <p><b>HEAT PUMP - 2 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>2 STAGE AUXILIARY -</b></p> <p style="padding-left: 80px;"><b>2 OUTDOOR THERMOSTATS</b> ..... 15</p> <p><b>HEAT PUMP - 2 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>1 STAGE AUXILIARY -</b></p> <p style="padding-left: 80px;"><b>1 OUTDOOR THERMOSTAT</b> ..... 15</p> <p><b>HEAT PUMP - WITH 1 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>1 STAGE AUXILIARY HEAT</b> ..... 16</p> <p><b>HEAT PUMP - WITH 1 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>1 STAGE AUXILIARY HEAT</b> ..... 16</p> <p><b>HEAT PUMP - 2 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>1 STAGE AUXILIARY HEAT</b> ..... 17</p> <p><b>HEAT PUMP - 2 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>2 STAGE AUXILIARY -</b></p> <p style="padding-left: 80px;"><b>1 OUTDOOR THERMOSTAT</b> ..... 17</p> <p><b>HEAT PUMP - 2 STAGE EMERGENCY HEAT,</b></p> <p style="padding-left: 40px;"><b>2 STAGE AUXILIARY -</b></p> <p style="padding-left: 80px;"><b>2 OUTDOOR THERMOSTATS</b> ..... 18</p> <p><b>HEAT PUMP - 2 STAGE EMERGENCY HEAT -</b></p> <p style="padding-left: 40px;"><b>1 STAGE AUXILIARY -</b></p> <p style="padding-left: 80px;"><b>1 OUTDOOR THERMOSTAT</b> ..... 18</p> <p><b>2 SPEED COOLING ONLY -</b></p> <p style="padding-left: 20px;"><b>WITH 1 STAGE ELECTRIC HEAT</b> ..... 19</p> <p><b>2 SPEED COOLING ONLY -</b></p> <p style="padding-left: 20px;"><b>WITH 2 STAGE HEAT THERMOSTAT</b> ..... 19</p> <p><b>2 SPEED COOLING ONLY -</b></p> <p style="padding-left: 20px;"><b>WITH 2 STAGE HEAT THERMOSTAT</b> ..... 20</p> <p><b>2 SPEED COOLING ONLY -</b></p> <p style="padding-left: 20px;"><b>2 STAGE HEAT (THERMOSTAT ENABLED OT)</b> .. 20</p> <p><b>WIRING DIAGRAM</b> ..... 21</p>
--	--

## Important Safety Instructions

The following symbols and labels are used throughout this manual to indicate immediate or potential safety hazards. It is the owner's and installer's responsibility to read and comply with all safety information and instructions accompanying these symbols. Failure to heed safety information increases the risk of personal injury, property damage, and/or product damage.

### WARNING

#### HIGH VOLTAGE!

Disconnect ALL power before servicing. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.



### WARNING

Installation and repair of this unit should be performed **ONLY** by individuals meeting (at a minimum) the requirements of an "entry level technician" as specified by the Air Conditioning, Heating, and Refrigeration Institute (AHRI). Attempting to install or repair this unit without such background may result in product damage, personal injury or death.

### WARNING

To avoid property damage, personal injury or death due to electrical shock, this unit **MUST** have an **uninterrupted, unbroken electrical ground**. The electrical ground circuit may consist of an appropriately sized electrical wire connecting the ground lug in the unit control box to the building electrical service panel. Other methods of grounding are permitted if performed in accordance with the National Electric Code (NEC)/American National Standards Institute (ANSI)/National Fire Protection Association (NFPA) 70 and local/state codes. In Canada, electrical grounding is to be in accordance with the Canadian Electric Code (CSA) C22.1.

### WARNING

This product is factory-shipped for use with 208/240/1/60 electrical power supply. **DO NOT** reconfigure this air handler to operate with any other power supply.

### CAUTION

When installing or servicing this equipment, safety clothing, including hand and eye protection, is strongly recommended. If installing in an area that has special safety requirements (hard hats, etc.), Observe these requirements.

### WARNING

Do not connect to or use any device that is not design-certified by Goodman for use with this unit. Serious property damage, personal injury, reduced unit performance and/or hazardous conditions may result from the use of such non-approved devices.

### WARNING

To prevent the risk of property damage, personal injury, or death, do not store combustible materials or use gasoline or other flammable liquids or vapors in the vicinity of this unit.

**DANGER**  
**PELIGRO**

  
**CARBON MONOXIDE POISONING HAZARD**

**Special Warning for Installation of Furnace or Air Handling Units in Enclosed Areas such as Garages, Utility Rooms or Parking Areas**

Carbon monoxide producing devices (such as an automobile, space heater, gas water heater, etc.) should not be operated in enclosed areas such as unventilated garages, utility rooms or parking areas because of the danger of carbon monoxide (CO) poisoning resulting from the exhaust emissions. If a furnace or air handler is installed in an enclosed area such as a garage, utility room or parking area and a carbon monoxide producing device is operated therein, there must be adequate, direct outside ventilation.

This ventilation is necessary to avoid the danger of CO poisoning which can occur if a carbon monoxide producing device continues to operate in the enclosed area. Carbon monoxide emissions can be (re)circulated throughout the structure if the furnace or air handler is operating in any mode.

CO can cause serious illness including permanent brain damage or death.

B10259-216

## Shipping Inspection

Always keep the unit upright; laying the unit on its side or top may cause equipment damage. Shipping damage, and subsequent investigation is the responsibility of the carrier. Verify the model number, specifications, electrical characteristics, and accessories are correct prior to installation. The distributor or manufacturer will not accept claims from dealers for transportation damage or installation of incorrectly shipped units.

## Codes & Regulations

This product is designed and manufactured to comply with national codes. Installation in accordance with such codes and/or prevailing local codes/regulations is the responsibility of the installer. The manufacturer assumes no responsibility for equipment installed in violation of any codes or regulations.

The United States Environmental Protection Agency (EPA) has issued various regulations regarding the introduction and disposal of refrigerants. Failure to follow these regulations may harm the environment and can lead to the imposition of substantial fines. Should you have any questions please contact the local office of the EPA.

### Replacement Parts

When reporting shortages or damages, or ordering repair parts, give the complete product model and serial numbers as stamped on the product. Replacement parts for this product are available through your contractor or local distributor. For the location of your nearest distributor consult the white business pages, the yellow page section of the local telephone book or contact:

CONSUMER AFFAIRS  
GOODMAN MANUFACTURING COMPANY, L.P.  
7401 SECURITY WAY  
HOUSTON, TEXAS 77040  
(877) 254-4729

If replacing an air handler, the system must be manufacturer approved and Air Conditioning, Heating, and Refrigeration Institute (AHRI) matched. **NOTE:** Installation of unmatched systems is strongly discouraged.

### Pre-Installation Instructions

Carefully read all instructions for the installation prior to installing product. Make sure each step or procedure is understood and any special considerations are taken into account before starting installation. Assemble all tools, hardware and supplies needed to complete the installation. Some items may need to be purchased locally. Make sure everything needed to install the product is on hand before starting.

### Location

**NOTE:** Air handlers are designed for *indoor installation only*.

Give special consideration to minimizing the length of refrigerant tubing when installing air handlers. Refer to Remote Cooling/Heat Pump Service Manual, TP-106 Long Line Set Application R-22 or TP-107 Long Line Set Application R-410A for guidelines. The unit clearance from a combustible surface may be 0". However, service clearance is to take precedence. In addition allow a minimum of 24" in front of the unit for service clearance.

If the unit is located in an area with high ambient temperature and/or high humidity, the air handler may be subject to nuisance sweating of the casing. On these installations, a wrap of 2" fiberglass insulation with a vapor barrier is recommended.

Do not install the air handler in a location that violates the instructions provided with the condenser.

Consult all appropriate regulatory codes prior to determining final clearances. When installing this unit in an area that may become wet, elevate the unit with a sturdy, non-porous material. In installations that may lead to physical damage (i.e. a garage) it is advised to install a protective barrier to prevent such damage.

### Ductwork

This air handler is designed for a complete supply and return ductwork system.



### CAUTION

**Do not operate this product without all the ductwork attached.**

To ensure correct system performance, the ductwork is to be sized to accommodate 375-425 CFM per ton of cooling with the static pressure not to exceed .5" WC. Inadequate ductwork that restricts airflow can result in improper performance and compressor or heater failure. Ductwork is to be constructed in a manner that limits restrictions and maintains suitable air velocity. Ductwork is to be sealed to the unit in a manner that will prevent leakage.

### Return Ductwork

DO NOT TERMINATE THE RETURN DUCTWORK IN AN AREA THAT CAN INTRODUCE TOXIC, OR OBJECTIONABLE FUMES/ODORS INTO THE DUCTWORK. The return ductwork is to be introduced into the air handler bottom (upflow configuration).

### Return Air Filters

Each installation must include a return air filter. This filtering may be performed at the air handler or externally such as a return air filter grille. Air handlers mounted in the downflow orientation, including "B" series, require external filtering. A washable filter is available as an accessory. To ensure optimum performance frequent filter cleaning is advised. Refer to **Table 1** for the appropriate filter.

AEPF	Filter Number	Qty Required
N/A	FIL 18-32	1
1830	FIL 36-42	1
3036 3137 4260	FIL 48-61	1

**Table 1**

### Electric Heat

Refer to this manual in combination with the instructions provided with the heat kit for the correct installation procedure. The air handlers listed in this manual do not have factory installed electric heat. Electric heat is available as an accessory. If installing this option, the **ONLY** heat kits that can be used are the HKR series.

**NOTE:** The Amana® brand EHK, ECB, EDB, and EDK kits are **NOT** approved for use with these air handlers.

The heating mode temperature rise is dependent upon the system airflow, the supply voltage, and the heat kit size (kW) selected. Use **Tables 2, 3, and 4** to determine the temperature rise (°F).

CFM	HEAT KIT NOMINAL kW							
	3	5	6	8	10	15	20	21
600	18	28	35	41				
800	13	21	26	31	42			
1000	11	17	21	25	34	50		
1200	9	14	18	21	28	42	56	62
1400	8	12	15	18	24	36	48	53
1600	7	10	13	15	21	31	42	46
1800	6	9	12	14	19	28	37	41
2000	5	8	11	12	17	25	34	37

Table 2

230/1/60 Supply Voltage - Temperature Rise Table °F

CFM	HEAT KIT NOMINAL kW							
	3	5	6	8	10	15	20	21
600	17	27	34	39				
800	13	20	25	30	40			
1000	10	16	20	24	32	48		
1200	8	13	17	20	27	40	53	59
1400	7	11	14	17	23	34	46	51
1600	6	10	13	15	20	30	40	44
1800	6	9	11	13	18	27	36	39
2000	5	8	10	12	16	24	32	35

Table 3

220/1/60 Supply Voltage - Temperature Rise Table °F

CFM	HEAT KIT NOMINAL kW							
	3	5	6	8	10	15	20	21
600	16	25	32	37				
800	12	19	24	38	38			
1000	10	15	19	22	30	46		
1200	8	13	16	19	25	38	51	56
1400	7	11	14	16	22	33	43	48
1600	6	9	12	14	19	28	38	42
1800	5	8	11	12	17	25	34	37
2000	5	8	10	11	15	23	30	34

Table 4

208/1/60 Supply Voltage - Temperature Rise Table °F

**NOTE:** For installations not indicated above the following formula is to be used:

$$TR = (kW \times 3412) \times (\text{Voltage Correction}) \times 1.08 / CFM$$

Where: TR = Temperature Rise

kW = Heater Kit Actual kW

3412 = Btu per kW

Voltage Correction = .96 (230 Supply Volts)

= .92 (220 Supply Volts)

= .87 (208 Supply Volts)

1.08 = Constant

CFM = Measured Airflow

**NOTE:** The Temperature Rise Tables can also be used to determine the air handler airflow delivery. When using these tables for this purpose set the room thermostat to maximum heat and allow the system to reach steady state conditions. Insert two thermometers, one in the return air and one in the supply air. The temperature rise is the supply air temperature minus the room air temperature.

Use HKR specification sheets to determine the HKR available for a given air handler.

### HKR Installation

Follow instructions listed in Installation and Operating Instructions shipped with the heat kit.

### Electrical Supply Wire and MOP



#### CAUTION

##### FIRE HAZARD!

To avoid the risk of property damage, personal injury or fire, use only copper conductors.



#### WARNING

##### HIGH VOLTAGE!

Disconnect ALL power before servicing.

Multiple power sources may be present.

Failure to do so may cause property damage, personal injury or death.



#### WARNING

##### HIGH VOLTAGE!

To avoid property damage, personal injury or death due to electrical shock, this unit **MUST** have an uninterrupted, unbroken electrical ground. The electrical ground circuit may consist of an appropriately sized electrical wire connecting the ground lug in the unit control box to the building electrical service panel.

Other methods of grounding are permitted if performed in accordance with the National Electric Code (NEC)/American National Standards Institute (ANSI)/National Fire Protection Association (NFPA) 70 and local/state codes. In Canada, electrical grounding is to be in accordance with the Canadian Electric Code (CSA) C22.1.

### Building Electrical Service Inspection

This unit is designed for single-phase electrical supply. **DO NOT OPERATE ON A THREE-PHASE POWER SUPPLY.** Measure the power supply to the unit. The supply voltage **must** be in agreement with the unit nameplate power requirements and within the range shown in **Table 5**.

Nominal Input	Minimum Voltage	Maximum Voltage
208/240	187	253

Table 5

### Wire Sizing

Wire size is important to the operation of your equipment. Use the following check list when selecting the appropriate wire size for your unit.

- **Wire size must carry the Minimum Circuit Ampacity (MCA).**
- Refer to the NEC (USA) or CSA (Canada) for wire sizing. The unit MCA for the air handler and the optional electric heat kit can be found on the unit Series and Rating Plate.
- **Wire size allows for no more than a 2% voltage drop from the building breaker/fuse panel to the unit.**

Refer to the latest edition of the National Electric Code or in Canada the Canadian Electric Code when determining the correct wire size. The following table shows the current carrying capabilities for copper conductors rated at 75°C with a 2% voltage drop. Use **Table 6** to determine the voltage drop per foot of various conductors.

Maximum Allowable Length in Feet to Limit Voltage Drop to 2%*								
Wire Size (AWG)	Minimum Circuit Ampacity (MCA)							
	10	15	20	25	30	35	40	45
14	75	50	37	NR	NR	NR	NR	NR
12	118	79	59	47	NR	NR	NR	NR
10	188	125	95	75	63	54	NR	NR
8	301	201	150	120	100	86	75	68
6	471	314	235	188	157	134	118	110

\*Based on NEC 1996

Table 6

### Maximum Overcurrent Protection (MOP)

Every installation must include an NEC (USA) or CEC (Canada) approved overcurrent protection device. Also, check with local or state codes for any special regional requirements.

Protection can be in the form of fusing or HACR style circuit breakers. The Series and Rating Plate can be used as a guide for selecting the MAXIMUM overcurrent device.

**NOTE: Fuses or circuit breakers are to be sized larger than the equipment MCA but not to exceed the MOP.**

### Electrical Connections – Supply Voltage

#### USE COPPER CONDUCTORS ONLY.

A knockout is provided on the air handler top panel or side to allow for the entry of the supply voltage conductors. If the knockouts on the cabinet sides are used for electrical conduit, an adapter ring must be used in order to meet UL1995 safety requirements. An NEC or CEC approved strain relief is to be used at this entry point. The wire is to be sized in accordance with the “Electrical Wire and MOP” section of this manual. Some areas require the supply wire to be enclosed in conduit. Consult your local codes.

### Air Handler Only (Non-Heat Kit Models)

The building supply connects to the stripped black and red wires contained in the air handler electrical compartment cav-

ity. A ground screw is also contained in this area. Attach the supply wires to the air handler conductors as shown in the unit wiring diagram using appropriately sized solderless connectors or other NEC or CEC approved means.

### Air Handler With Non-Circuit Breaker Heat Kits

A terminal block is provided with the HKR kit to attach the power supply and air handler connections. Follow the HKR Installation Manual and wiring diagram for complete wiring details.

### Air Handler With Heat Kits Containing a Circuit Breaker

HKR models with a “C” suffix contain a circuit breaker(s). The air handler has a plastic cover on the access panel that will require either one or both sections to be removed to allow the heat kit circuit breaker(s) to be installed. See the HKR Installation Instructions for further details. The air handler wires and supply wires are installed directly onto the HKR circuit breaker(s) as shown in the HKR Installation Manual and wiring diagram.

### Low Voltage Connections

Several combinations of low voltage schemes are available, depending on the presence of a heat kit and whether the heat kit is single-stage or multi-staging. The low voltage connections are determined by whether the outdoor unit is a condenser or heat pump. The 24V-control voltage connects the air handler to the room thermostat and condenser. Low voltage wiring is to be copper conductors. A minimum of 18AWG must be used for installations up to 50’ and 16AWG for installations over 50’. Low voltage wiring can be connected through the top of the cabinet or either side. See the “Thermostat Wiring” section of this manual for typical low voltage wiring connections.

### Refrigerant Lines

#### WARNING

This product is factory-shipped under pressure. Follow these instructions to prevent injury.

#### WARNING

A quenching cloth is strongly recommended to prevent scorching or marring of the equipment finish when welding close to the painted surfaces. Use brazing alloy of 5% minimum silver content.

### Tube Preparation

All cut ends are to be round, burr free, and clean. Failure to follow this practice increases the chances for refrigerant leaks. The suction line is spun closed and requires pipe cutters to remove the closed end.

### Post Brazing

Quench all welded joints with water or a wet rag.

### Piping Size

For the correct tubing size, follow the specification for the condenser/heat pump.

### Special Instructions

This coil comes equipped with a check style flowrator for refrigerant management. For most installations with matching applications, no change to the flowrator piston is required. However, in mix-matched applications, a flowrator piston change may be required. See the Goodman® piston kit chart or consult your local distributor for details regarding mix-matched piston sizing. If the mix-match application requires a different piston size, change the piston in the flowrator on the indoor coil before installing the coil and follow the procedure shown below.

**IMPORTANT NOTE:** Torch heat required to braze tubes of various sizes is proportional to the size of the tube. Tubes of smaller size require less heat to bring the tube to brazing temperature before adding brazing alloy. Applying too much heat to any tube can melt the tube. Service personnel must use the appropriate heat level for the size of the tube being brazed.

**NOTE:** The use of a heat shield when brazing is recommended to avoid burning the serial plate or the finish on the unit. Heat trap or wet rags should be used to protect heat sensitive components such as service valves and TXV valves.

1. Loosen the 13/16 nut **1 TURN ONLY** to allow high pressure tracer gas to escape. No gas indicates a possible leak.
2. After the gas has escaped, remove the nut and discard the black or brass cap.
3. Remove the check piston to verify it is correct and then replace the piston. See piston kit chart in instructions.
4. Use a tube cutter to remove the spin closure on the suction line.
5. Remove the tailpiece clamped to the exterior and **slide the 13/16 nut into place.**
6. Braze tailpiece to the line set liquid tube.

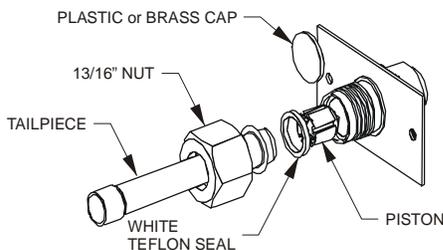


Figure 1

7. Insert the suction line into the connection, slide the insulation and the rubber grommet at least 18" away from the braze joint. Braze suction line.
8. **AFTER THE TAILPIECE HAS COOLED**, confirm position of the white Teflon® seal and hand tighten the 13/16" nut.
9. Torque the 13/16" nut to 7-25 ft-lbs. or tighten 1/6 turn.

### CAUTION

Excessive torque can cause orifices to stick. Use the proper torque settings when tightening orifices.

10. Replace suction line grommet and insulation.

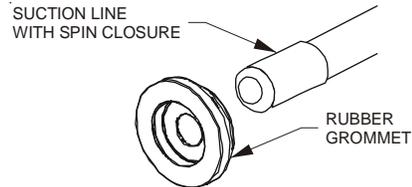


Figure 2

### Downflow Conversion


Conversion to downflow **MUST** be performed in an area that allows access to all sides prior to placing the air handler in its final location. To prevent the evaporator coil pan from "sweating" the DPI accessory insulation kit is to be used when performing this conversion. **NOTE:** The DPI kit is not supplied with this product and is to be purchased separately. See **Table 7** for the correct DPI kit.

AEPF Model	Insulation Kit
N/A	DPI18-30/20
1830	DPI36-42/20
3036	DPI48-61/-20
3137	
4260	

Table 7

Refer to **Figures 3 through 5** for the location of the components referenced in the following steps. **Figure 3** illustrates the new installation location for the removed components.


1. Before inverting the air handler, remove all access panels, the coil rear channel bracket, and the filter close-off panel.
2. Remove the evaporator coil and the horizontal drain pan. Discard horizontal drain pan.
3. Install the provided plastic plug into the vacated access panel.
4. Remove the two (2) zee coil support brackets and insulation retaining brackets.
5. Remove the tie bracket.
6. Install the DPI Insulation Kit onto the bottom of the drain pan.

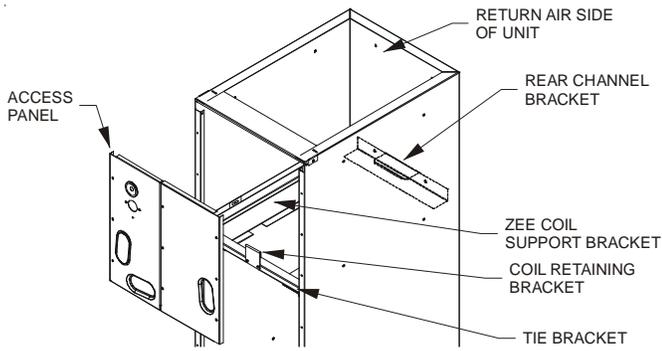

**NOTE: The filter provision is not applicable in THIS downflow application.**


**Figure 3**

7. Install the zee coil supports and the wrapper stiffeners.
8. Install the tie bracket.
9. Install the rear channel bracket.
10. To prevent possible condensate “blow off” the insulation retainers are to be laid into the evaporator coil pan as shown in **Figure 4**.

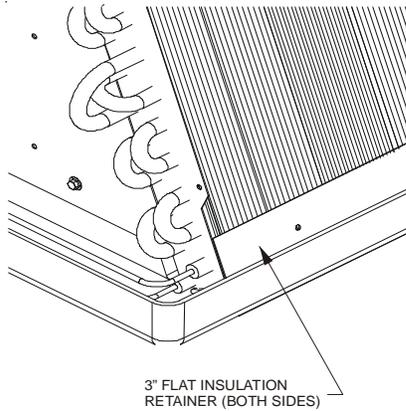

**Figure 4**

To complete the conversion, slide the evaporator coil into the chassis and attach the three (3) access panels. (**Figure 5**).

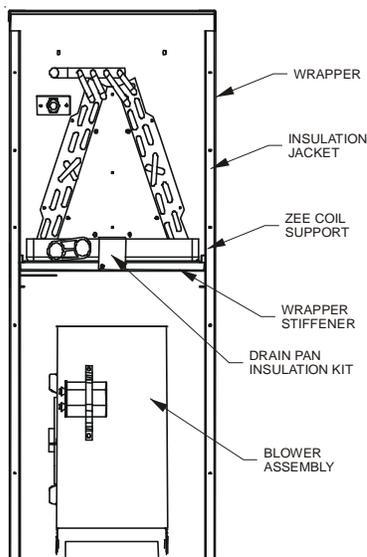

**Figure 5**

**NOTE:** When converted to downflow position the coil may protrude above the cabinet on some models.


### Horizontal Conversion

Dedicated Downflow models are not suitable for horizontal application and must not be used for this type of installation. The only field modification required for conversion to “Horizontal Right-Hand” is the removal of the plastic knockouts in the horizontal panel drain connections. To prevent the horizontal drain pan from sweating in high humidity applications, it is recommended that a DPIH insulation accessory kit be used. **NOTE:** The DPIH insulation kit is not supplied with this product and should be purchased separately. See **Table 8** for the correct DPIH kit.

AEPF Model	Insulation Kit
N/A	DPIH18-32
1830	DPIH36-42
3036	DPIH48-61
3137	
4260	

**Table 8**

The following describes converting to “Horizontal Left-Hand”. Conversion to downflow **MUST** be performed in an area that allows access to all sides prior to placing the air handler in its final location (**See Figure 6**).

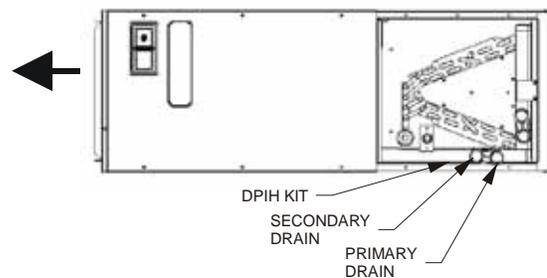

**Figure 6**

1. Remove the (3) air handler access panels.
2. Remove the “J” shaped bracket that retains the evaporator coil.
3. Remove the flowrator from the lower left side access panel and slide out the evaporator coil and horizontal drain pan.
4. Remove the gasket from the horizontal pan drain connections.
5. Remove the oval shaped plastic plug from the left side access panel. Remove the oval shaped rubber gasket seal from the lower right side access panel.

- The drain connections for the horizontal pan are sealed with a thin coating of plastic. Carefully knock out this plastic seal with a screwdriver and hammer. **Note: The upper drain will become the secondary drain which is mandatory in many municipalities .**
- Install the plastic plug removed in step 5 to the right side lower access panel and the oval shaped rubber gasket to the lower left access panel.
- Reinstall the evaporator coil with the horizontal panel on the left side. Note: Push the assembly completely to the rear to ensure the engagement of the upflow pan with the rear channel bracket.
- Install the "J" bracket (removed in step 2) to support the upflow pan to the tie channel.
- Attach all panels and the metering device.

A Secondary Condensate Drain Connection has been provided for areas where the building codes require it. Pitch the drain line 1/4" per foot to provide free drainage. Insulate drain lines located inside the building to prevent sweating. Install a condensate trap to ensure proper drainage. If the secondary drain line is required, run the line separately from the primary drain and end it where it can be easily seen.

**NOTE:** Water coming from this line means the coil primary drain is plugged and needs clearing.

**CAUTION**

**If secondary drain is not installed, the secondary access must be plugged.**

The installation must include a "P" style trap that is located as close as is practical to the evaporator coil. See **Figure 7** for details of a typical condensate line "P" trap.


**NOTE:** Trapped lines are required by many local codes. In the absence of any prevailing local codes, please refer to the requirements listed in the Uniform Mechanical Building Code.

A drain trap in a **draw-through** application prevents air from being drawn back through the drain line during fan operation thus preventing condensate from draining, and if connected to a sewer line to prevent sewer gases from being drawn into the airstream during blower operation.

Field experience has shown condensate drain traps with an open vertical Tee between the air handler and the condensate drain trap can improve condensate drainage in some applications, but may cause excessive air discharge out of the open Tee. Goodman® does not prohibit this type of drain but we also do not recommend it due to the resulting air leakage. Regardless of the condensate drain design used, it is the installer's responsibility to ensure the condensate drain system is of sufficient design to ensure proper condensate removal from the coil drain pan.

### AEPF MOTOR ORIENTATION

If the unit is in the upflow position, there is no need to rotate the motor. If the unit is in the downflow position, loosen motor mount and rotate motor as shown in **Figure 7**. Be sure motor is oriented with the female connections on the casing down. If the motor is not oriented with the connections down, water will collect in the motor and may cause premature failure.

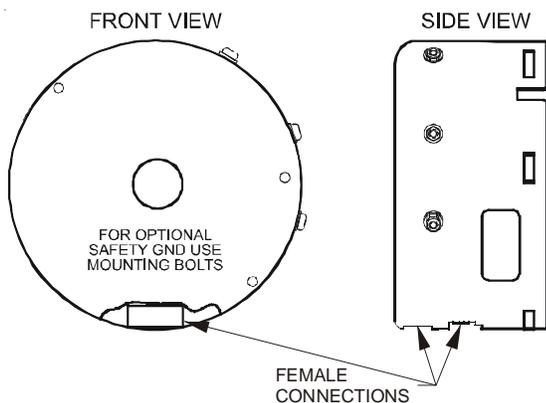


**Figure 7**  
**(AEPF Motor Orientation)**

### Condensate Removal

The coil drain pan has a primary and a secondary drain with 3/4" NPT female connections. The connectors required are 3/4" NPT male, either PVC or metal pipe, and should be hand tightened to a torque of approximately 37 in-lbs. to prevent damage to the drain pan connection. An insertion depth between .355 to .485 inches (3-5 turns) should be expected at this torque. Use the female (3/4 NPT) threaded fitting that protrudes outside of the enclosure for external connections.

- Ensure drain pan hole is NOT obstructed.
- To prevent potential sweating and dripping on to finished space, it may be necessary to insulate the condensate drain line located inside the building. Use Armaflex® or similar material.

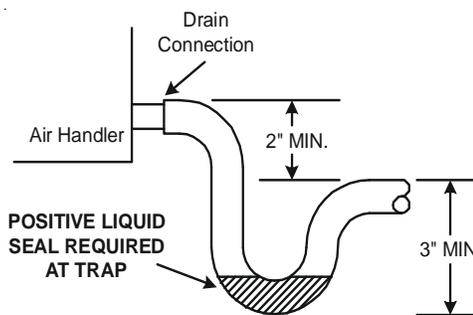

**Figure 8**

Use of a condensate removal pump is permitted when necessary. This condensate pump should have provisions for shutting off the control voltage should a blocked drain occur. A trap must be installed between the unit and the condensate pump.

**IMPORTANT NOTE:** The evaporator coil is coated with oils that may dissolve styrofoam and certain types of plastics. Therefore, a removal pump or float switch must not contain any of these materials.

**Tip:** Priming the “P” trap may avoid improper draining at the initial installation and at the beginning of the cooling season. When coils are installed above ceilings, or in other locations where damage from condensate overflow may occur, it is **MANDATORY** to install a field fabricated auxiliary drain pan under the coil cabinet enclosure. Drain lines from the auxiliary pan must be installed and terminated so that the homeowner can see water discharges.

### ACHIEVING 2% LOW LEAKAGE RATE

Ensure that the Neoprene gasket with PSA remains intact on all surfaces that the access panels are secured to. These surfaces are the entire length of the wrapper and areas between the upper tie plate, upper and lower access panels. Be sure that upper access panel breaker insert gasket is intact and also flowrator gasket is installed on the lower access panel. An additional drain hole cover is required.

### AEPF Motor

This section references the operation characteristics of the AEPF model motor only. The ECM control board is factory set with dipswitch #4 in the “ON” position and all other dipswitches in the “OFF” position. **For most applications this setting is to be changed according to the electric heat size and the outdoor unit selection.**

The AEPF product uses a General Electric ECM™ motor. This motor provides many features not available on the traditional PSC motor. These features include:

- Improved Efficiency
- Constant CFM
- Soft Start and Stop
- Improved Humidity Control

### Motor Speed Adjustment

Each ECM™ blower motor has been preprogrammed for operation at 4 distinct airflow levels when operating in Cooling, H.P. Heating, Backup Heating (Electric Heating), and Backup + H.P. Heating. Each mode has 4 levels to deliver different Air Flow CFM [L/s]. The adjustment is performed by changing the dipswitch(es) either to an “OFF” or “ON” position.

### Dipswitch Functions

The AEPF air handler motor has an electronic control that contains an eight (8) position dip switch. The function of these dipswitches are shown in **Table 9**.

Dipswitch Number	Function
1	Electric Heat
2	
3	N/A
4	Indoor Thermostat
5	Cooling & Heat Pump CFM
6	
7	CFM Trim Adjust
8	

Table 9

### CFM Delivery

**Tables 10-Electric Heat and 11-Cooling/Heat Pump** show the CFM output for dipswitch combinations 1-2, and 5-6.

Model	Switch		Switch		Emergency (Electric) Heat	Heat Pump w/Backup Heat
	1	2	7	8		
AEPF1830	OFF	OFF	OFF	OFF	1100	1210
	ON	OFF	OFF	OFF	890	935
	OFF	ON	OFF	OFF	700	770
AEPF3036	OFF	OFF	OFF	OFF	2050	2150
	ON	OFF	OFF	OFF	1750	1835
AEPF3137	OFF	ON	OFF	OFF	1600	1680
AEPF4260	ON	ON	OFF	OFF	1200	1260
	ON	ON	OFF	ON	1020	1070

Table 10

Model	Switch		Switch		Nominal Cooling Tonnage	CFM
	5	6	7	8		
AEPF1830	OFF	OFF	OFF	OFF	2 ½	1100
	ON	OFF	OFF	OFF	2	800
	OFF	ON	OFF	OFF	1 ½	600
AEPF3036	OFF	OFF	OFF	OFF	5	1800
	ON	OFF	OFF	OFF	4	1580
AEPF3137	OFF	ON	OFF	OFF	3 ½	1480
AEPF4260	ON	ON	OFF	OFF	3	1200
	ON	ON	OFF	ON	2 ½	1020

Table 11

### Thermostat “Fan Only Mode”

During “Fan Only Mode” operation, the CFM output is 30% of the cooling setting.

### CFM Trim Adjust

Minor adjustments can be made through the dip switch combination of 7-8. The following **Table 12** shows the switch position for this feature.

CFM	Switch 7	Switch 8
+10%	ON	OFF
-15%	OFF	ON

Table 12

### Humidity Control

When using a Humidistat (normally closed), cut jumper PJ6 on the control board. The Humidistat will only affect cooling airflow by adjusting the Airflow to 85%.

### Two Stage Heating

When using staged electric heat, cut jumper PJ4 on the control board.

## Thermostats

**NOTE:** Second Stage heat can be accomplished by multi-stage heating thermostat or the addition of an outdoor thermostat as shown in **Figures 9 and 10**.

Goodman® part number CHT18-60 is a single-stage cool and single-stage heat thermostat.

Goodman® part number HPT18-60 is a single-stage cool, two-stage heat pump thermostat. The first stage is heat pump heating and the second stage is optional electric heat.

If additional features are desired, such as digital or programmable capabilities, these thermostats are commercially available. Follow the thermostat manufacturer's instruction for installation.

### Start-Up Procedure

- Prior to start-up, ensure that all electrical connections are properly sized and tightened.
- All panels must be in place and secured. For Air Tight application, neoprene gasket must be positioned at prescribed locations to achieve 2% leakage.
- Tubing must be leak free.
- Unit should be elevated, trapped and pitched to allow for drainage.
- Low voltage wiring is connected.
- Auxiliary drain is installed when necessary and pitched to allow for drainage.
- Drain pan and drain tubing has been leak checked.
- Return and supply ducts are sealed.
- Unit is elevated when installed in a garage or where flammable vapors may be present.
- Unit is protected from vehicular or other physical damage.
- Return air is not obtained from any areas where there may be objectionable odors, flammable vapors or products of combustion such as carbon monoxide (CO), which may cause serious personal injury or death.

### Regular Maintenance



#### WARNING

**HIGH VOLTAGE!**  
Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.



The only item to be maintained on a regular basis by the user is the circulating air filter(s). Filter should be cleaned or replaced regularly. A certified service technician must perform all other services.

**NOTE:** THESE INSTRUCTIONS ARE SPECIFICALLY FOR AEPF MODELS. DO **NOT** USE THESE DIAGRAMS FOR ANY OTHER MODELS. SEE SEPARATE INSTALLATION AND OPERATING INSTRUCTIONS FOR ATUF, ARUF, ARPT, ADPF, AND ASPF MODELS.

**NOTICE:** THIS PRODUCT CONTAINS ELECTRONIC COMPONENTS WHICH REQUIRE A DEFINITE GROUND. PROVISIONS ARE MADE FOR CONNECTION OF THE GROUND. A DEDICATED GROUND FROM THE MAIN POWER SUPPLY OR AN EARTH GROUND MUST BE PROVIDED.

### THERMOSTAT CONNECTIONS

The following composite wiring diagrams detail various configurations in which the AEPF air handlers can be used. Examples include single-stage cooling and heat pump with single or two-stage electric heating. All these configurations can be applied with convenient connections to outdoor thermostat applications.

The following sections will be detailed:

- Single-Stage Cooling (GMC Thermostat Part #CHT18-60 or equivalent.)
- Heat Pump (GMC Thermostat Part #18-60 or equivalent)

Each diagram details the connections between room thermostat and AEPF air handlers, and the connections between the AEPF air handlers and the Condensing Unit (or Heat Pump) with optional connections to Outdoor Thermostats. For each configuration, refer to the explanation of the proper jumper(s) to remove for the corresponding blower speed that will result in the programmed ECM™ motor.


**IMPORTANT: WHEN MATCHING THE AEPF AIR HANDLER TO A SINGLE SPEED COOLING UNIT OR HEAT PUMP REMEMBER TO CONNECT THE “Y” FROM THE THERMOSTAT TO THE “Y/Y2” CONNECTION ON THE VARIABLE SPEED BOARD (VSTB) OF THE AIR HANDLER. CONNECTING TO “Y1” WILL RESULT IN FIRST STAGE COOLING BLOWER SPEED AND MAY CAUSE THE CONTACTOR TO CHATTER.**

An equivalent thermostat can be used in place of the Goodman thermostat part number. The GMC thermostats listed are mercury type thermostats.

**WARNING** HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.


**SINGLE STAGE COOLING WITH SINGLE OR TWO-STAGE HEATING**

**FIGURE 9**

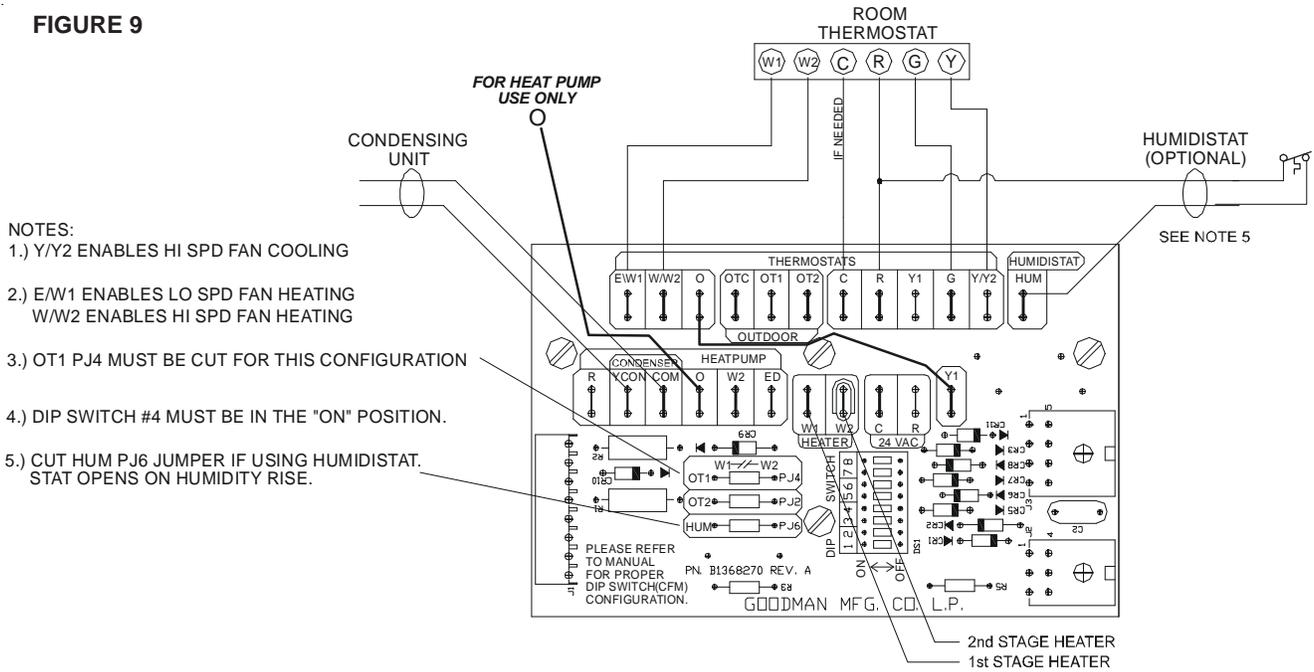

**COOLING ONLY - 2 STAGE HEAT THERMOSTAT**


**FIGURE 10**

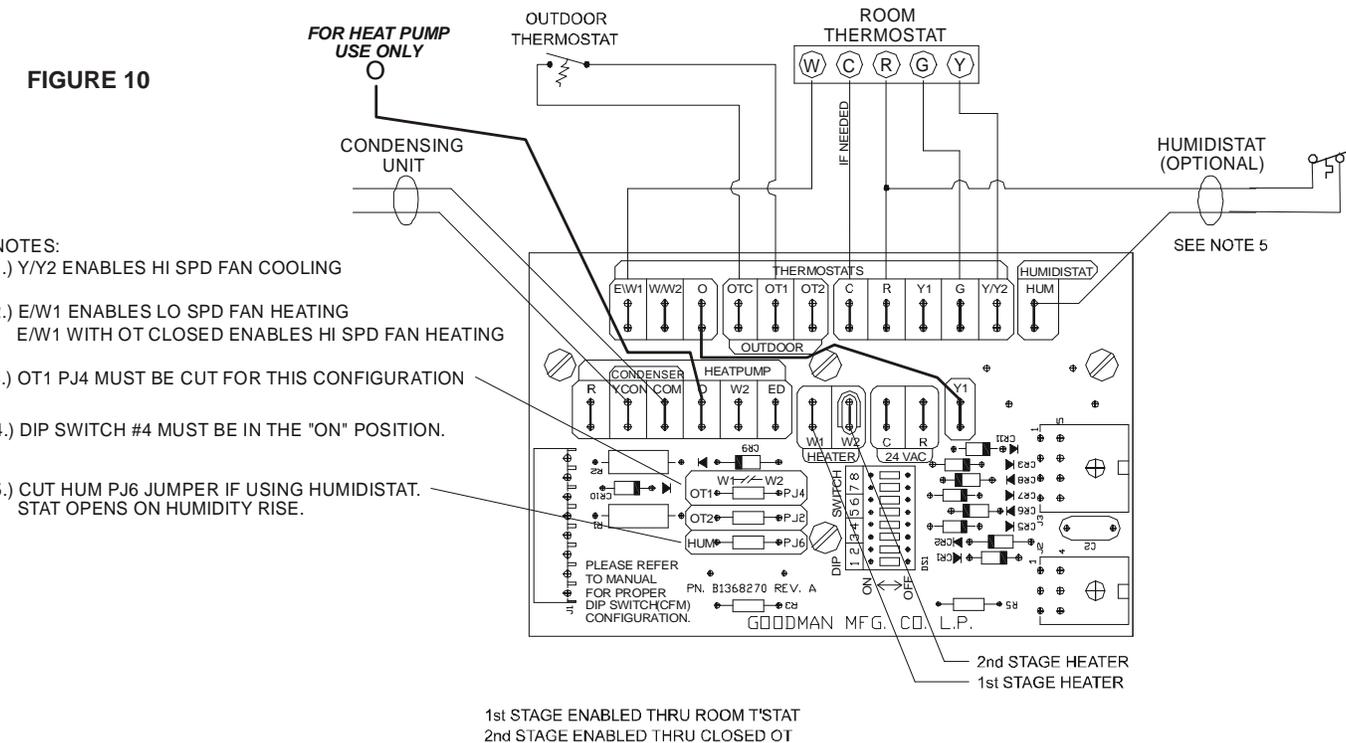

**COOLING ONLY - 2 STAGE HEAT (1st ROOM T'STAT & 2nd OT)**


Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

**WARNING** **HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING.** MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

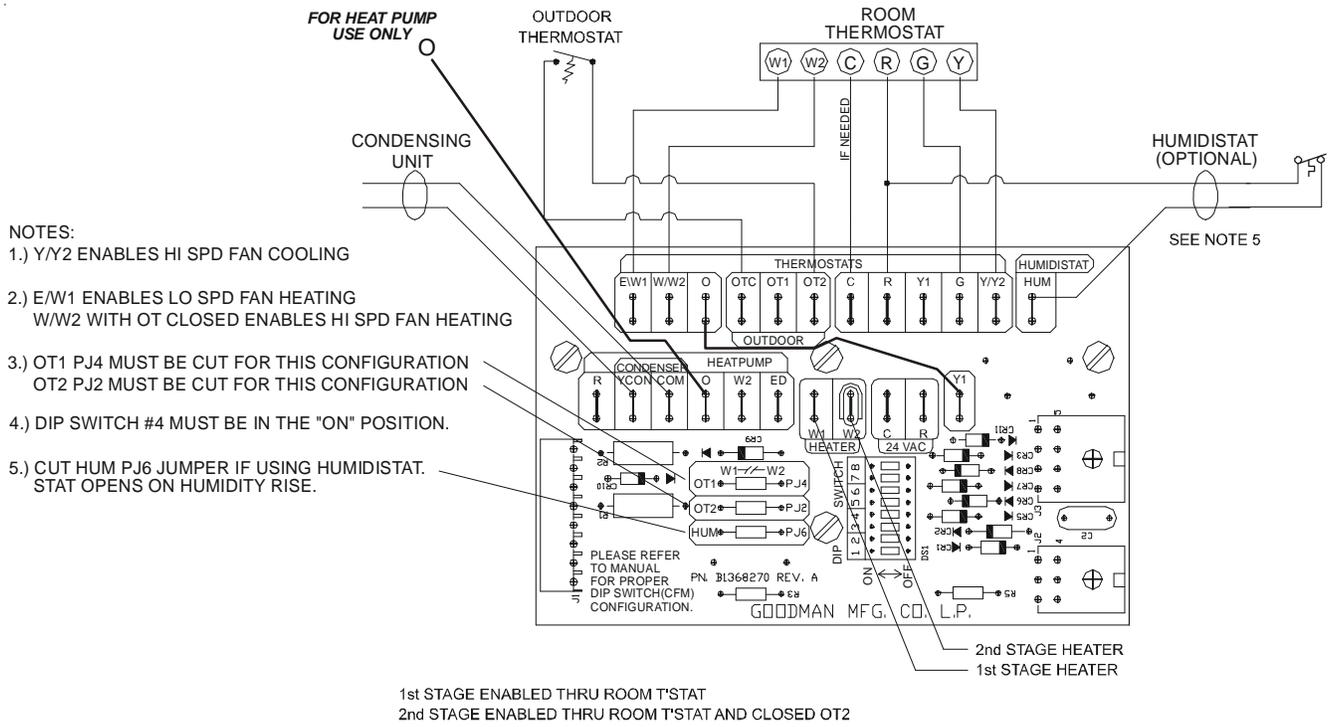

**COOLING ONLY - 2 STAGE HEAT (T'STAT ENABLED OT)**


**HEAT PUMP WITH SINGLE OR TWO-STAGE HEATING (OPTIONS FOR EMERGENCY HEAT)**

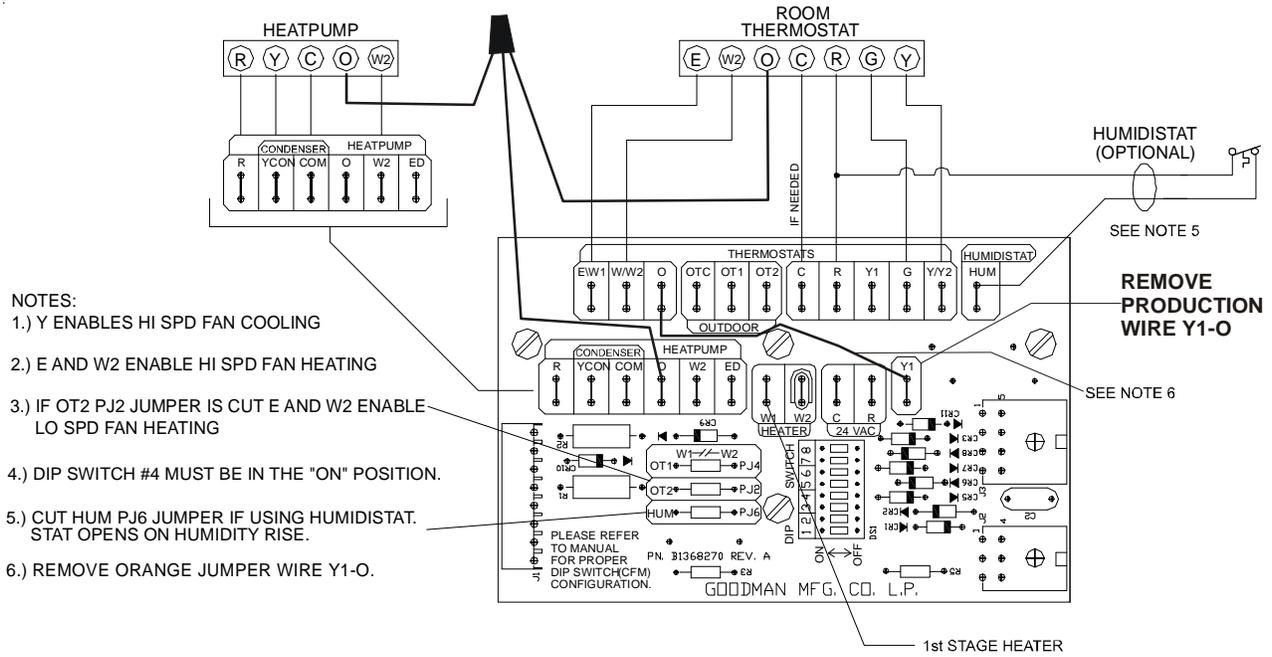


**HEATPUMP - WITH 1 STG EMHT 1 STG AUX HEAT**

Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

**WARNING** HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

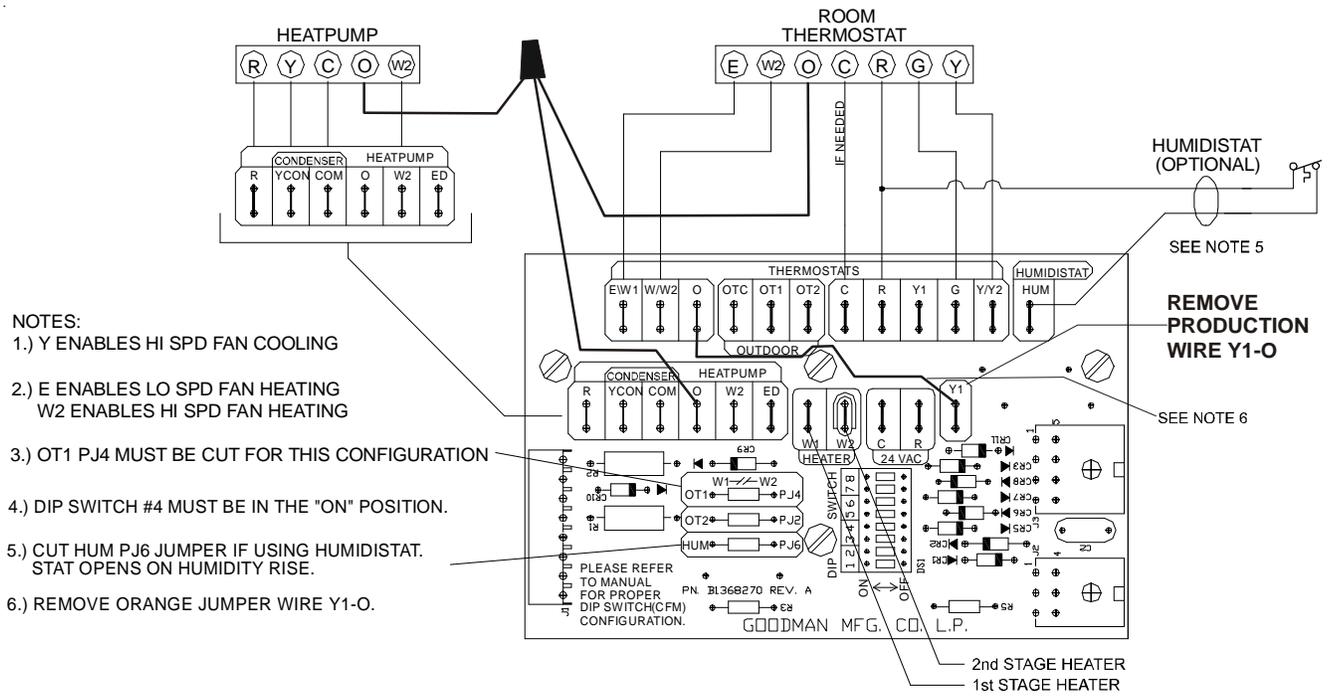


**HEATPUMP - 2 STG EMHT 1 STG AUX HEAT**

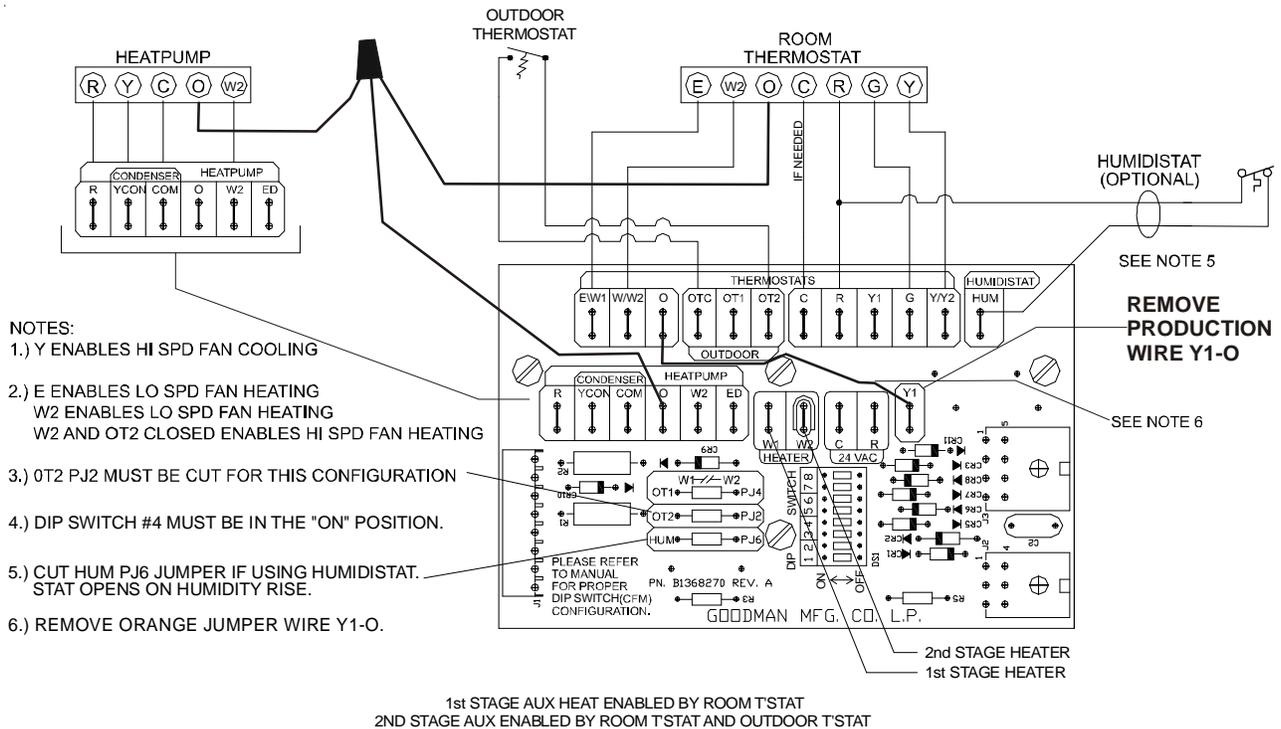

**HEATPUMP - 2 STG EMHT 2 STG AUX - 1 OUTDOOR T'STAT**


Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

**WARNING** HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

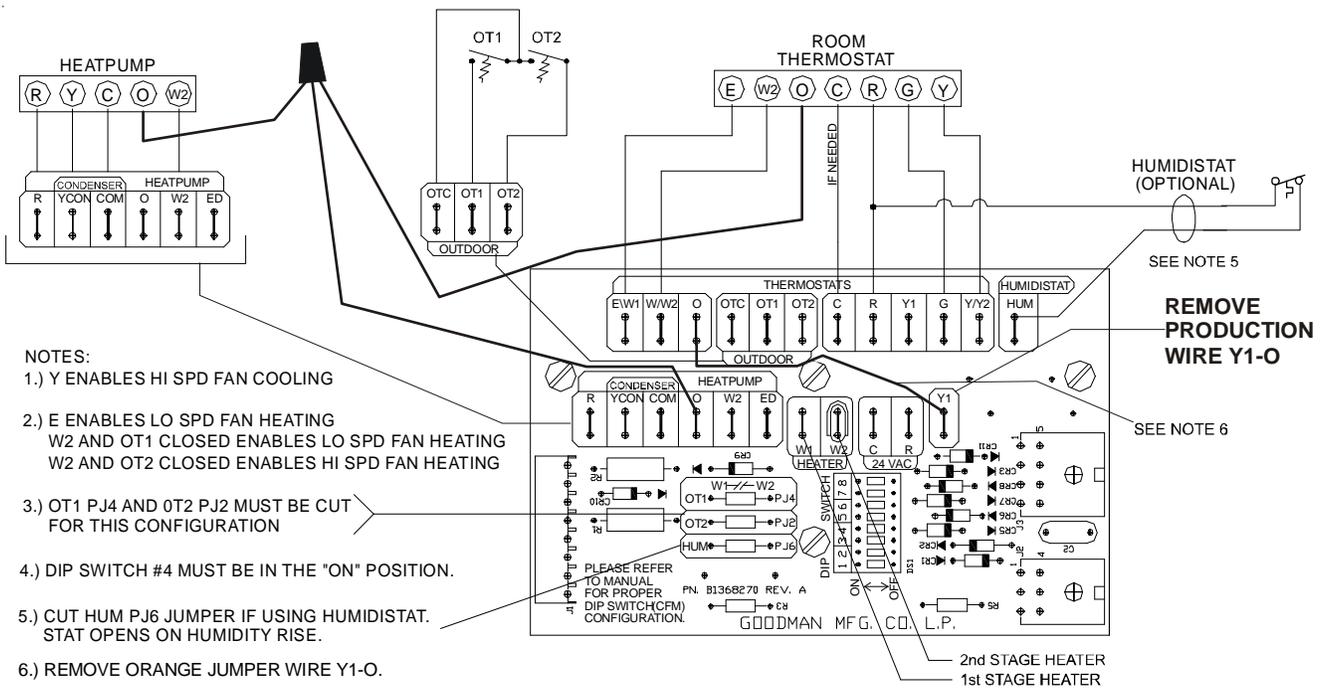

NO AUX HEAT IN HEATPUMP MODE UNTIL OUTDOOR T'STAT CLOSES

**HEATPUMP - 2 STG EMHT 2 STG AUX - 2 OUTDOOR T'STATS**

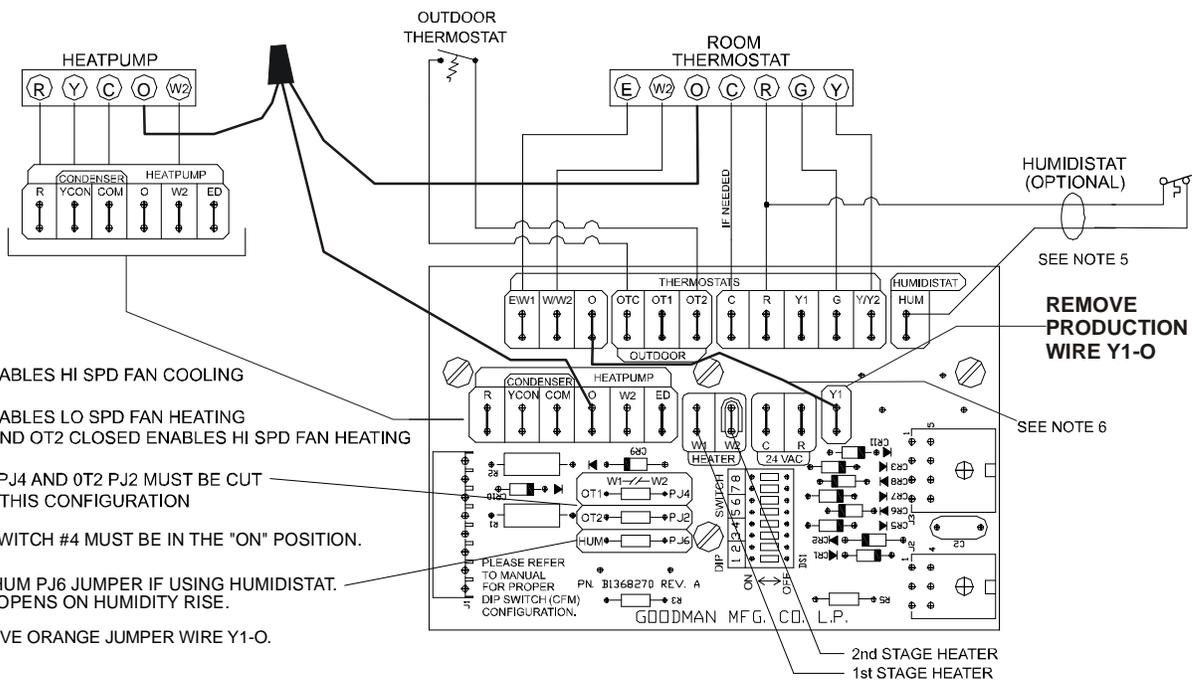


NO AUX HEAT IN HEATPUMP MODE UNTIL OUTDOOR T'STAT CLOSES

**HEATPUMP - 2 STG EMHT 1 STG AUX - 1 OUTDOOR T'STAT**


Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

**WARNING** HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

**2 SPEED HEAT PUMP WITH SINGLE OR TWO STAGE HEATING (OPTIONS FOR EMERGENCY HEAT) WITH CONVENTIONAL TWO STAGE THERMOSTAT**

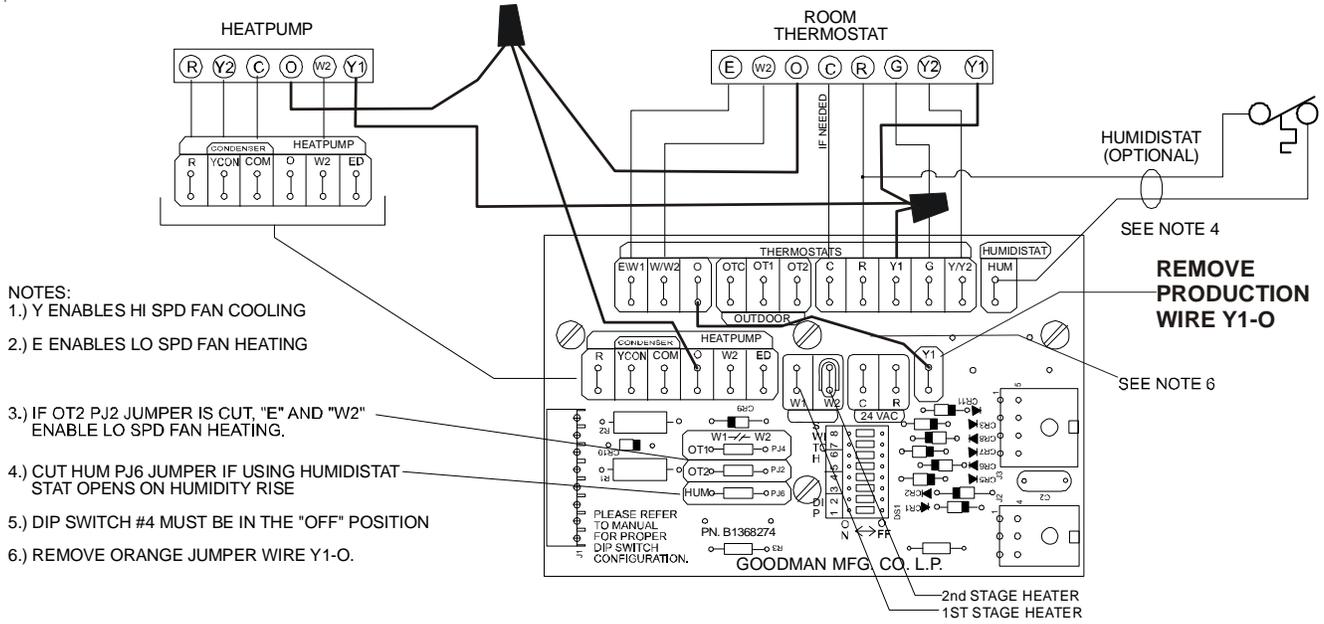


**HEATPUMP - WITH 1 STG EMHT 1 STG AUX HEAT**

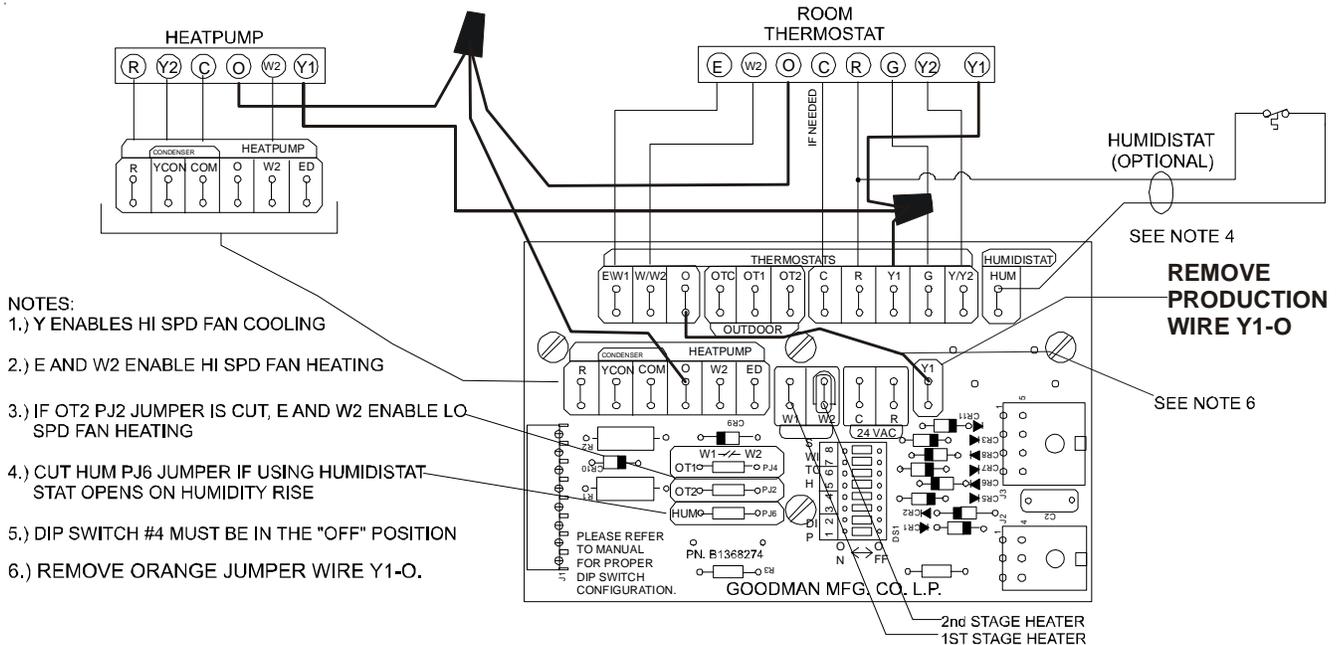


**HEATPUMP - WITH 1 STG EMHT 1 STG AUX HEAT**

Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

**WARNING** HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

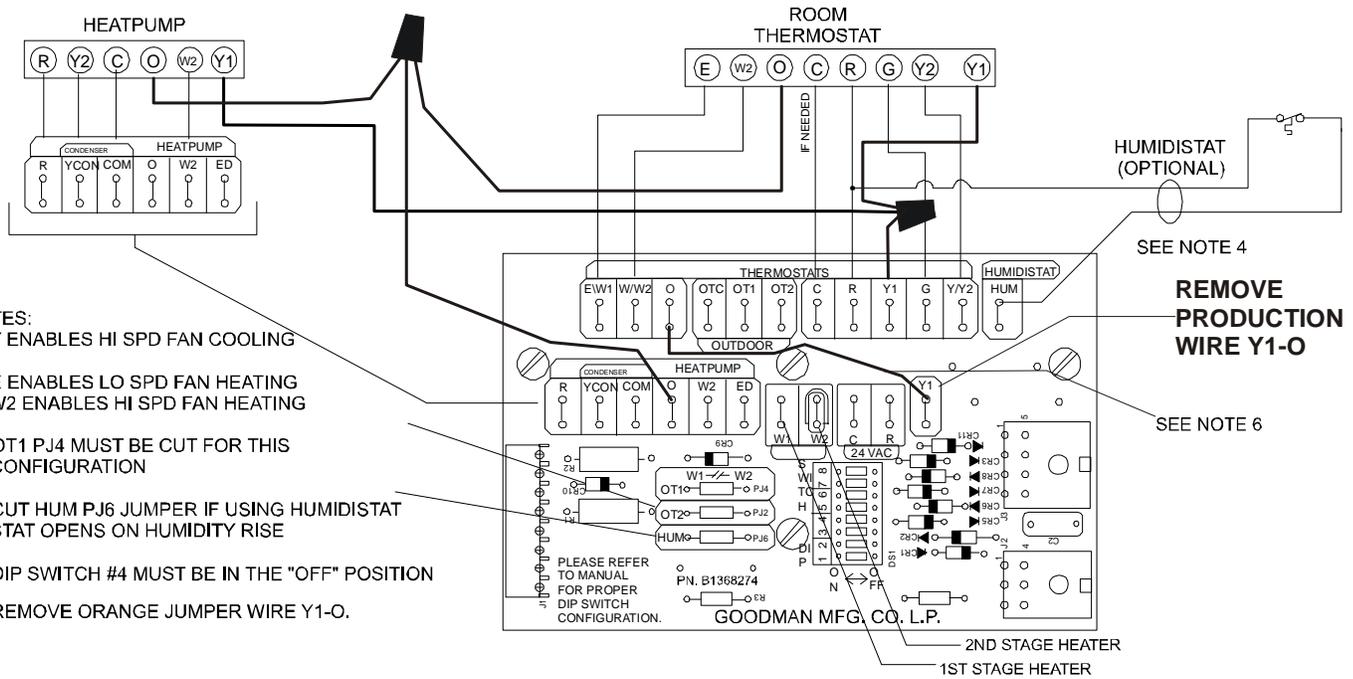

**HEATPUMP - 2 STG EMHT 1 STG AUX HEAT**

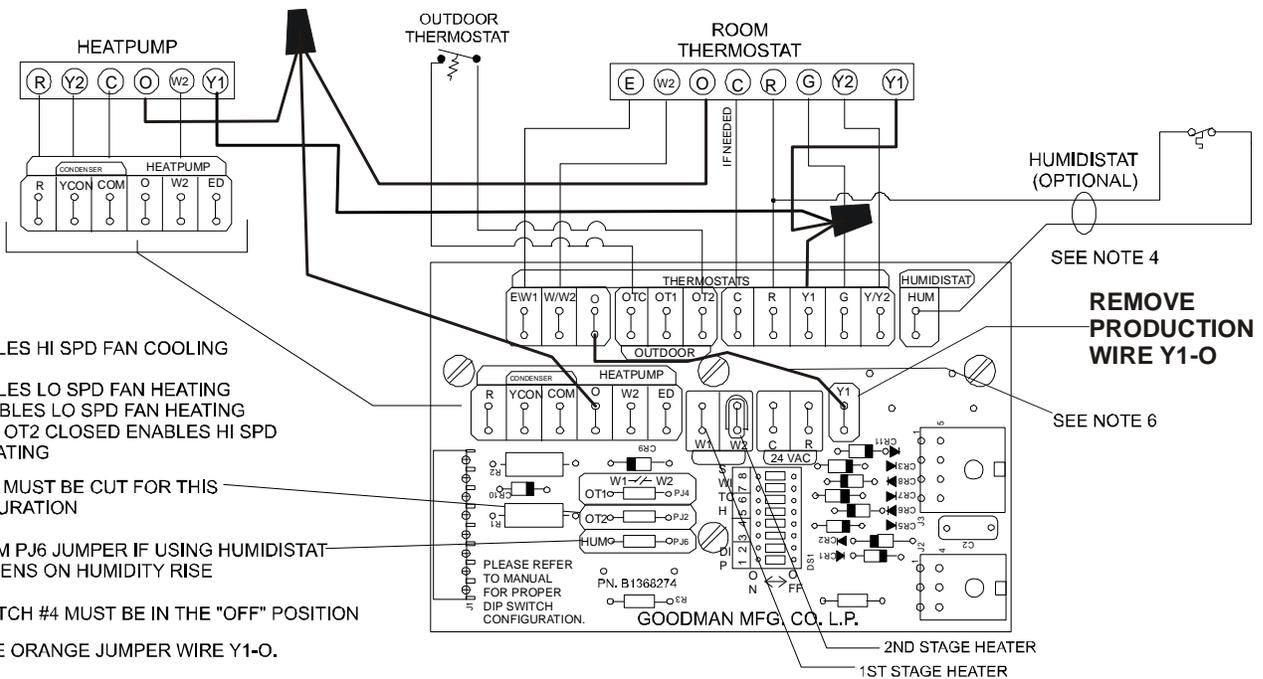


1ST STAGE AUX HEAT ENABLED BY ROOM T'STAT  
2ND STAGE AUX HEAT ENABLED BY ROOM T'STAT AND OUTDOOR T'STAT

**HEATPUMP - 2 STG EMHT 2 STG AUX - 1 OUTDOOR T'STAT**


Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

**WARNING** HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

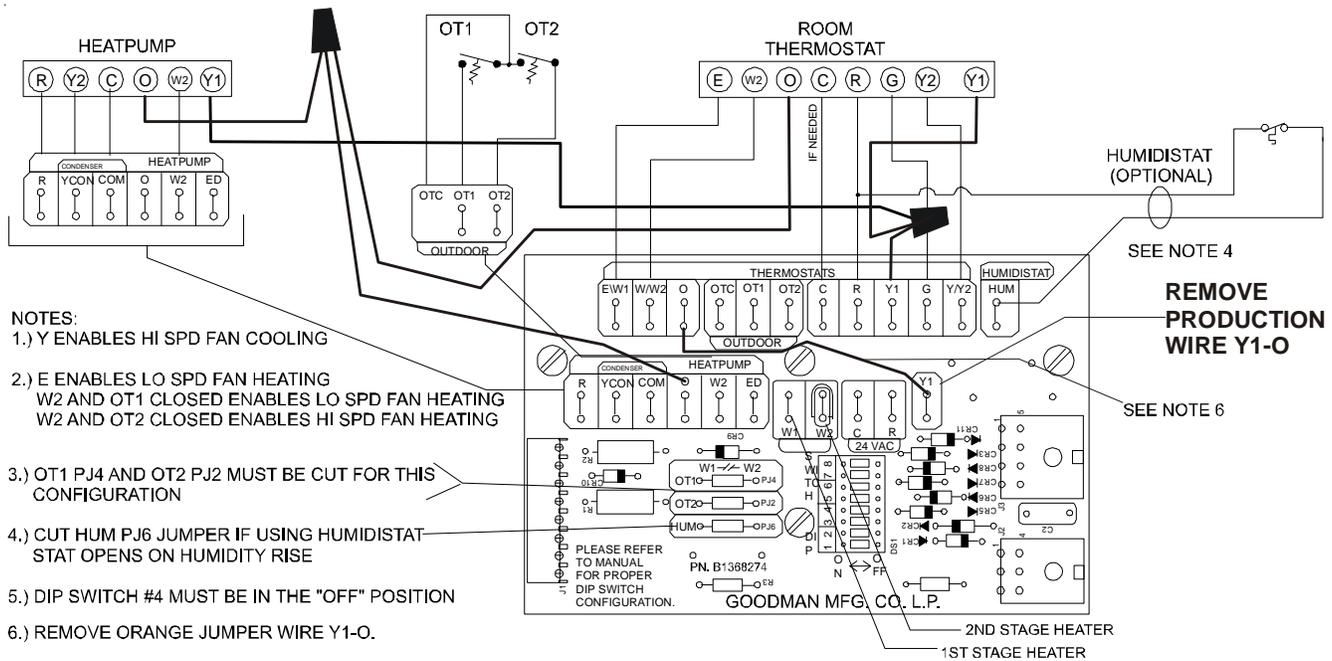

NO AUX HEAT IN HEATPUMP MODE UNTIL OUTDOOR T'STAT CLOSES

**HEATPUMP - 2 STG EMHT 2 STG AUX - 2 OUTDOOR T'STATS**

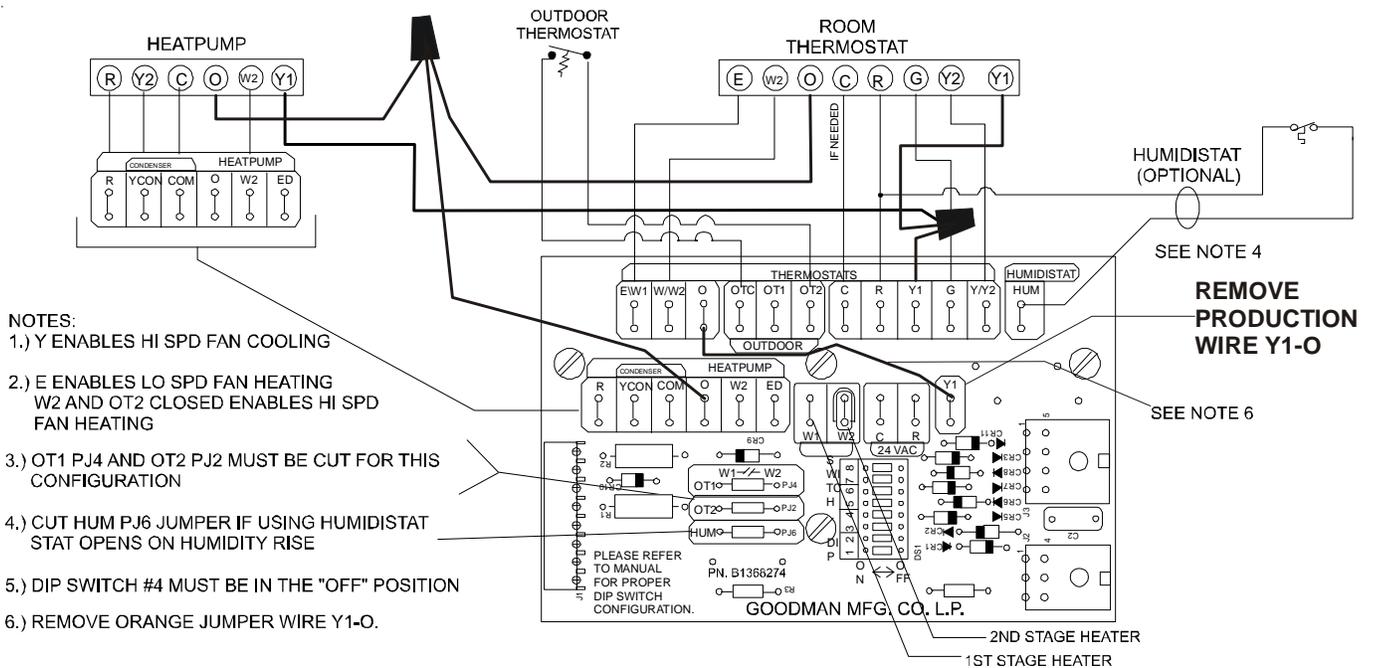


NO AUX HEAT IN HEATPUMP MODE UNTIL T'STAT CLOSES

**HEATPUMP - 2 STG EMHT 1 STG AUX - 1 OUTDOOR T'STAT**


Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

**WARNING** HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

**TWO-STAGE COOLING WITH CONVENTIONAL TWO-STAGE THERMOSTAT**

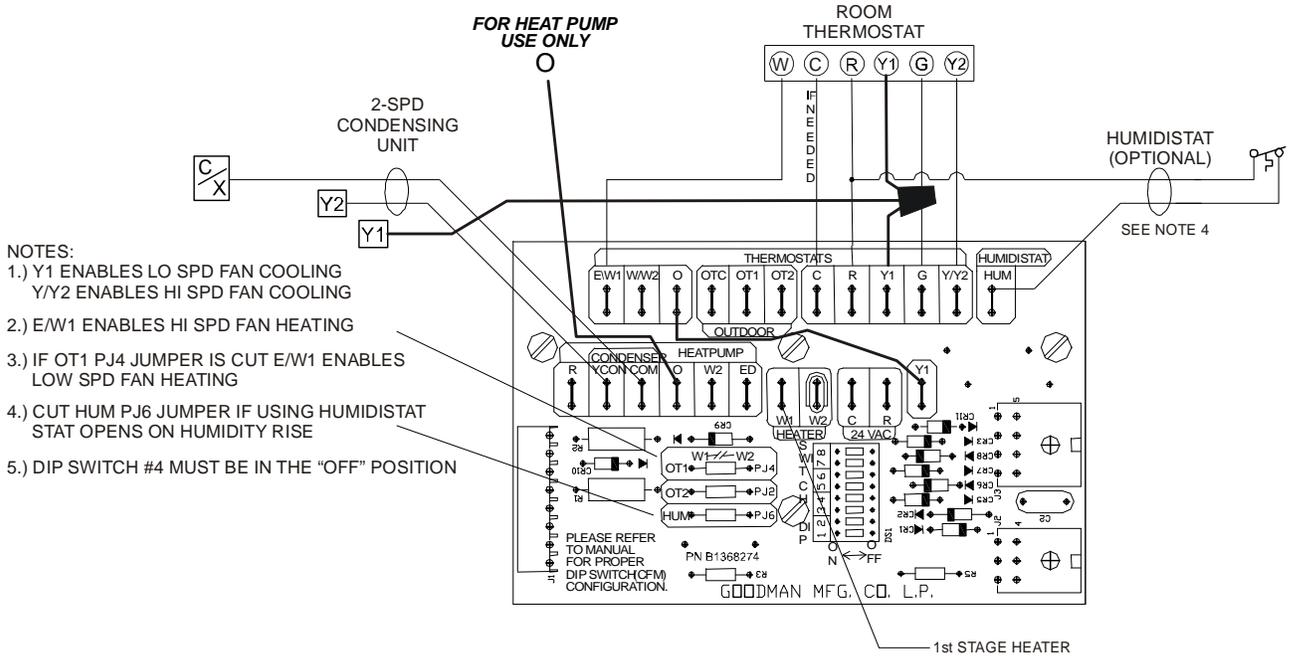


**2 SPD COOLING ONLY - WITH 1 STAGE ELECTRIC HEAT**

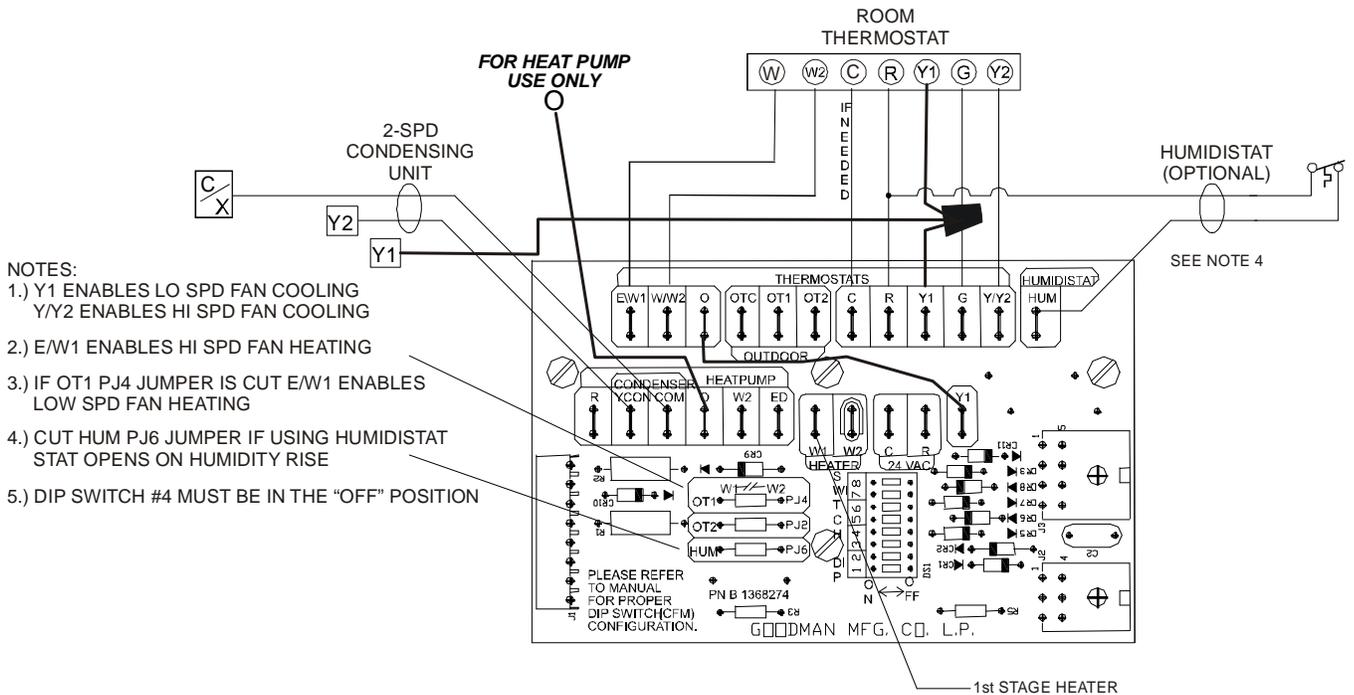


**2 SPD COOLING ONLY - WITH 2 STAGE HEAT THERMOSTAT**

Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

**WARNING** HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

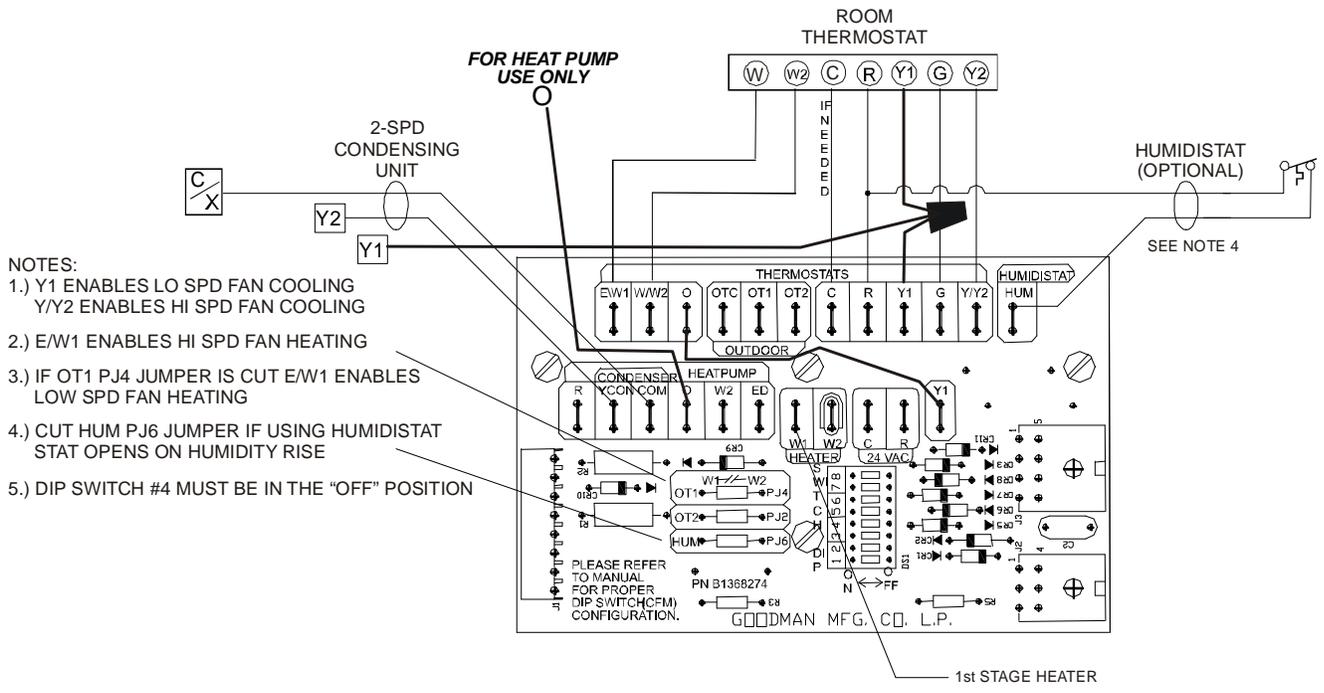

**2 SPD COOLING ONLY WITH 2 STAGE HEAT THERMOSTAT**

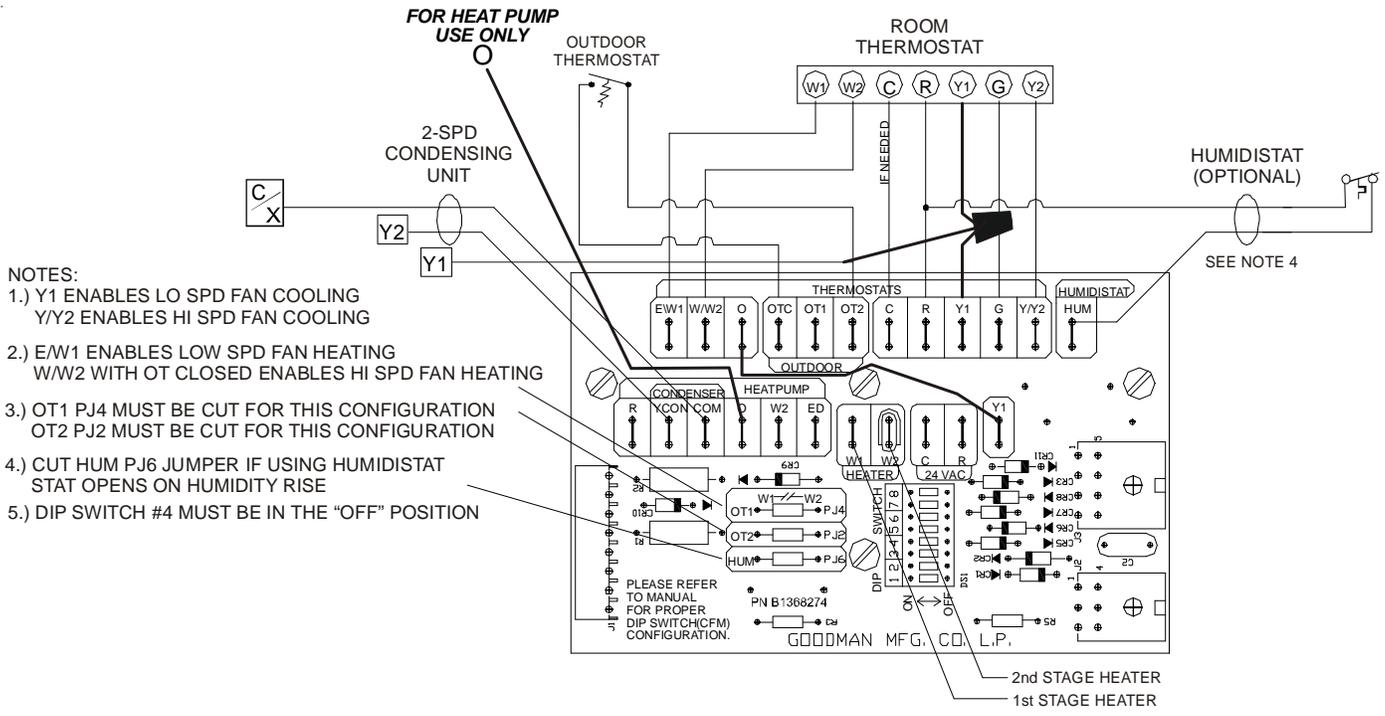


**2 SPD COOLING ONLY - 2 STAGE HEAT (T'STAT ENABLED OT)**

Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.


**WARNING**

**HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING.**

**MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.**

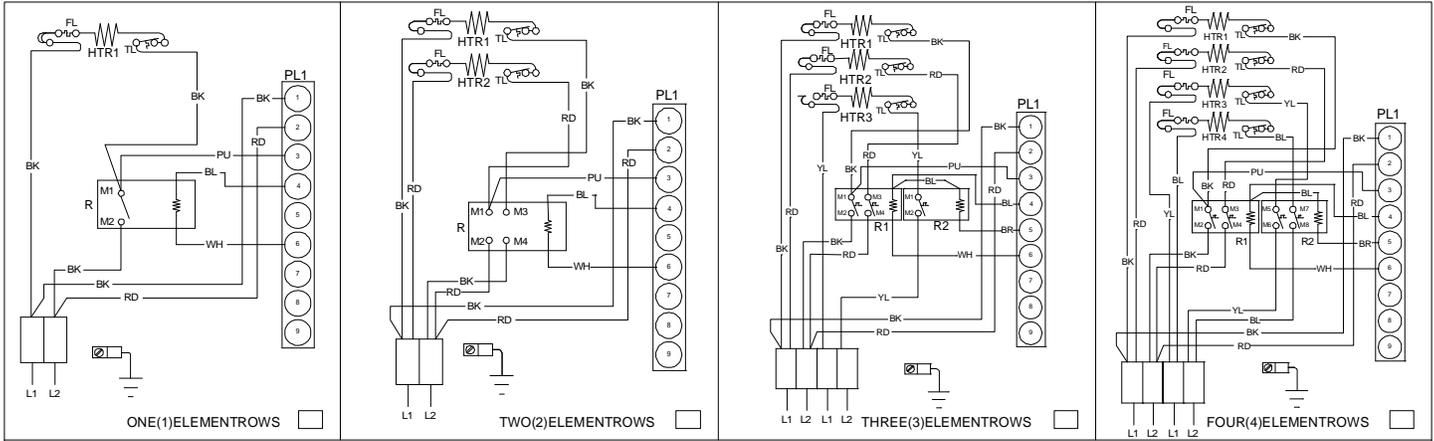

AFTER INSTALLING OPTIONAL HEAT KIT, MARK "X" IN THE PROVIDED ABOVE.  
 MARK ACCORDING TO NUMBER OF HEATER ELEMENT ROWS INSTALLED  
 NO MARK INDICATES NO HEAT KIT INSTALLED

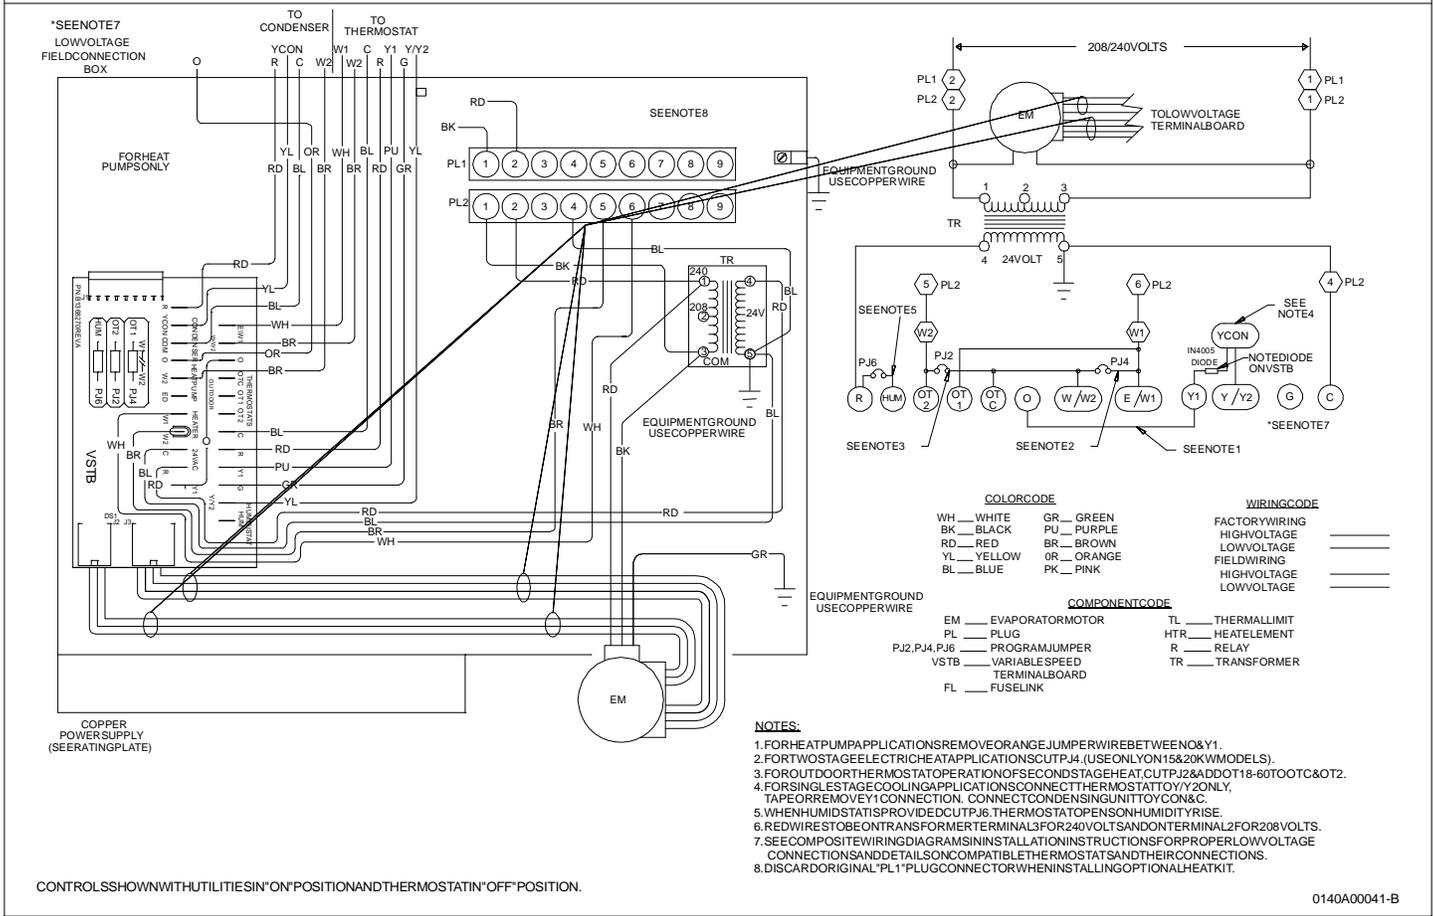

Wiring is subject to change, always refer to the wiring diagram on the unit for the most up-to-date wiring.

THIS PAGE LEFT INTENTIONALLY BLANK

THIS PAGE LEFT INTENTIONALLY BLANK

### **Quality Makes the Difference!**

All of our systems are designed and manufactured with the same high quality standards regardless of size or efficiency. We have designed these units to significantly reduce the most frequent causes of product failure. They are simple to service and forgiving to operate. We use quality materials and components. Finally, every unit is run tested before it leaves the factory. That's why we know . . . **There's No Better Quality.**

Visit our websites at [www.goodmanmfg.com](http://www.goodmanmfg.com) or [www.amana-hac.com](http://www.amana-hac.com) for information on:

- Products
- Warranties
- Customer Services
- Parts
- Contractor Programs and Training
- Financing Options

Goodman Manufacturing Company, L.P.  
5151 San Felipe, Suite 500, Houston, TX 77056  
[www.goodmanmfg.com](http://www.goodmanmfg.com)

© 2004-2011 Goodman Manufacturing Company, L.P.