

# NOTICE

**The SCR Controller in this unit has been factory set to position #4 (2200 OHMS).**

**Due to shipping, handling and installation of the unit, the pre-set position may have changed.**

**Before unit start-up, verify the switch is in the #4 position.**

**Any other switch position will cause improper heater function.**

