

Example:

General Instructions for installing **FAST-STAT**.

1. The Receiver is installed at the furnace / heat pump. It is connected to the existing thermostat cable and the furnace / heat pump terminal strip.



-
2. The Sending Unit is connected to the existing thermostat cable and the new thermostat. The Sending Unit is then installed into the wall space behind the thermostat.

