

Zone Names:

- 1 Area1
- 2 Area2
- 3 Area3
- 4 Area4
- 5 Basement
- 6 Bathroom
- 7 Bathroom1
- 8 Bathroom2
- 9 Bathroom3
- 10 Bedroom
- 11 Bedroom1
- 12 Bedroom2
- 13 Bedroom3
- 14 Bonus Room
- 15 Computer Room
- 16 Den
- 17 Dining Room
- 18 Exercise Room
- 19 Family Room
- 20 Foyer
- 21 Game Room
- 22 Garage
- 23 Great Room
- 24 Guest Room
- 25 Gym

- 26 Kitchen
- 27 Laundry Room
- 28 Library
- 29 Living Room
- 30 Lower Level
- 31 Master Bathroom
- 32 Master Bedroom
- 33 Media Room
- 34 Nursery
- 35 Office
- 36 Pantry
- 37 Play Room
- 38 Pool Room
- 39 Porch
- 40 Rec Room
- 41 Sewing Room
- 42 Spa
- 43 Storage Room
- 44 Sun Room
- 45 Theater
- 46 Upper Level
- 47 Utility Room
- 48 Walk in Closet
- 49 Wine Cellar
- 50 Workshop

Telephone Access Module

USER MENU

Enter your pass code

Listen for:

Active Alert Message (if any)

Date/Time

Outdoor Temperature (if available)

Indoor Humidity (if available)



69-2011

USER MENU (continued)

Enter:

1

Thermostat Menu

Single Thermostat Settings
Global Thermostat Settings

2

Time and Date Menu

hh, mm & mm, dd, yyyy

3

Passcode Menu

Change the System Passcode

4

Alert Menu

Set alert priority and dial out time
Retrieve alert history

5

Call and Ring Menu

Configure the dial-out phone numbers
Configure the number of rings

6

Limit Menu

Configure temperature and humidity limits
Set factory default limits

7

Zone Menu

Assign zone names
Set zone announcement options

9

Repeat User Menu

#

Exit (Disconnect)

DIAL-OUT ALERT MENU

Listen for:

The ___ alert from Channel/Zone occurred on ___ (date) at ___ (time).

Press # to acknowledge the receipt of this alert.

Alerts:

Power Outage

Power was out at this location for more than 1 hour.

Power Restore

Power has been restored at this location.

Low Battery

Replace battery.

Auxiliary Input

Optional auxiliary input sensor has tripped.

Pass Code Change

The pass code has been altered.

DIAL-OUT ALERT MENU (continued)

Alerts:

Low Temp Limit

The room temperature dropped below the low limit setting.

High Temp Limit

The room temperature exceeded the high limit setting.

Outdoor Low Temp Limit

The outdoor temperature dropped below the low limit setting.

Outdoor High Temp Limit

The outdoor temperature exceeded the high limit setting.

Air Filter

Change air/duct filter.

Humidity Low Limit

The indoor humidity dropped below the low limit setting.

Humidity High Limit

The indoor humidity exceeded the high limit setting.

System Failure

HVAC system/component alert.