


INSTALLATION INSTRUCTIONS

7660-5331 FILTER ASSEMBLY

1. Detach the top door panel from the furnace and lay it on the floor with its interior side facing up.
2. Unfold the filter and lay it in the door panel.
3. Pick up one of the filter retainers and hold it so the end of the short part of the retainer points into the filter. Start at the bottom section of the door panel and slip one end of the long portion of the filter retainer behind the door flange. Bow the filter retainer just enough to slip the other end under the respective door flange.
4. Install the other filter retainer in the same manner as shown in the illustration.
5. Place the door panel with filter installed back on the furnace.

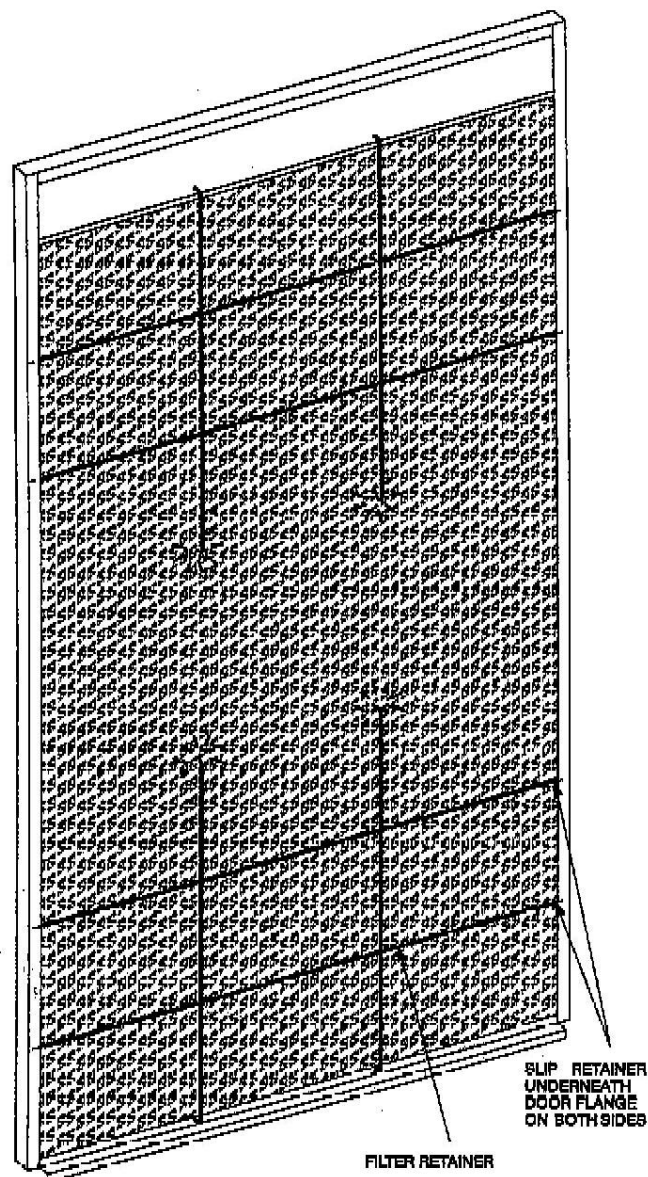

Evcon Industries, Inc.

3110 North Mead
P.O. Box 19014
Wichita, KS 67204-9014

19438

1970-547/D (8/94) RI.

LITHO IN U.S.A.