


PLIERS (PTO CLIP SPREADER) INSTRUCTION SHEET



The Space-Pak Pliers are designed for easier installation and to assure full setting of all four clips (fasteners) in the plenum take-off, guaranteeing a sturdy, air-tight connection.

1. After installing the plenum take-off, insert one clip into position, making sure that it reaches the inside surface of the duct.
2. Insert the pliers into the plenum take-off, with one flat side of the pliers against the clip, and spread the pliers until you hear the clip snap into position.
3. Repeat the procedure until all four clips are securely snapped into position.

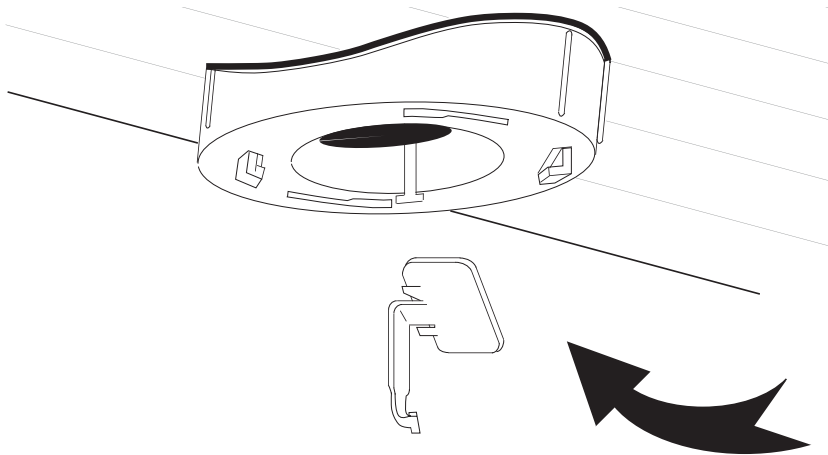