

McDaniel Metals Inc.
1318 Buschong, Houston TX 77039
(281)987-8400 Fax (281)987-9494

Assembly instructions for PCCP101-103
PLATFORM CURB

1. Open package and inspect contents to insure all pieces are included.

Package should contain the following;


- 6) 14" frame pieces
- 1) Platform

2. Lay out curb as illustrated in Figure 1.

NOTE: MAKE CERTAIN ALL PIECES ARE IN THEIR PROPER PLACE BEFORE ASSEMBLY. IT IS VERY DIFFICULT TO DETACH PIECES ONCE THEY ARE SNAPPED IN PLACE. (Refer to Figure 2 for sizes)

3. Insert 'TAB' sides into 'SLOTTED' sides making sure that all flanges face outward.
4. Level and square curb.
5. Place platform on curb as illustrated and secure.
6. Attach ductwork to plenum bottom and drop through roof opening as plenum is set on curb.
7. Set unit on platform and secure plenum to unit. Seal around flanges on plenum to make watertight.

PCCP101-103

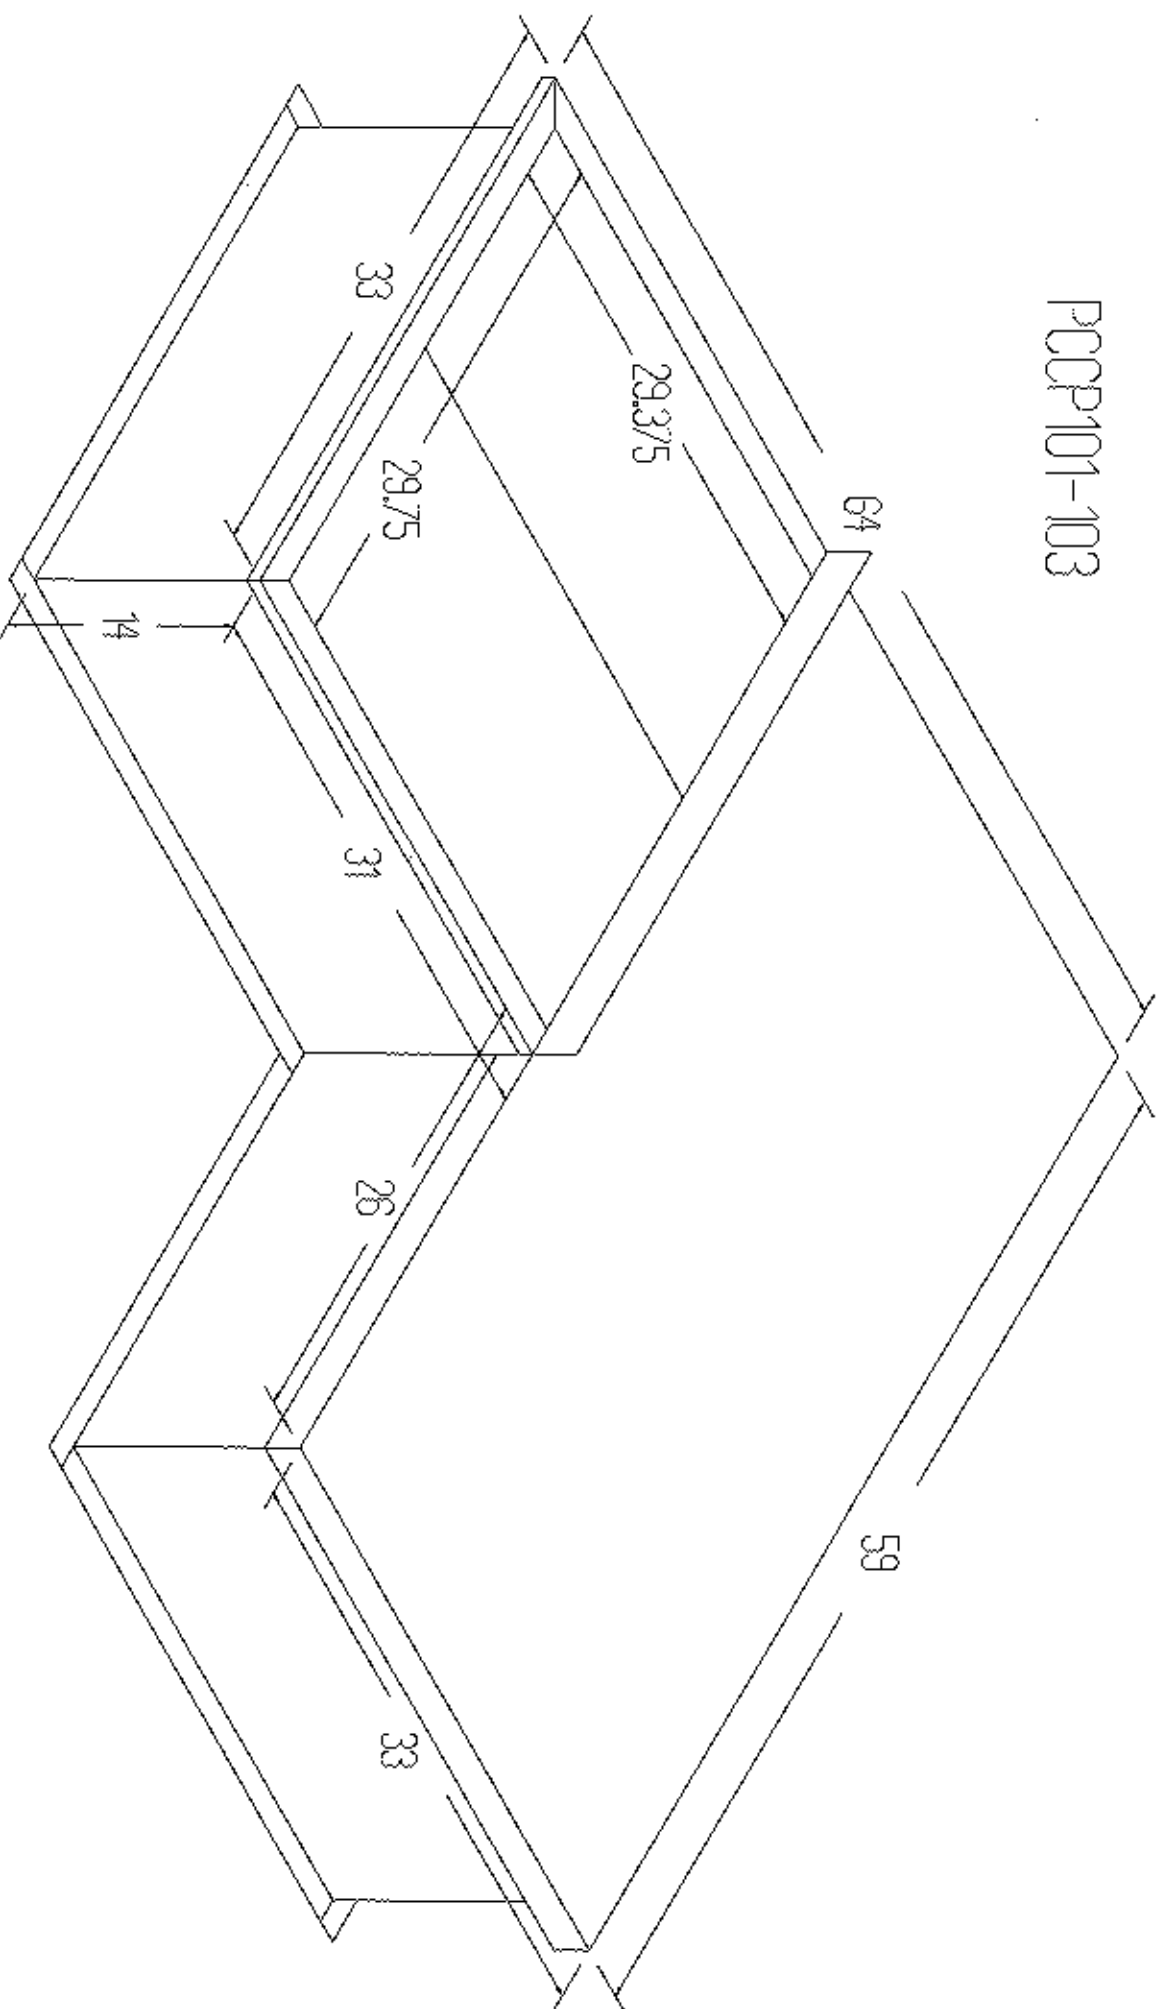

GPH PLATFORM CURB

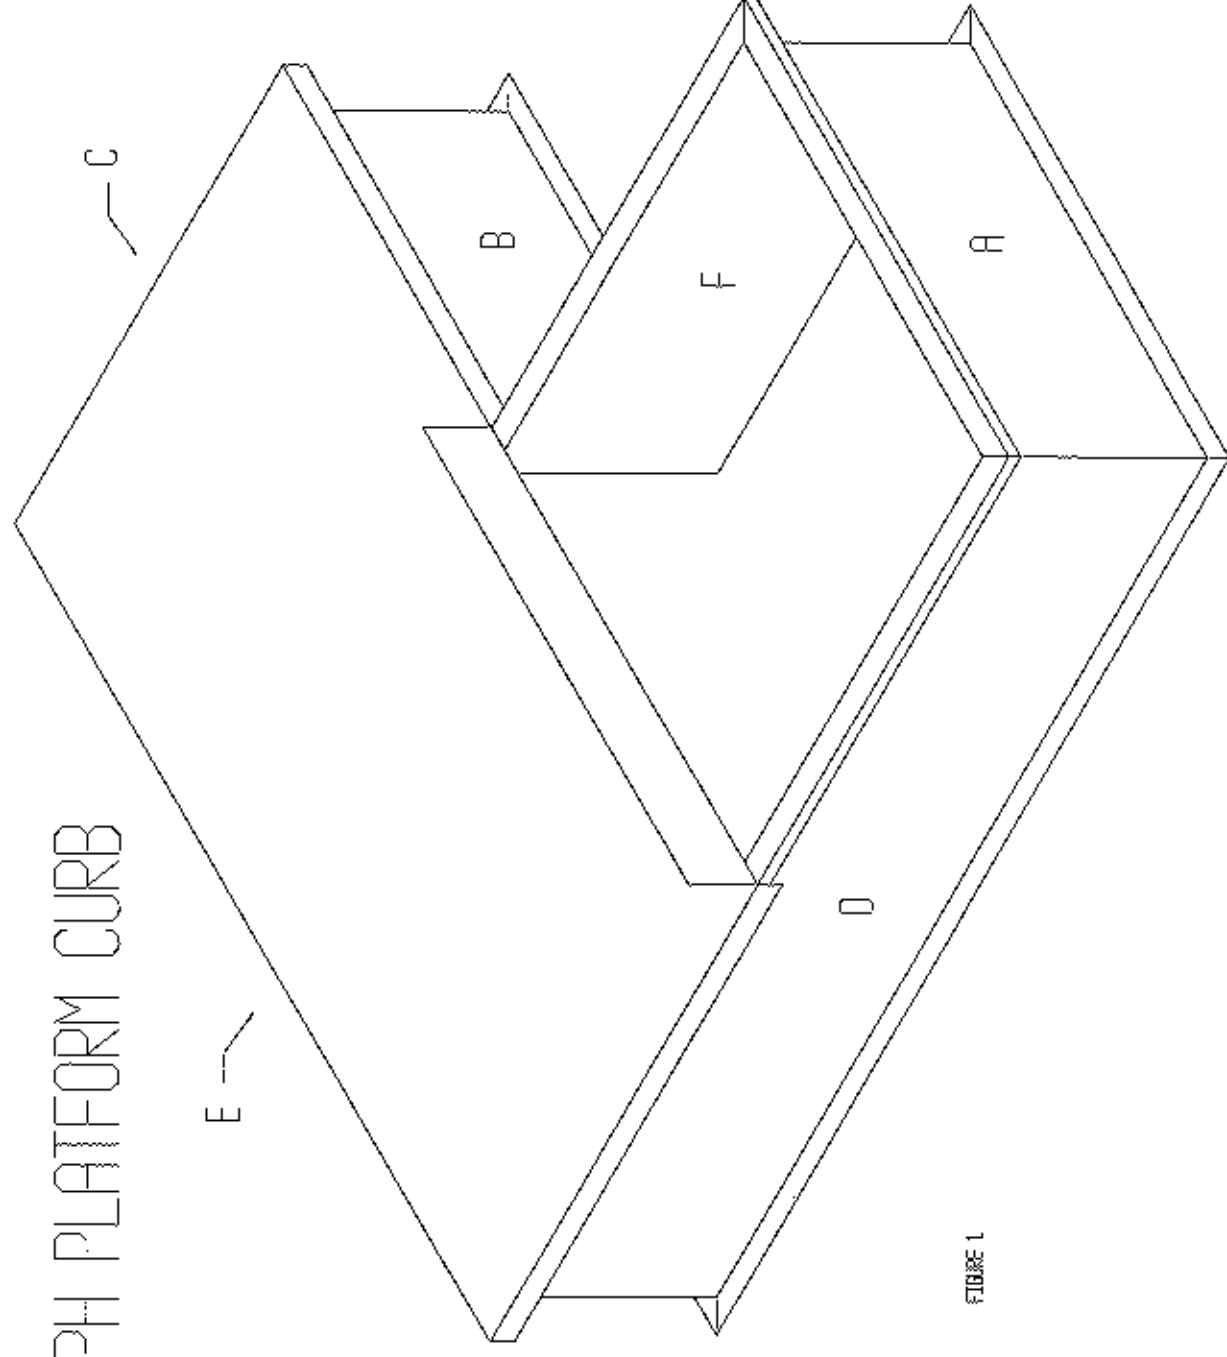


FIGURE 1

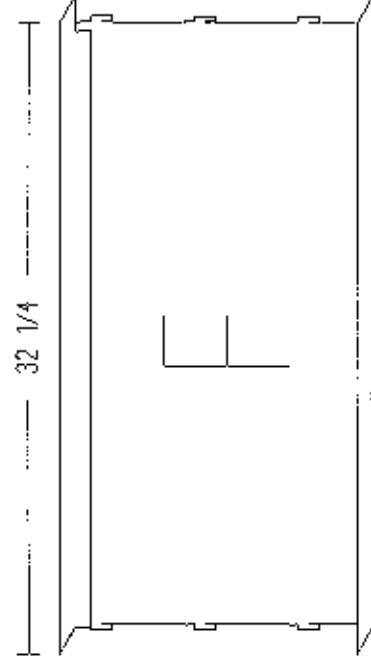
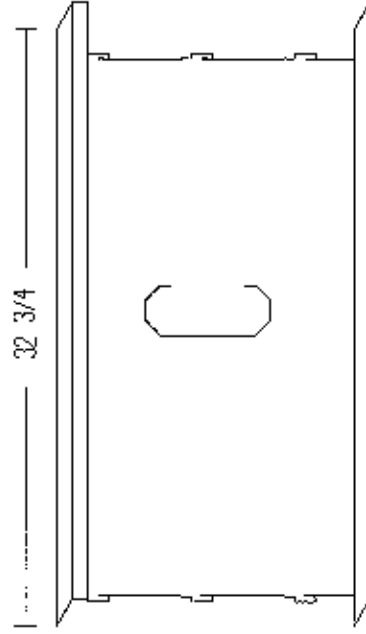
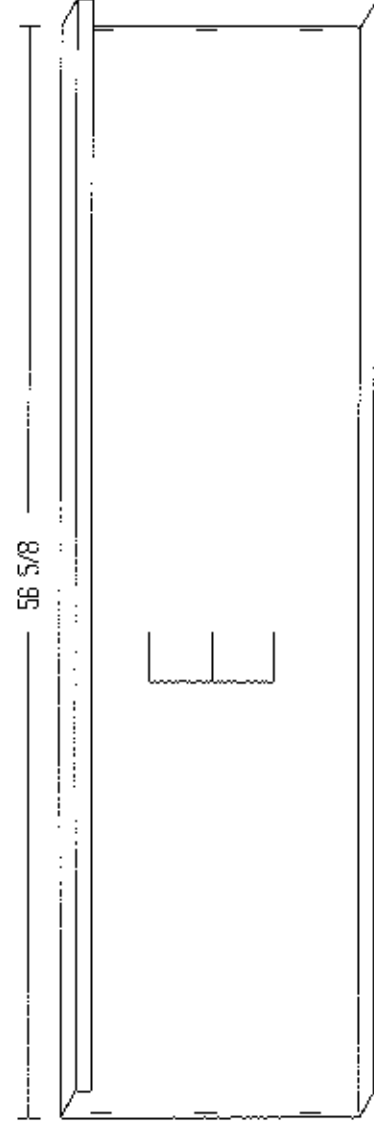
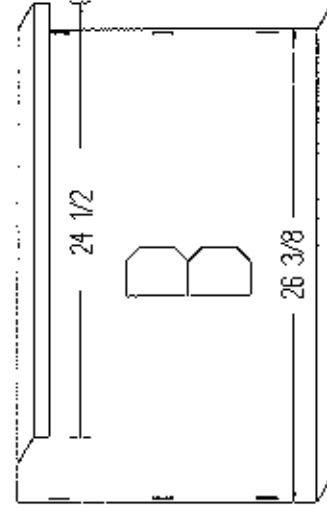
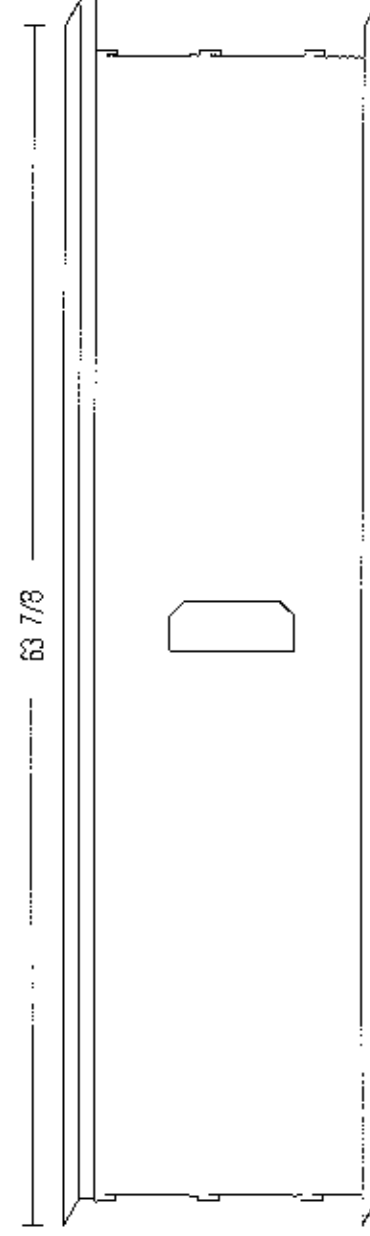
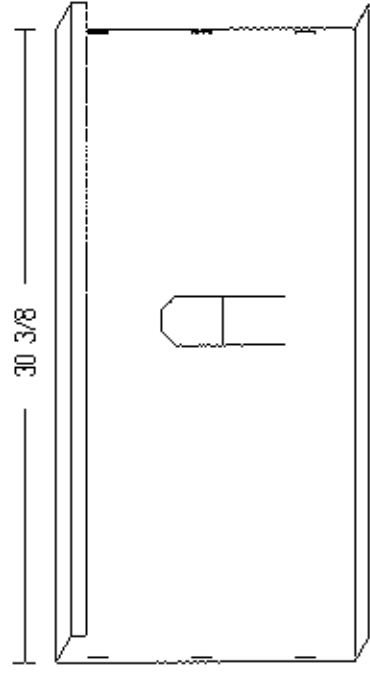


FIGURE 2.