

INSTALLATION MANUAL

HIGH EFFICIENCY TUBULAR HEAT EXCHANGER SERIES

(Two Stage Variable Speed Downflow/Horizontal)

60 - 120 MBH INPUT
(17.6 - 35.17 KW) INPUT



TABLE OF CONTENTS

| | | | |
|------------------------|----|--------------------------------------|----|
| SAFETY | 1 | COMBUSTION AIR AND VENT SYSTEM | 11 |
| DUCTWORK | 3 | CONDENSATE PIPING | 18 |
| FILTERS | 7 | SAFETY CONTROLS | 24 |
| GAS PIPING | 8 | START-UP AND ADJUSTMENTS | 24 |
| ELECTRICAL POWER | 10 | WIRING DIAGRAM | 32 |

LIST OF FIGURES

| | | | |
|--|----|--|----|
| Combustible Floor Base Accessory | 5 | Termination Configuration - 2 Pipe Horizontal | 15 |
| Transition Kit Assembly | 5 | Crawl Space Termination Configuration - 2Pipe | 15 |
| Dimensions | 6 | Double Horizontal Sealed Combustion Air and Vent Termination | 15 |
| Accessory Downflow Filter Rack | 7 | Double Vertical Sealed Combustion Air and Vent Termination | 15 |
| Return Filter Grill and Return Duct Installation | 7 | Sealed Combustion Air Intake Connection and Vent Connection | 16 |
| Typical Attic Installation | 8 | Combustion Airflow Path Through The Furnace | |
| Typical Suspended Furnace / Crawl Space Installation | 8 | Casing to the Burner Box | 16 |
| Gas Valve | 8 | Outside and Ambient Combustion Air | 17 |
| Downflow Gas Piping | 8 | Attic Combustion Air Termination | 17 |
| Horizontal Gas Piping | 9 | Condensate Drain Internal Hose Routing | 18 |
| Electrical Wiring | 10 | Downflow Condensate Drain Hose Configuration | 19 |
| Line Wiring Connections | 10 | Horizontal Left Condensate Drain Hose Configuration | 20 |
| Single Stage Heat Thermostat Connections | 11 | Horizontal Right Condensate Drain Hose Configuration | |
| Single Stage Heating and Two-Stage Cooling | | (Option 1 - Front of Casing) | 22 |
| Thermostat Connections | 11 | Horizontal Right Condensate Drain Hose Configuration | |
| Two Stage Heating and Two-Stage Cooling | | (Option 2 - Back of Casing) | 23 |
| Thermostat Connections | 11 | Pressure Switch Tubing Routing | 24 |
| Accessory Connections | 11 | Gas Valve | 27 |
| Home Layout | 13 | Reading Gas Pressure | 28 |
| Downflow/Horizontal Vent Assembly | 14 | Furnace Control Board | 28 |
| External Horizontal Vent Drain | 14 | CFM / Timer Board | 29 |
| Termination Configuration - 1 Pipe | 14 | Wiring Diagram | 32 |
| Termination Configuration - 2 Pipe | 15 | | |

LIST OF TABLES

| | | | |
|---|----|--|----|
| Unit Clearances to Combustibles | 3 | Combustion Air Supply and Vent Piping | 12 |
| Minimum Duct Sizing For Proper Airflow | 4 | Estimated Free Area | 16 |
| Round Duct Size | 4 | Free Area | 16 |
| Filter Sizes | 7 | Unconfined Space Minimum Area in Square Inch | 16 |
| High Altitude Pressure Switch Application | 9 | Condensate Drain Hose | 18 |
| High Altitude Conversion | 9 | Inlet Gas Pressure Range | 27 |
| Electrical and Performance Data | 10 | Nominal Manifold Pressure | 27 |
| Combustion Air Intake and Vent Connection Size at Furnace | | Air Flow Data | 30 |
| (All Models) | 12 | Filter Performance - Pressure Drop Inches W.C. and (kPa) | 31 |

SECTION I: SAFETY



This is a safety alert symbol. When you see this symbol on labels or in manuals, be alert to the potential for personal injury.

Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

DANGER indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.

WARNING indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION indicates a potentially hazardous situation, which, if not avoided may result in minor or moderate injury. It is also used to alert against unsafe practices and hazards involving only property damage.

WARNING

Improper installation may create a condition where the operation of the product could cause personal injury or property damage.

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual for assistance or for additional information, consult a qualified contractor, installer or service agency.

CAUTION

This product must be installed in strict compliance with the installation instructions and any applicable local, state, and national codes including, but not limited to building, electrical, and mechanical codes.

SPECIFIC SAFETY RULES AND PRECAUTIONS

1. Only Natural gas or Propane (LP) gas are approved for use with this furnace. Refer to the furnace rating plate or Section IV of these instructions.
2. Install this furnace only in a location and position as specified in SECTION I of these instructions.
3. A gas-fired furnace for installation in a residential garage must be installed as specified in SECTION I of these instructions.
4. Provide adequate combustion and ventilation air to the furnace space as specified in SECTION VI of these instructions.
5. Combustion products must be discharged outdoors. Connect this furnace to an approved vent system only, as specified in SECTION VI of these instructions.

WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

6. Tests for gas leaks as specified in SECTION XI of these instructions.
7. Always install the furnace to operate within the furnace's intended temperature rise range. Only connect the furnace to a duct system which has an external static pressure within the allowable range, as specified on the furnace rating plate.
8. When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.
9. The furnace is not to be used for temporary heating of buildings or structures under construction.
10. When installed in a Non-HUD-Approved Modular Home or building constructed on-site, combustion air shall not be supplied from occupied spaces.
11. The size of the unit should be based on an acceptable heat loss calculation for the structure. ACCA, Manual J or other approved methods may be used.

SAFETY REQUIREMENTS

- This furnace should be installed in accordance with all national and local building/safety codes and requirements, local plumbing or wastewater codes, and other applicable codes. In the absence of local codes, install in accordance with the National Fuel Gas Code ANSI Z223.1/NFPA 54, National Fuel Gas Code, and/or CAN/CGA B149.1 Natural Gas and Propane Installation Code (latest editions). Furnaces have been certified to the latest edition of standard ANSI Z21-47 • CSA 2.3.
- Refer to the unit rating plate for the furnace model number, and then see the dimensions page of this instruction for return air plenum dimensions in Figure 3. The plenum must be installed according to the instructions.
- Provide clearances from combustible materials as listed under Clearances to Combustibles in Table 1.
- Provide clearances for servicing ensuring that service access is allowed for both the burners and blower.
- These models **ARE NOT** CSA listed or approved for installation into a **HUD Approved Modular Home** or a **Manufactured (Mobile) Home**.
- This furnace is not approved for installation in trailers or recreational vehicles.
- **Failure to carefully read and follow all instructions in this manual can result in furnace malfunction, death, personal injury and/or property damage.**
- Furnaces for installation on combustible flooring shall not be installed directly on carpeting, tile or other combustible material other than wood flooring.

- Check the rating plate and power supply to be sure that the electrical characteristics match. All models use nominal 115 VAC, 1 Phase, 60-Hertz power supply. **DO NOT CONNECT THIS APPLIANCE TO A 50 HZ POWER SUPPLY OR A VOLTAGE ABOVE 130 VOLTS.**
- Furnace shall be installed so the electrical components are protected from water.
- Installing and servicing heating equipment can be hazardous due to the electrical components and the gas fired components. Only trained and qualified personnel should install, repair, or service gas heating equipment. Untrained service personnel can perform basic maintenance functions such as cleaning and replacing the air filters. When working on heating equipment, observe precautions in the manuals and on the labels attached to the unit and other safety precautions that may apply.
- These instructions cover minimum requirements and conform to existing national standards and safety codes. In some instances these instructions exceed certain local codes and ordinances, especially those who have not kept up with changing residential and non-HUD modular home construction practices. These instructions are required as a minimum for a safe installation.

COMBUSTION AIR QUALITY (LIST OF CONTAMINANTS)

The furnace will require **OUTDOOR AIR** for combustion when the furnace is located in any of the following environments.

- Restricted Environments
- Commercial buildings
- Buildings with indoor pools
- Furnaces installed in laundry rooms
- Furnaces installed in hobby or craft rooms
- Furnaces installed near chemical storage areas
- Chemical Exposure

The furnace will require **OUTDOOR AIR** for combustion when the furnace is located in an area where the furnace is being exposed to the following substances and / or chemicals.

- Permanent wave solutions
- Chlorinated waxes and cleaners
- Chlorine based swimming pool chemicals
- Water softening chemicals
- De-icing salts or chemicals
- Carbon tetrachloride
- Halogen type refrigerants
- Cleaning solvents (such as perchloroethylene)
- Printing inks, paint removers, varnishes, etc.
- Hydrochloric acid
- Cements and glues
- Antistatic fabric softeners for clothes dryers
- Masonry acid washing materials

When outdoor air is used for combustion, the combustion air intake pipe termination must be located external to the building and in an area where there will be no exposure to the substances listed above.

WARNING

The furnace area must not be used as a broom closet or for any other storage purposes, as a fire hazard may be created. Never store items such as the following on, near, or in contact with the furnace.

1. Spray or aerosol cans, rags, brooms, dust mops, vacuum cleaners or other cleaning tools.
2. Soap powders, bleaches, waxes or other cleaning compounds; plastic items or containers; gasoline, kerosene, cigarette lighter fluid, dry cleaning fluids or other volatile fluid.
3. Paint thinners and other painting compounds.
4. Paper bags, boxes or other paper products

Never operate the furnace with the blower door removed. To do so could result in serious personal injury and/or equipment damage.

INSPECTION

As soon as a unit is received, it should be inspected for possible damage during transit. If damage is evident, the extent of the damage should be noted on the carrier's freight bill. A separate request for inspection by the carrier's agent should be made in writing. Also, before installation the unit should be checked for screws or bolts, which may have loosened in transit. There are no shipping or spacer brackets which need to be removed.

FURNACE LOCATION AND CLEARANCES

The furnace shall be located using the following guidelines:

1. Where a minimum amount of air intake/vent piping and elbows will be required.
2. As centralized with the air distribution as possible.
3. Where adequate combustion air will be available (particularly when the appliance is not using outdoor combustion air).
4. Where it will not interfere with proper air circulation in the confined space.
5. Where the outdoor combustion air/vent terminal will not be blocked or restricted. Refer to "COMBUSTION AIR / VENT CLEARANCES" located in SECTION VII of these instructions. These minimum clearances must be maintained in the installation.
6. Where the unit will be installed in a level position with no more than 1/4" (6.4 mm) slope side-to-side and front-to-back to provide proper condensate drainage.

Installation in freezing temperatures:

1. Furnace shall be installed in an area where ventilation facilities provide for safe limits of ambient temperature under normal operating conditions. Ambient temperatures must not fall below 32°F (0°C) unless the condensate system is protected from freezing.
2. Do not allow return air temperature to be below 55° F (13° C) for extended periods. To do so may cause condensation to occur in the main heat exchanger, leading to premature heat exchanger failure, leading to premature heat exchanger failure.

WARNING

Improper installation in an ambient below 32°F (0.0° C) could create a hazard, resulting in damage, injury or death.

3. If this furnace is installed in any area where the ambient temperature may drop below 32° F (0° C), a UL listed self-regulated heat tape must be installed on any condensate drain lines. It is required that self regulating heat tape rated at 3 watts per foot be used. This must be installed around the condensate drain lines in the unconditioned space. Always install the heat tape per the manufacturer's instructions. Cover the self-regulating heat tape with fiberglass, Armaflex or other heat resistant insulating material.
4. If this unit is installed in an unconditioned space and an extended power failure occurs, there will be potential damage to the condensate trap, drain lines and internal unit components. Following a power failure situation, do not operate the unit until inspection and repairs are performed.

Clearances for access:

Ample clearances should be provided to permit easy access to the unit. The following minimum clearances are recommended:

1. Twenty-four (24) inches (61 cm) between the front of the furnace and an adjacent wall or another appliance, when access is required for servicing and cleaning.
2. Eighteen (18) inches (46 cm) at the side where access is required for passage to the front when servicing or for inspection or replacement of flue/vent connections.

In all cases, accessibility clearances shall take precedence over clearances for combustible materials where accessibility clearances are greater.

WARNING

Downflow/Horizontal furnaces for installation on combustible flooring only when installed on the accessory combustible floor base on wood flooring only and shall not be installed directly on carpeting, tile or other combustible material.

Check the rating plate and power supply to be sure that the electrical characteristics match. All models use nominal 115 VAC, 1 Phase 60Hz power supply.

Furnace shall be installed so the electrical components are protected from water.

Installation in a residential garage:

1. A gas-fired furnace for installation in a residential garage must be installed so the burner(s) and the ignition source are located not less than 18 inches (46 cm) above the floor, and the furnace must be located or protected to avoid physical damage by vehicles.

TABLE 1: Unit Clearances to Combustibles

| Application | Top | Front | Rear | Left Side | Right Side | Flue | Floor/ Bottom | Closet | Alcove | Attic | Line Contact |
|-------------|----------|----------|----------|-----------|------------|----------|-----------------------|--------|--------|-------|------------------|
| | In. (mm) | In. (mm) | In. (mm) | In. (mm) | In. (mm) | In. (mm) | In. (mm) | | | | |
| DOWNFLOW | 1 (25.4) | 3 (76.2) | 0 (0) | 0 (0) | 0 (0) | 0 (0) | 1 (25.4) ¹ | Yes | Yes | Yes | NA |
| HORIZONTAL | 0 (0) | 3 (76.2) | 0 (0) | 1 (25.4) | 1 (25.4) | 0 (0) | 0 (0) ² | Yes | Yes | Yes | Yes ² |

1. Combustible floor base or air conditioning coil required for use on combustible floor.

2. Line contact only permitted between lines formed by the intersection of the rear panel (top in horizontal position) of the furnace jacket and building joists, studs or framing.

SECTION II: DUCTWORK

DUCTWORK GENERAL INFORMATION

The duct system's design and installation must:

1. Handle an air volume appropriate for the served space and within the operating parameters of the furnace specifications.
2. Be installed in accordance with standards of NFPA (National Fire Protection Association) as outlined in NFPA pamphlets 90A and 90B (latest editions) or applicable national, provincial, or state, and local fire and safety codes.
3. Create a closed duct system. For residential and Non-HUD Modular Home installations, when a furnace is installed so that the supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by a duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.

4. Complete a path for heated or cooled air to circulate through the air conditioning and heating equipment and to and from the conditioned space.

CAUTION

The cooling coil must be installed in the supply air duct, downstream of the furnace. Cooled air may not be passed over the heat exchanger.

When the furnace is used in conjunction with a cooling coil, the coil must be installed parallel with, or in the supply air side of the furnace to avoid condensation in the primary heat exchanger. When a parallel flow arrangement is used, dampers or other means used to control airflow must be adequate to prevent chilled air from entering the furnace. If manually operated, the damper must be equipped with means to prevent the furnace or the air conditioner from operating unless the damper is in full heat or cool position.

⚠ WARNING

The duct system must be properly sized to obtain the correct airflow for the furnace size that is being installed.

Refer to Table 8 and the furnace rating plate for the correct rise range and static pressures

If the ducts are undersized, the result will be high duct static pressures and/or high temperature rises which can result in a heat exchanger OVERHEATING CONDITION. This condition can result in premature heat exchanger failure, which can result in personal injury, property damage, or death.

FLOOR BASE AND DUCTWORK INSTALLATION

Downflow Combustible Floor Base



Installations on combustible materials require the use of a combustible floor base shown in Figure 1.

The floor base must be secured to the floor. A supply air duct plenum with 1" (2.54 cm) flange is installed through the opening provided. The supply air duct is then secured to the duct system with screws and sealed to prevent leaks. Do not

shoot screws through the flanges of the supply air duct into the top of the combustible floor base. Install the furnace on the combustible floor base so that the corners of the furnace are parallel with the corner brackets of the floor base. Follow the instructions supplied with the combustible floor base accessory.

This combustible floor base can be replaced with a matching cooling coil, properly sealed to prevent leaks. Follow the instructions supplied with the cooling coil cabinet for installing the cabinet to the duct connector. Refer to the installation instructions for additional information.

When replacing an existing furnace, if the existing plenum is not the same size as the new furnace then the existing plenum must be removed and a new plenum installed that is the proper size for the new furnace.

Duckwork Installation

A proper Heat Loss/Gain Calculation should be done on all installations for proper application of equipment. From this the ductwork sizing can be calculated, ACCA Manual J and D and industry standards are helpful.

The duct system is a very important part of the installation. **If the duct system is improperly sized the furnace will not operate properly.** The ducts attached to the furnace plenum, should be of sufficient size so that the furnace plenum should be of sufficient size so that the furnace operates at the specified external static pressure and within the air temperature rise specified on the nameplate.

Table 2 is a guide for determining whether the rectangular duct system that the furnace is being connected to be of sufficient size for proper furnace operation.

Use the Example below to help you in calculating the duct area to determine whether the ducts have sufficient area so that the furnace operates at the specified external static pressure and within the air temperature rise specified on the nameplate.

The following are general duct sizing guidelines that may not serve to requirements of every application.

Example: The furnace input is 80,000 BTUH, 1,200 CFM blower requirement. The recommended duct area is 216 sq.in, there are two 8 x 12 rectangular ducts attached to the plenum and there are two 7 inch round ducts attached to the furnace.

1. Take 8 x 12, which equals 96 square inch x 2 = 192 square inches then go to round duct size located in Table 3.
2. The square inch area for 7 inch round ducts, 38.4 square inch x 2 = 76.8 square inches,
3. Then take the 192 square inch from the rectangular duct and add it to the 76.8 square inch of round duct. The total square inch of duct attached to the furnace supply plenum is 268.8 square inches. This exceeds the recommended 216 square inch of duct.

In this example, the duct system attached to the plenum has a sufficient area so that the furnace operates at the specified external static pressure and within the air temperature rise specified on the nameplate. Providing the return duct is properly sized as well.

TABLE 2: Minimum Duct Sizing For Proper Airflow

| Input/Cabinet | Airflow | Return ¹ | Rectangular ² | Round ² | Supply ³ | Rectangular ² | Round ² |
|---------------|--------------|---------------------|--------------------------|--------------------|---------------------|--------------------------|--------------------|
| BTU/H (kW) | CFM (m³) | In² (cm²) | in. x in. (cm x cm) | in. (cm) dia. | In² (cm²) | in. x in. (cm x cm) | in. (cm) dia. |
| 60/B (17.6) | 1,200 (34.0) | 280 (711) | 14 x 20 (35.6 x 50.8) | 18 (45.7) | 216 (549) | 12 x 18 (30.5 x 45.7) | 16 (40.6) |
| 80/B (23.4) | 1,200 (34.0) | 280 (711) | 14 x 20 (35.6 x 50.8) | 18 (45.7) | 216 (549) | 12 x 18 (30.5 x 45.7) | 16 (40.6) |
| 80/C (23.4) | 1,600 (45.3) | 360 (914) | 18 x 20 (45.7 x 50.8) | 22 (55.8) | 280 (711) | 14 x 20 (35.6 x 50.8) | 18 (45.7) |
| 100/C (29.3) | 2,000 (56.6) | 440 (1,118) | 20 x 22 (50.8 x 55.8) | 24 (60.9) | 390 (991) | 16 x 22 (40.6 x 55.8) | 22 (55.8) |
| 120/D (35.2) | 2,000 (56.6) | 440 (1,118) | 20 x 22 (50.8 x 55.8) | 24 (60.9) | 390 (991) | 16 x 22 (40.6 x 55.8) | 22 (55.8) |

NOTE: This chart does not replace proper duct sizing calculations or take into account static pressure drop for run length and fittings. Watch out for the temperature rise and static pressures.

1. Maximum return air velocity in rigid duct @ 700 feet per minute (19.82 m³ / minute).
2. Example return main trunk duct minimum dimensions.
3. Maximum supply air velocity in rigid duct @ 900 feet per minute (25.49 m³ / minute).

TABLE 3: Round Duct Size

| Round Duct Size | Calculated Area For Each Round Duct Size |
|-----------------|--|
| inches (cm) | Sq.in (cm²) |
| 5 (13) | 19.6 (126) |
| 6 (15) | 28.2 (182) |
| 7 (18) | 38.4 (248) |
| 8 (20) | 50.2 (324) |
| 9 (23) | 63.6 (410) |
| 10 (25) | 78.5 (506) |
| 11 (28) | 95 (613) |
| 12 (30) | 113.1 (730) |
| 13 (33) | 132.7 (856) |
| 14 (36) | 153.9 (993) |

1. The Air Temperature Rise is determined by subtracting the Return Air Temperature Reading from the Supply Air Temperature Reading.
2. The External Static Pressure is determined by adding the Supply Duct Static Pressure reading to the Return Duct Static Pressure reading.

TABLES 2 AND 3 are to be used as a guide only to help the installer determine if the duct sizes are large enough to obtain the proper air flow (CFM) through the furnace. TABLES 2 and 3 ARE NOT to be used to design ductwork for the building where the furnace is being installed. There are several variables associated with proper duct sizing that are not included in the tables. To properly design the ductwork for the building, Refer to the ASHRAE Fundamentals Handbook, Chapter on "DUCT DESIGN" or a company that specializes in Residential and Modular Home duct designs.

IMPORTANT: If the supply air duct is being connected to the furnace without the use of an accessory duct connector, then a transition duct must be installed with flanges or tabs that are securely attach and sealed to the supply air duct and to the base of the furnace. The transition duct must have insulation between the transition duct and any combustible material.

The transition duct must be the same dimensional size as the rectangular opening in the base of the furnace.

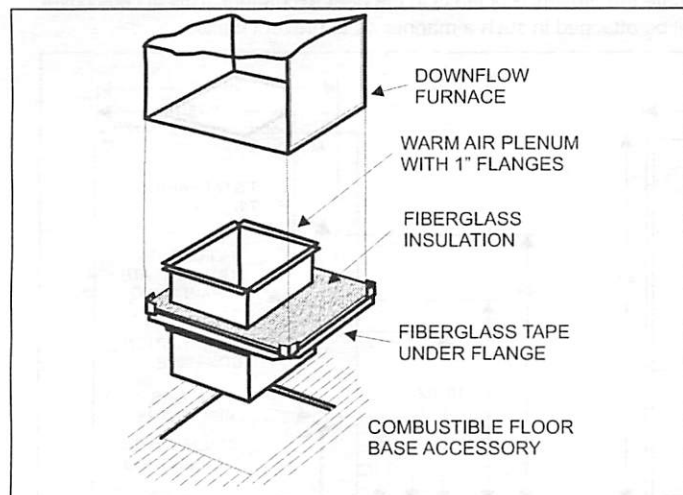


FIGURE 1: Combustible Floor Base Accessory

WARNING

The supply air temperature **MUST NEVER** exceed the **Maximum Supply Air Temperature**, specified on the nameplate.

Operating the furnace above the maximum supply air temperature will cause the heat exchanger to overheat, causing premature heat exchanger failure. Improper duct sizing, dirty air filters, incorrect manifold pressure, incorrect gas orifice and/or a faulty limit switch can cause the furnace to operate above the maximum supply air temperature. Refer to sections II, III and XI for additional information on correcting the problem.

Downflow Air Conditioning Coil Cabinet

The Cooling Coil Cabinet can be used in place of the combustible floor base for downflow installations on combustible materials. The furnace should be installed with the cooling coil cabinet specifically intended for downflow applications. The cooling coil cabinet must be secured to the floor. A supply air duct plenum is installed through the opening provided. The supply air duct is then secured to the duct system with screws and sealed to prevent leaks. If a matching cooling coil is used, it may be placed directly on the furnace outlet using the accessory transition kit and sealed to prevent leakage. The transition kit must be used to secure the cooling coil cabinet to the furnace casing when installed in a downflow configuration.

This transition kit may be installed in one of two ways. The transition kit may be installed and secured to either the furnace or the cooling coil cabinet by the use of screws and then it must be sealed to prevent leaks.

- If the transition kit has been installed on the cooling coil cabinet it must be secured to the cooling coil cabinet with screws. The supply air side of the furnace is then placed on the cooling coil cabinet and then sealed for leaks.
- If the transition kit has been installed on the supply air side of the furnace it must be secured to the furnace with screws. The furnace and the transition kit are then placed on the cooling coil cabinet and then sealed for leaks.

NOTE: Refer to instructions packed out with coil cabinet, for securing and sealing to the furnace.

IMPORTANT: The furnace, transition kit, and the cooling coil cabinet **MUST BE SEALED** as needed to prevent leaks, **AND SECURED**. Refer to the assembly drawing in Figure 2.

IMPORTANT: On all installations without a coil, a removable access panel is recommended in the outlet duct such that smoke or reflected light would be observable inside the casing to indicate the presence of leaks in the heat exchanger. This access cover shall be attached in such a manner as to prevent leaks.


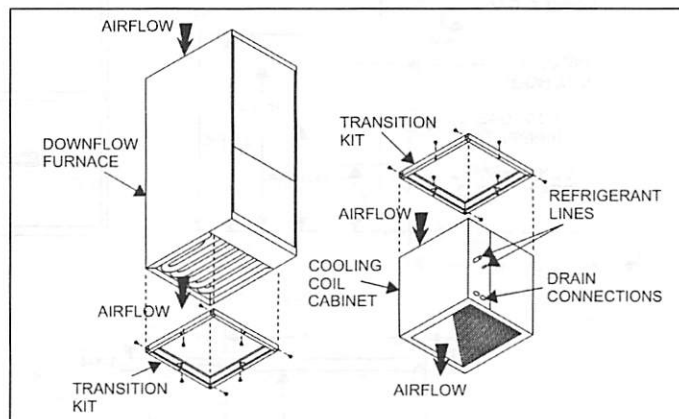


FIGURE 2: Transition Kit Assembly

Horizontal Models



Horizontal Installations With a Cooling Coil Cabinet

The furnace should be installed with the cooling coil cabinet specifically intended for horizontal applications. If a matching cooling coil is used, it may be placed directly on the supply air side of the furnace and sealed to prevent leakage. A warm air duct plenum with 1" (2.54 cm) is installed through the opening provided. The supply air duct system is connected to the warm air plenum and sealed to prevent leaks.

IMPORTANT: The furnace, the cooling coil cabinet, and all duct work **MUST BE SEALED** as needed to prevent leaks, **AND SECURED**. Refer to the assembly drawing in Figure 2.

Attach the supply plenum to the air conditioning coil cabinet outlet duct flanges through the use of S cleat material when a metal plenum is used. The use of an approved flexible duct connector is recommended on all installations. The connection to the furnace, air conditioning coil cabinet and the supply plenum should be sealed to prevent air leakage. The sheet metal plenum should be crosshatched to eliminate any popping of the sheet metal when the indoor fan is energized. The minimum plenum height is 12" (30.5 cm). If the plenum is shorter than 12" (30.5 cm) the turbulent air flow may cause the limit controls not to operate as designed, or the limit controls may not operate at all. Also the plastic drain pan in the under the air conditioning coil can overheat and melt. Refer to the installation instructions supplied with the air conditioning coil for additional information.

Horizontal Installations Without a Cooling Coil Cabinet

When installing this appliance, the furnace must be installed so as to create a closed duct system, the supply duct system must be connected to the furnace outlet and the supply duct system must terminate outside the space containing the furnace. When replacing an existing furnace, if the existing plenum is not the same size as the new furnace then the existing plenum must be removed and a new plenum installed that is the proper size for the new furnace.

Attach the supply plenum to the furnace outlet duct flanges through the use of S cleat material when a metal plenum is used. The use of an approved flexible duct connector is recommended on all installations. This connection should be sealed to prevent air leakage. The sheet metal should be crosshatched to eliminate any popping of the sheet metal when the indoor fan is energized. On all installations without a coil, a removable access panel is recommended in the outlet duct such that smoke or reflected light would be observable inside the casing to indicate the presence of leaks in the heat exchanger. This access cover shall be attached in such a manner as to prevent leaks.

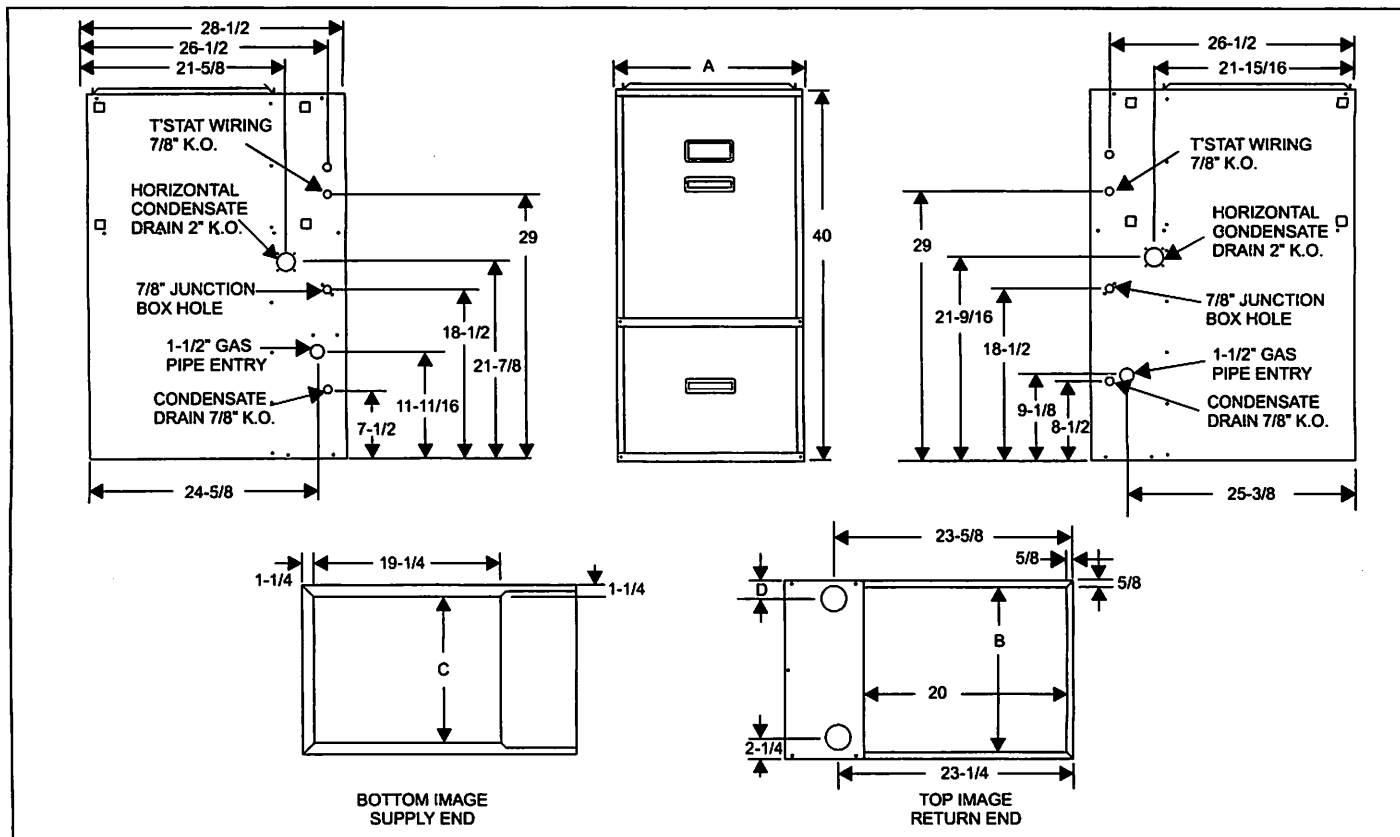


FIGURE 3: Dimensions

| BTUH (kW) Input/Output | CFM | Cabinet Size | Cabinet Dimension | | | | | | | |
|---------------------------|-------------|-----------------|-------------------|--------|---------|--------|---------|--------|---------|--------|
| | | | A (in.) | A (cm) | B (in.) | B (cm) | C (in.) | C (cm) | D (in.) | D (cm) |
| 60/56 (17.6/16.4) | 1200 (34.0) | B | 17-1/2 | 44.4 | 16-1/4 | 41.3 | 15 | 38.1 | 1-3/4 | 4.4 |
| 80/75 (23.4/22.0) | 1200 (34.0) | B | 17-1/2 | 44.4 | 16-1/4 | 41.3 | 15 | 38.1 | 1-3/4 | 4.4 |
| 80/75 (23.4/22.0) | 1600 (45.3) | C | 21 | 53.3 | 19-3/4 | 50.2 | 18-1/2 | 47.0 | 2-1/8 | 5.4 |
| 100/95 (29.3/27.3) | 2000 (56.6) | C | 21 | 53.3 | 19-3/4 | 50.2 | 18-1/2 | 47.0 | 2-1/8 | 5.4 |
| 120/112 (35.1/32.8) | 2000 (56.6) | D | 24-1/2 | 62.2 | 23-1/4 | 59.1 | 22 | 55.9 | 2-1/2 | 6.4 |

RESIDENTIAL AND NON HUD MODULAR HOME DOWNFLOW AND HORIZONTAL RETURN PLENUM CONNECTION

The return duct system must be connected to the furnace inlet and the return duct system must terminate outside the space containing the furnace. When replacing an existing furnace, if the existing plenum is not the same size as the new furnace then the existing plenum must be removed and a new plenum installed that is the proper size for the new furnace.

Attach the return plenum to the furnace inlet duct flanges. This is typically through the use of S cleat material when a metal plenum is used. The use of an approved flexible duct connector is recommended on all

installations. The connection of the plenum to the furnace and all the ducts connecting to the plenum must be sealed to prevent air leakage. The sheet metal should be crosshatched to eliminate any popping of the sheet metal when the indoor fan is energized.

The duct system is a very important part of the installation. If the duct system is improperly sized the furnace will not operate properly. The ducts attached to the furnace must be of sufficient size so that the furnace operates at the specified external static pressure and within the air temperature rise specified on the nameplate.

Attic installations must meet all minimum clearances to combustibles and have floor support with required service accessibility.

IMPORTANT: If an external mounted filter rack is being used see the instructions provided with that accessory for proper hole cut size.

SECTION III: FILTERS

FILTER INSTALLATION

All applications require the use of a filter. Replacement filter size is shown in Table 4.

TABLE 4: Filter Sizes

| Input / Output BTU/H (kW) | CFM (m ³ /min) | Cabinet Size | Top Return Filter in (cm) |
|------------------------------|------------------------------|-----------------|------------------------------|
| 60/56 (17.6/16.4) | 1200 (34) | B | (2) 14 x 20 (36 x 51) |
| 80/75 (23.4/22.0) | 1200 (34) | B | (2) 14 x 20 (36 x 51) |
| 80/75 (23.4/22.0) | 1600 (45) | C | (2) 14 x 20 (36 x 51) |
| 100/95 (29.3/27.3) | 2000 (57) | C | (2) 14 x 20 (36 x 51) |
| 120/112 (35.1/32.8) | 2000 (57) | D | (2) 14 x 20 (36 x 51) |

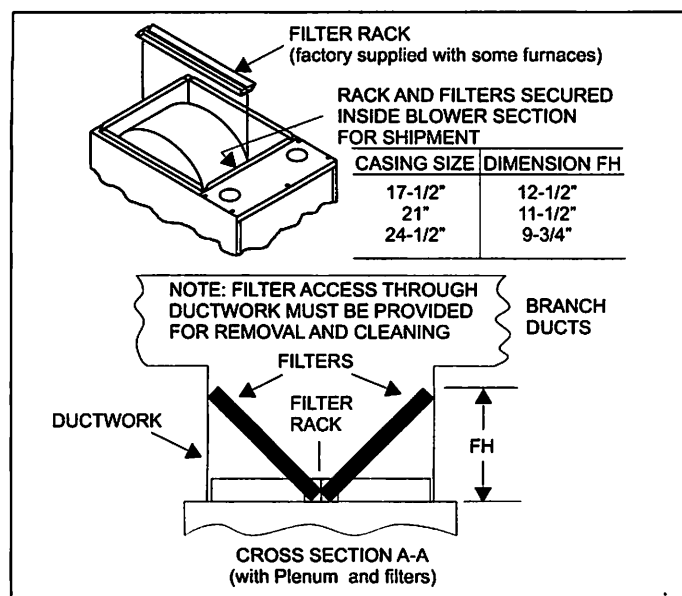


FIGURE 4: Accessory Downflow Filter Rack

Downflow Filters

A top return filter rack is supplied with the furnace. Two standard filters are supplied with some units. Downflow furnaces typically are installed with the filters located above the furnace, extending into the return air plenum or duct. Any branch duct (rectangular or round duct) attached to the plenum must attach to the vertical plenum above the filter height. Refer to Figure 4 for proper installation.

Filters(s) may be located in the duct system external to the furnace using an external duct filter box attached to the furnace plenum or at the end of the duct in a return filter grille(s). The use of straps and / or supports is required to support the weight of the external filter box. Refer to Figure 5.

If the accessory electronic air cleaner is installed, be sure the air cleaner is designed to accommodate the furnace CFM (cm/m) and the air cleaner is installed so it does not obstruct the return airflow. Consideration should be given when locating the air cleaner for maintenance and temperatures should the indoor fan motor fail to operate. The use of straps and / or supports is required to support the weight of the electronic air cleaner. It is recommended that the air cleaner not be located within 12 inches (30.5 cm) from the top of the return air opening on the furnace. Refer to the instructions supplied with the electronic air cleaner.

CAUTION

All loose accessories shipped with the furnace must be removed from the blower compartment, prior to installation.

If pleated media air filters or any filter that has a large pressure drop is installed in the return air duct system be sure that the pressure drop caused by the air filter will not prevent the furnace from operating within the rise range specified on the rating plate. If the furnace does not operate within the specified rise range then a larger air filter or an air filter that has a lower pressure drop must be installed. Refer to Figures 4 & 5 and furnace accessories for accessory external filter kit options.

IMPORTANT: For easier filter access in a downflow configuration, a removable access panel is recommended in the vertical run of the return air plenum immediately above the furnace.

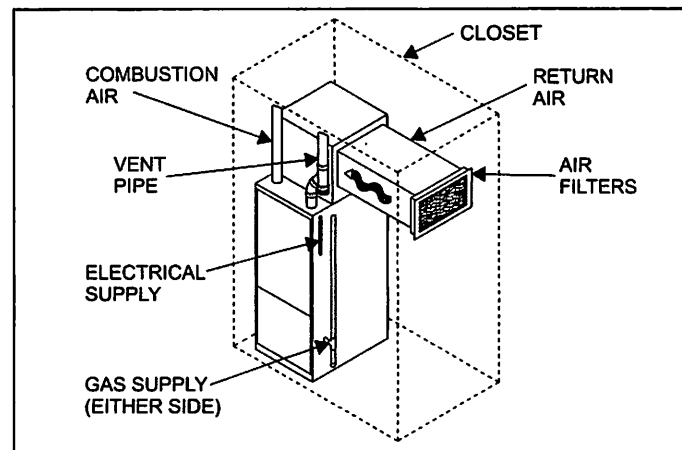


FIGURE 5: Return Filter Grille and Return Duct Installation

Accessory External Filter Installation

1. Install the return filter rack on the top of the furnace return air opening. Secure the filter rack to the front and back flanges with screws. The return air plenum can be placed over the filter rack and the branch ducts (rectangular ducts and / or round ducts) can be attached to the plenum. Route the combustion air and the vent PVC pipes around the access panels for the filters.
2. Install the filter(s) provided or you may install Permanent washable filters. Filter should extend through the entire length of the filter rack to prevent air from bypassing the filter. Make sure that any air filter that is installed in the furnace does not cause an excessive amount of pressure drop. Refer to Table 18 for air filter performance and pressure drops.

IMPORTANT: Air velocity through throwaway type filters must not exceed 300 feet per minute (1.52 m/m). All velocities over this require the use of high velocity filters. Refer to Table 18.

CAUTION

All installations must have a filter installed.

HORIZONTAL APPLICATION

Horizontal Filters

All filters and mounting provision must be field supplied. Filters(s) may be located in the duct system external to the furnace or in a return filter grille(s). Filters(s) may be located in the duct system using an external duct filter box attached to the furnace plenum. Filters must be a minimum distance of 18" (45.8 cm) from the furnace. Any branch duct (rectangular or round duct) attached to the plenum must attach to the vertical plenum above the filter height. The use of straps and / or supports is required to support the weight of the external filter box. An accessory filter rack is available. Refer to Figure 4 and the instructions supplied with the furnace accessory external filter kit options.

ATTIC INSTALLATION

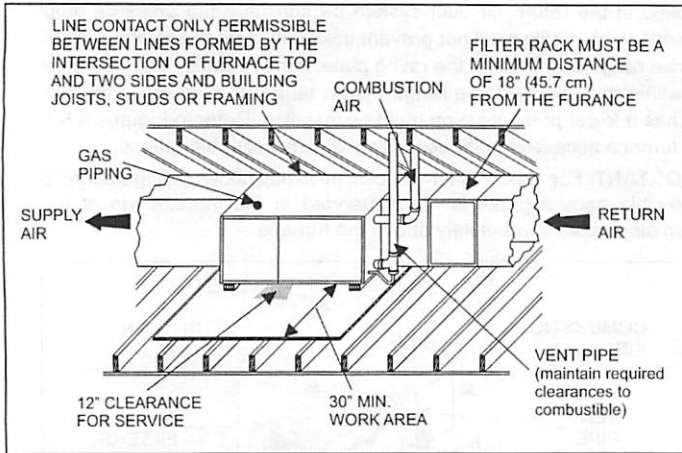


FIGURE 6: Typical Attic Installation

This appliance is design certified for line contact when the furnace is installed in the horizontal left or right position. The line contact is only permissible between lines are formed by the intersection of the top and two sides of the furnace and the building joists, studs or framing. This line may be in contact with combustible material.

IMPORTANT: In either a horizontal left or right installation, a minimum of 8" (20.3 cm) clearance is required beneath the furnace to allow for the installation of the condensate trap and drain pipe. Refer to "CONDENSATE PIPING" section of this manual for more information.

WARNING

When a furnace is installed in an attic or other insulated space, keep all insulating materials at least 12 inches (30.5 cm) away from furnace and burner combustion air openings.

CAUTION

If this furnace is installed over a finished space, a condensate safety pan must be installed.

SUSPENDED FURNACE / CRAWL SPACE INSTALLATION

The furnace can be hung from floor joists or installed on suitable blocks or pad. Blocks or pad installations shall provide adequate height to ensure the unit will not be subject to water damage. Units may also be suspended from rafters or floor joists using rods, pipe angle supports or straps. Angle supports should be placed at the supply air end and near the blower deck. Do not support at return air end of unit. All four suspension points must be level to ensure quiet furnace operation. When suspending the furnace use a secure a platform constructed of plywood or other building material secured to the floor joists. Refer top Figure 7 for typical crawl space installation.

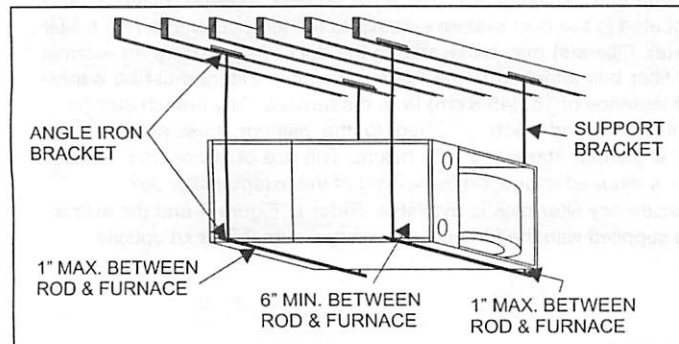


FIGURE 7: Typical Suspended Furnace / Crawl Space Installation

CAUTION

In any application where temperatures below freezing are possible, see "BELOW FREEZING LOCATIONS".

SECTION IV: GAS PIPING

GAS SAFETY

DANGER

An overpressure protection device, such as a pressure regulator, must be installed in the gas piping system upstream of the furnace and must act to limit the downstream pressure to the gas valve so it does not exceed 0.5 PSI {14" w.c. (3.48 kPa)}. Pressures exceeding 0.5 PSI {14" w.c. (3.48 kPa)} at the gas valve will cause damage to the gas valve, resulting in a fire or explosion or cause damage to the furnace or some of its components that will result in property damage and loss of life.

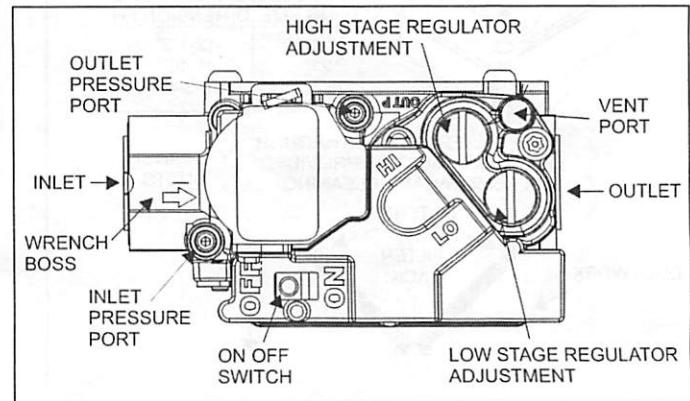


FIGURE 8: Gas Valve

IMPORTANT: Plan your gas supply before determining the correct gas pipe entry. Use 90-degree service elbow(s), or short nipples and conventional 90-degree elbow(s) to enter through the cabinet access holes.

GAS PIPING INSTALLATION

Properly sized wrought iron, approved flexible or steel pipe must be used when making gas connections to the unit. If local codes allow the use of a flexible gas appliance connection, always use a new listed connector. Do not use a connector that has previously serviced another gas appliance.

Some utility companies or local codes require pipe sizes larger than the minimum sizes listed in these instructions and in the codes. The furnace rating plate and the instructions in this section specify the type of gas approved for this furnace - only use those approved gases. The installation of a drip leg and ground union is required. Refer to Figure 9.

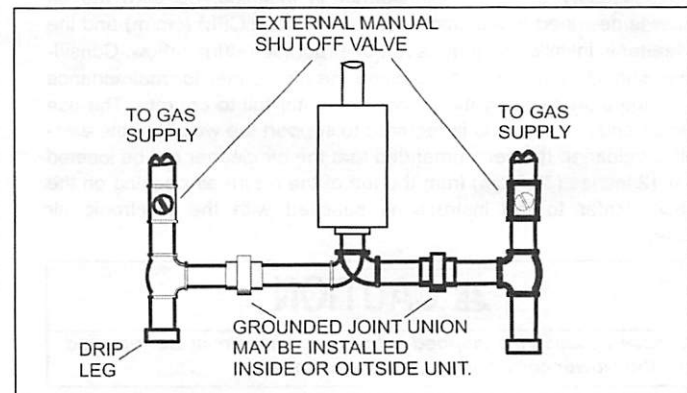


FIGURE 9: Downflow Gas Piping

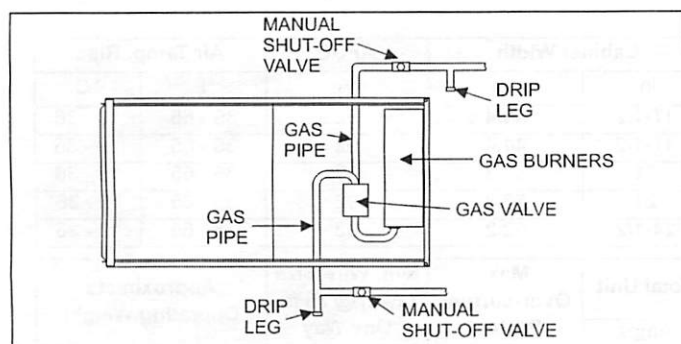


FIGURE 10: Horizontal Gas Piping

IMPORTANT: An accessible manual shut-off valve must be installed upstream of the furnace gas controls and within 6 feet (1.8 m) of the furnace.

The furnace must be isolated from the gas supply piping system by closing its individual external manual shut-off valve during any pressure testing of the gas supply piping system at pressures equal to or greater than 1/2 psig (3.5 kPa).

CAUTION

The gas valve body is a very thin casting that can take any limited external force. Never apply a pipe wrench to the body of the gas valve when installing piping. A wrench must be placed on the octagonal hub located on the gas inlet side of the valve. Placing a wrench to the body of the gas valve will damage the valve causing improper operation and/or the valve to leak.

Gas piping may be connected from either side of the furnace using any of the gas pipe entry knockouts on both sides of the furnace. Refer to Figure 3 dimensions.

TABLE 6: High Altitude Conversion

| Type Of Gas | Orifice at Sea Level | 2,000 ft. (610 m) | 3,000 ft. (914 m) | 4,000 ft. (1219 m) |
|-------------|----------------------|-------------------|-------------------|--------------------|
| Natural | #45 | #46 | #47 | #47 |
| Propane | #55 | #55 | #55 | #55 |

| Type Of Gas | 5,000 ft. (1524 m) | 6,000 ft. (1829 m) | 7,000 ft. (2134 m) | 8,000 ft. (2438 m) |
|-------------|--------------------|--------------------|--------------------|--------------------|
| Natural | #47 | #48 | #48 | #49 |
| Propane | #56 | #56 | #56 | #56 |

| Type Of Gas | 9,000 ft. (2743 m) | 10,000 ft. (3048 m) |
|-------------|--------------------|---------------------|
| Natural | #49 | #50 |
| Propane | #56 | #57 |

GAS ORIFICE CONVERSION FOR PROPANE (LP)

This furnace is constructed at the factory for natural gas-fired operation, but may be converted to operate on propane (LP) gas by using a factory-supplied LP conversion kit. Follow the instructions supplied with the LP kit. Refer to Table 7 or the instructions in the propane (LP) conversion kit for the proper gas orifice size.

HIGH ALTITUDE GAS ORIFICE CONVERSION

This furnace is constructed at the factory for natural gas-fired operation at 0 – 2,000 ft. (0 m – 610 m) above sea level.

The gas orifices on this furnace must be changed in order to maintain proper and safe operation when the furnace is installed in a location where the altitude is greater than 2,000 ft. (610 m) above sea level on natural gas or the altitude is greater than 4,000 ft. (1219 m) above sea level on propane (LP) gas. Refer to Table 7 or the instructions in the high altitude conversion kit or ANSI Z223.1 NFPA 54 National Fuel Gas Code or in Canada CAN/CGA-B149.1-00 Natural Gas and Propane Installation Code for proper orifice size.

HIGH ALTITUDE PRESSURE SWITCH CONVERSION

For installation in locations where the altitude is less than 4,500 feet (1372 m), it is not required that the pressure switch be changed, provided the maximum vent/intake pipe lengths are adjusted as shown in Table 10. For altitudes above 4,500 feet (137 m), refer to Instructions in the Accessory High Altitude Kit.

TABLE 5: High Altitude Pressure Switch Application

| Input (MBH) Downflow Models | Output (MBH) | 4,500 To 10,000 Ft. |
|--------------------------------|-----------------|------------------------|
| 60/1200 | 56 | 1PS0507 |
| 80/1200 | 75 | 1PS0508 |
| 80/1600 | 75 | 1PS0509 |
| 100/2000 | 93 | 1PS0510 |
| 120/2000 | 112 | 1PS0511 |

⚠ DANGER

PROPANE AND HIGH ALTITUDE CONVERSION KITS

It is very important to choose the correct kit and/or gas orifices for the altitude and the type of gas for which the furnace is being installed.

Only use natural gas in furnaces designed for natural gas. Only use propane (LP) gas for furnaces that have been properly converted to use propane (LP) gas. Do not use this furnace with butane gas.

Incorrect gas orifices or a furnace that has been improperly converted will create an extremely dangerous condition resulting in premature heat exchanger failure, excessive sooting, high levels of carbon monoxide, personal injury, property damage, a fire hazard and/or death.

High altitude and propane (LP) conversions are required in order for the appliance to satisfactorily meet the application.

An authorized distributor or dealer must make all gas conversions.

In Canada, a certified conversion station or other qualified agency, using factory specified and/or approved parts, must perform the conversion. The installer must take every precaution to insure that the furnace has been converted to the proper gas orifice size when the furnace is installed. Do not attempt to drill out any orifices to obtain the proper orifice size. Drilling out a gas orifice will cause misalignment of the burner flames, causing premature heat exchanger burnout, high levels of carbon monoxide, excessive sooting, a fire hazard, personal injury, property damage and/or death.

SECTION V: ELECTRICAL POWER

| Input / High Fire | | Output / Low Fire | | Nominal Airflow | | Cabinet Width | | AFUE | Air Temp. Rise | |
|-------------------|---------|-------------------|-------------|-----------------|---------------------|---------------|------|------|----------------|---------|
| MBH | kW | MBH | kW | CFM | m ³ /min | In. | cm | % | °F | °C |
| 60 / 39 | 18 / 11 | 56 / 36 | 16.1 / 10.6 | 1200 | 34.0 | 17-1/2 | 44.4 | 92 | 35 - 65 | 19 - 36 |
| 80 / 52 | 23 / 15 | 75 / 49 | 21.7 / 14.4 | 1200 | 34.0 | 17-1/2 | 44.4 | 92 | 35 - 65 | 19 - 36 |
| 80 / 52 | 23 / 15 | 75 / 49 | 21.7 / 14.4 | 1600 | 45.3 | 21 | 53.3 | 92 | 35 - 65 | 19 - 36 |
| 100 / 65 | 29 / 19 | 93 / 61 | 27.3 / 17.9 | 2000 | 56.6 | 21 | 53.3 | 92 | 35 - 65 | 19 - 36 |
| 120 / 78 | 35 / 23 | 112 / 74 | 32.8 / 21.7 | 2000 | 56.6 | 24-1/2 | 62.2 | 92 | 35 - 65 | 19 - 36 |

| Max. Outlet Air Temp. | | Blower | | Blower Size | | Total Unit | Max. Over-current Protect | Min. Wire Size (awg) @ 75 ft. One Way | Approximate Operating Weight |
|-----------------------|------|--------|------|-------------|-------------|------------|---------------------------|---------------------------------------|------------------------------|
| °F | °C | HP | Amps | In. | cm | Amps | | | |
| 165 | 73.9 | 1/2 | 7.0 | 11 x 8 | 27.9 x 20.3 | 9 | 20 | 14 | |
| 165 | 73.9 | 1/2 | 7.0 | 11 x 8 | 27.9 x 20.3 | 9 | 20 | 14 | |
| 165 | 73.9 | 3/4 | 10.2 | 11 x 10 | 27.9 x 25.4 | 12 | 20 | 14 | |
| 165 | 73.9 | 1 | 12.7 | 11 x 11 | 27.9 x 27.9 | 14 | 20 | 12 | |
| 165 | 73.9 | 1 | 12.7 | 11 x 11 | 27.9 x 27.9 | 14 | 20 | 12 | |

Annual Fuel Utilization Efficiency (AFUE) numbers are determined in accordance with DOE Test procedures.

Wire size and over current protection must comply with the National Electrical Code (NFPA-70-latest edition) and all local codes.

The furnace shall be installed so that the electrical components are protected from water.

* Wire size and overcurrent protection must comply with the National Electric Code.

NOTES:

1. For altitudes above 2000 ft. (609 m) reduce capacity 4% for each 1000 ft. above sea level.
2. Wire size based on copper conductors, 140° F (60°C), 3% voltage drop.
3. Continuous return air temperature must not be below 55°F (12.8° C).

ELECTRICAL POWER CONNECTIONS

Field wiring to the unit must be grounded. Electric wires that are field installed shall conform to the temperature limitation of 63°F (35°C) rise when installed in accordance with these instructions. Refer to Table 8 in these instructions for specific furnace electrical data.

CAUTION

Use copper conductors only.

SUPPLY VOLTAGE CONNECTIONS

IMPORTANT: The power connection leads and wiring box may be relocated to the left side of the furnace. Remove the screws and cut wire tie holding excess wiring. Reposition on the left side of the furnace and fasten using holes provided.

1. Provide a power supply separate from all other circuits. Install overcurrent protection and disconnect switch per local/national electrical codes. The switch should be close to the unit for convenience in servicing. With the disconnect or fused switch in the OFF position, check all wiring against the unit wiring label. Refer to the wiring diagram shown in Figure 10.
2. Remove the screws retaining the junction box cover. Route the power wiring through the opening in the unit into the junction box with a conduit connector or other proper connection. In the junction box there will be three wires, a Black Wire, a White Wire and a Green Wire. Connect the power supply as shown on the unit-wiring label on the inside of the blower compartment door or Figure 12. The black furnace lead must be connected to the L1 (hot) wire from the power supply. The white furnace lead must be connected to neutral. Connect the green furnace lead (equipment ground) to the power supply ground. An alternate wiring method is to use a field provided 2" (5.08 cm) x 4" (10.2 cm) box and cover on the outside of the furnace. Route the furnace leads into the box using a protective bushing where the wires pass through the furnace panel. After making the wiring connections replace the wiring box cover and screws.
3. The furnace's control system requires correct polarity of the power supply and a proper ground connection. If the power supply polarity is reversed, the control board will flash 9 times. The furnace will not operate until the polarity is corrected. Refer to "Furnace Diagnostics" section of the "User's Information, Maintenance, & Service Manual provided with this furnace.

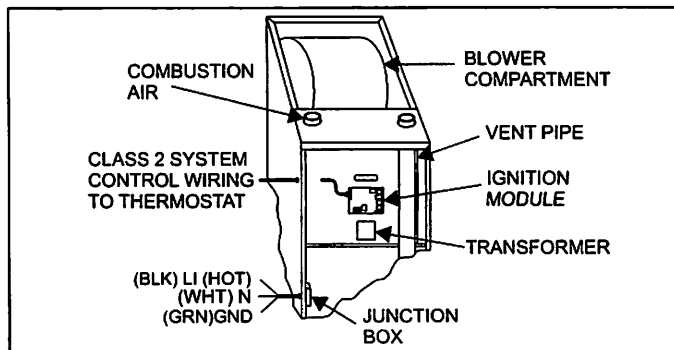


FIGURE 11: Electrical Wiring

LOW VOLTAGE CONTROL WIRING CONNECTIONS

Install the field-supplied thermostat by following the instructions that come with the thermostat. With the thermostat set in the OFF position and the main electrical source disconnected, connect the thermostat wiring from the wiring connections on the thermostat to the terminal strip on the furnace control board, as shown in Figures 13, 14, or 15. Electronic thermostats may require the common wire to be connected to the "C" terminal as shown in Figures 13, 14 or 15. Apply strain relief to thermostat wires passing through cabinet. If air conditioning equipment is installed, use thermostat wiring to connect the Y and C terminals on the furnace control board to the condensing unit (unit outside) as shown in Figures 13, 14 or 15.

IMPORTANT: Set the heat anticipator in the room thermostat to 0.45 amps. Setting it lower will cause short cycles. Setting it higher will cause the room temperature to exceed the set points.

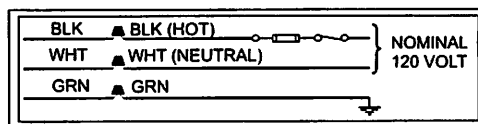


FIGURE 12: Line Wiring Connections

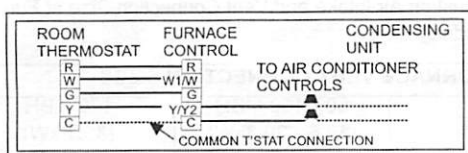


FIGURE 13: Single Stage Heat Thermostat Connections

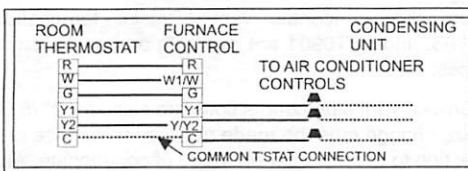


FIGURE 14: Single Stage Heating and Two-Stage Cooling Thermostat Connections

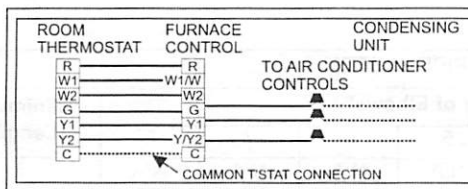


FIGURE 15: Two Stage Heating and Two-Stage Cooling Thermostat Connections

IMPORTANT: Some electronic thermostats do not have adjustable heat anticipators. They may have other type cycle rate adjustments. Follow the thermostat manufacturer's instructions.

The 24-volt, 40 VA transformer is sized for the furnace components only, and should not be connected to power auxiliary devices such as humidifiers, air cleaners, etc. The transformer may provide power for an air conditioning unit contactor.

Using a Single-Stage Heat Thermostat with the Furnace - This two-stage furnace may be used with a single-stage thermostat. Connect the thermostat as shown in Figure 13. Place the "W2 Delay" jumper in the 10 minute, 15 minute or 20 minute position. If the jumper is left on the "OFF" pins, the furnace will operate only in low fire.

ACCESSORY CONNECTIONS

The furnace control will allow power-switching control of various accessories. Refer to Figure 16, for connection details.

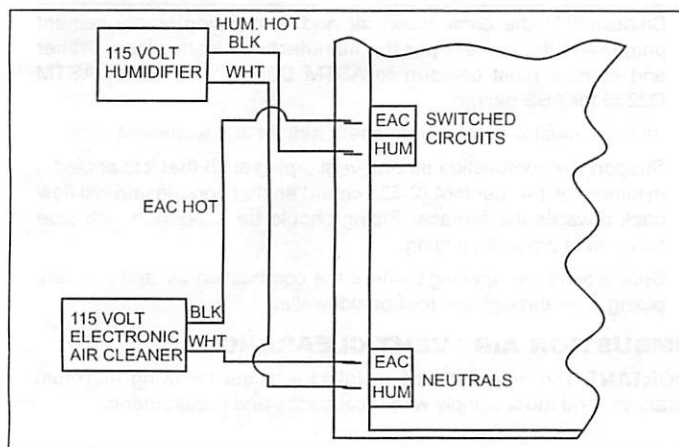


FIGURE 16: Accessory Connections

ELECTRONIC AIR CLEANER CONNECTION

Two 1/4" (0.64 cm) spade terminals (NEUTRAL) for electronic air cleaner connections are located on the control board. The terminals provide 115 VAC (1.0 amp maximum) during circulating blower operation.

HUMIDIFIER CONNECTION

Two 1/4" (0.64 cm) spade terminals (NEUTRAL) for humidifier connections are located on the control board. The terminals provide 115 VAC (1.0 amp maximum) during heating system operation.

TWINNING

These furnaces are not to be twinned. If more than one furnace is needed in an application, each furnace must have its own complete duct system and its own wall thermostat.

SECTION VI: COMBUSTION AIR AND VENT SYSTEM

COMBUSTION AIR AND VENT SAFETY

This Category IV, dual certified direct vent furnace is designed for residential application. It may be installed without modification to the condensate system in a basement, garage, equipment room, alcove, attic or any other indoor location provided the space temperature is 32 °F (0°C) or higher and where all required clearance to combustibles and other restrictions are met. The combustion air and the venting system must be installed in accordance with Section 5.3, Air for Combustion and Ventilation, of the National Fuel Gas Code Z223.1/NFPA 54 (latest edition), or Sections 7.2, 7.3 or 7.4 of CSA B149.1, National Gas and Propane Codes (latest edition) or applicable provisions of the local building code and these instructions.

IMPORTANT: The "VENT SYSTEM" must be installed as specified in these instructions for Residential and Non HUD Modular Homes. The sealed combustion air / vent system is the only configuration that can be installed in a Non HUD Modular Home.

WARNING

This furnace may not be common vented with any other appliance, since it requires separate, properly sized air intake and vent lines. The furnace shall not be connected to any type of B, BW or L vent or vent connector, and not connected to any portion of a factory-built or masonry chimney. The furnace shall not be connected to a chimney flue serving a separate appliance designed to burn solid fuel.

CAUTION

When combustion air pipe is installed above a suspended ceiling or when it passes through a warm and humid space, the pipe must be insulated with 1/2" Armaflex or other heat resistant type insulation. Vent piping must be insulated with 1/2" insulation if it will be subjected to freezing temperatures such as routing through unheated areas or through an unused chimney.

COMBUSTION AIR/VENT PIPE SIZING

Select the correct size from Table 9. The size will be determined by a combination of furnace model, total length of run, and the number of elbows required. The following rules must also be observed.

1. Long radius (sweep) elbows are required for all units.
2. Elbows are assumed to be 90 degrees. Two 45-degree elbows count as one 90-degree elbow.
3. Elbow count refers to combustion air piping and vent piping separately. For example, if the table allows for 5 elbows, this will allow a maximum of 5 elbows in the combustion air piping and a maximum of 5 elbows in the vent piping.
4. Three vent terminal elbows (two for vent pipe and one for air intake pipe) are already accounted for as vent termination.
5. Combustion air and vent piping must be of the same diameter.

6. All combustion air/vent pipe and fittings must conform to American National Standards Institute (ANSI) standards and American Society for Testing and Materials (ASTM) standards D1785 (Schedule 40 PVC), D2665 (PVC-DWV), F891 (PVC-DWV Cellular Core), D2241 (SDR-21 and SDR-26 PVC), D2261 (ABS-DWV), or F628 (Schedule 40 ABS. Pipe cement and primer must conform to ASTM Standards D2564 (PVC) or D2235 (ABS).
7. The use of flexible connectors or no hub connectors in the vent system is not allowed. This type connection is allowed in the combustion air pipe near the furnace for air conditioning coil accessibility.
8. Sidewall horizontal vent terminals and roof mounted vertical terminals may be field fabricated. Standard PVC/SRD fittings may be used. Terminal configuration must comply as detailed in this section.

IMPORTANT: For the minimum vent length see Table 10.
For the maximum vent length see Table 10.

TABLE 7: Combustion Air Intake and Vent Connection Size at Furnace (All Models)

| FURNACE VENT CONNECTION SIZES | | |
|-------------------------------|---------------------------------|----------------------|
| Furnace Input | 60 - 100 MBH (17.6 - 29.3kW) | 120 MBH (35.1 kW) |
| Intake Pipe Size | 2" (51mm) | 3" (76 mm) |
| Vent Pipe Size | 2" (51mm) | 3" (76 mm) |

* Vent pipe size must be increased to 3" diameter after connection to furnace on this model.

IMPORTANT: Accessory concentric vent / intake termination kits 1CT0302, 1CT0303, and 1HT0901 are available and approved for use with these furnaces.

IMPORTANT: Furnace vent pipe connections are sized for 2" (5.08 cm). pipe. Any pipe size change must be made outside the furnace casing in a vertical pipe section to allow proper drainage of condensate. An offset using two 45° (degree) elbows may be required for plenum clearance when the vent is increased to 3" (7.62 cm).

TABLE 8: Combustion Air Supply and Vent Piping

| MAXIMUM ELBOWS AND VENT LENGTHS - TWO PIPE SYSTEM | | | | | | | | | | |
|---|--------------------------|---------------------------|----|-----|-----|-----|-----|-----|-----|-------------------|
| Models Input BTUH (kW) | Pipe Size Inches (mm) | Maximum Number of Elbows* | | | | | | | | Minimum Length |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | |
| 60,000 (17.6) | 1-1/2 (38) | 15 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | 5 |
| 60,000 (17.6) | 2 (51) | 60 | 55 | 50 | 45 | 40 | 35 | 25 | 15 | 5 |
| 60,000 (17.6) | 3 (76) | 85 | 80 | 75 | 70 | 65 | 60 | 50 | 40 | 20 |
| 80,000 (23.4)/1200 | 2 (51) | 60 | 55 | 50 | 45 | 40 | 35 | 25 | 15 | 5 |
| 80,000 (23.4)/1200 | 3 (76) | 85 | 80 | 75 | 70 | 65 | 60 | 50 | 40 | 20 |
| 80,000 (23.4)/1600 | 2 (51) | 55 | 50 | 45 | 40 | 35 | 30 | 20 | 10 | 5 |
| 80,000 (23.4)/1600 | 3 (76) | 80 | 75 | 70 | 65 | 60 | 55 | 45 | 35 | 20 |
| 100,000 (29.3) | 2 (51) | 25 | 20 | 15 | 10 | N/A | N/A | N/A | N/A | 5 |
| 100,000 (29.3) | 3 (76) | 80 | 75 | 70 | 65 | 60 | 55 | 45 | 35 | 5 |
| 120,000 (35.1) | 3 (76) | 55 | 50 | 45 | 40 | 35 | 25 | 15 | N/A | 5 |

* Elbow count does not include the elbows required for the termination. See Step 4 under Combustion Air/Vent Pipe Sizing.

NOTE: If installing furnace at altitudes between 2000 - 4500 ft., (609.6 - 1371.6 m) intake and vent pipe length must be reduced by 10 ft. (3.05 m) if the installation requires the maximum allowable intake and vent pipe length, the furnace must be converted for high altitude operation.

COMBUSTION AIR AND VENT PIPING ASSEMBLY

The final assembly procedure for the combustion air and vent piping is as follows:

1. Cut piping to the proper length beginning at the furnace.
2. Deburr the piping inside and outside.
3. Chamfer (bevel) the outer edges of the piping.
4. Dry-fit the vent piping assembly from the furnace to the outside termination checking for proper fit support and slope.
5. Dry-fit the combustion air piping assembly checking for proper fit, support and slope on the following systems:
 - A. Sealed combustion air systems from the furnace to the outside termination.
 - B. Ventilated combustion air systems from the furnace to the attic or crawl space termination.

CAUTION

Solvent cements are flammable and must be used in well-ventilated areas only. Keep them away from heat, sparks and open flames. Do not breathe vapors and avoid contact with skin and eyes.

6. Disassemble the combustion air and vent piping, apply cement primer and the cement per the manufactures instructions. Primer and cement must conform to ASTM D2564 for PVC, or ASTM D2235 for ABS piping.
7. All joints must provide a permanent airtight and watertight seal.
8. Support the combustion air and vent piping such that it is angled a minimum of 1/4" per foot (0.635 cm/m) so that condensate will flow back towards the furnace. Piping should be supported with pipe hangers to prevent sagging.
9. Seal around the openings where the combustion air and / or vent piping pass through the roof or sidewalls.

COMBUSTION AIR / VENT CLEARANCES

IMPORTANT: The vent must be installed with the following minimum clearances, and must comply with local codes and requirements.

VENT CLEARANCES

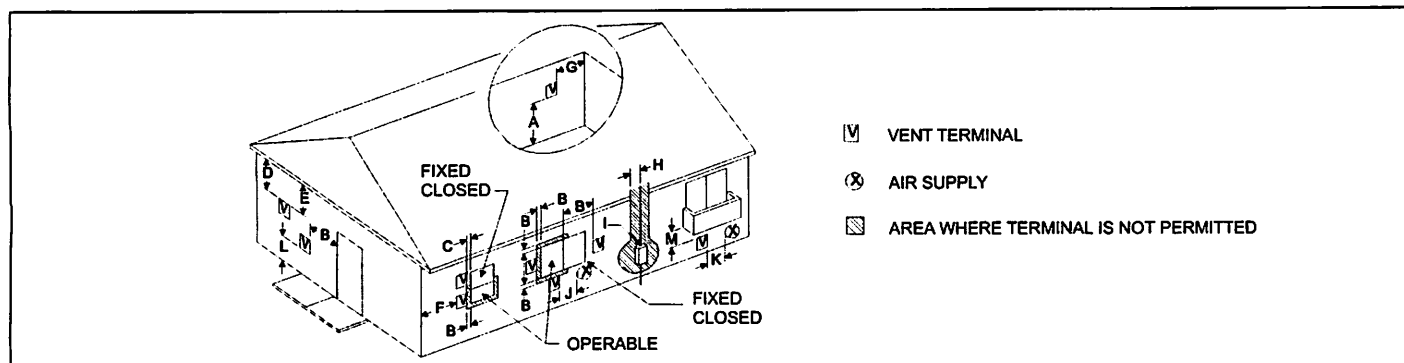


FIGURE 17: Home Layout

| | Canadian Installations ¹ | US Installation ² |
|---|--|---|
| A. Clearance above grade, veranda, porch, deck, or balcony | 12 inches (30 cm) | 12 inches (30 cm) |
| B. Clearance to window or door that may be opened | 12 inches (30 cm) for models <100,000 BTUH (30 kW), 36 inches (91 cm) for models >100,000 BTUH (30 kW) | Two-pipe (direct vent) applications: 9 inches (23 cm) for models <50,000 BTUH (15 kW), 12 inches (30 cm) for models >50,000 BTUH (15 kW). Single-pipe applications: 4 feet. |
| C. Clearance to permanently closed window | 4 Feet | 4 Feet |
| D. Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61 cm) from the center line of the terminal | 4 Feet | 4 Feet |
| E. Clearance to unventilated soffit | 12 Inches | 12 Inches |
| F. Clearance to outside corner | 12 Inches | 12 Inches |
| G. Clearance to inside corner | 12 Inches (two-pipe), 6 Feet (one-pipe) | 12 Inches (two-pipe), 6 Feet (one-pipe) |
| H. Clearance to each side of center line extended above meter/regulator assembly | 3 feet (91 cm) within a height 15 feet (4.5 m) above the meter/regulator assembly | 3 feet (91 cm) within a height 15 feet (4.5 m) above the meter/regulator assembly |
| I. Clearance to service regulator vent outlet | 3 feet (91 cm) | 3 feet (91 cm) |
| J. Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance | 12 inches (30 cm) for models <100,000 BTUH (30 kW), 36 inches (91 cm) for models >100,000 BTUH (30 kW) | Two-pipe (direct vent) applications: 9 inches (23 cm) for models <50,000 BTUH (15 kW), 12 inches (30 cm) for models >50,000 BTUH (15 kW). Single-pipe applications: 4 feet. |
| K. Clearance to a mechanical supply inlet | 6 feet (1.83 m) | 3 feet (91 cm) above if within 10 feet (3 m) horizontally |
| L. Clearance above paved sidewalk or paved driveway located on public property | 7 feet (2.13 m) † | 7 feet (2.13 m) † |
| M. Clearance under veranda, porch, deck, or balcony | 12 inches (30 cm) ‡ | 12 inches (30 cm) ‡ |
| Dryer Vent ** | 3 ft (91.44 cm) | 3 ft (91.44 cm) |
| Plumbing Vent Stack ** | 3 ft (91.44 cm) | 3 ft (91.44 cm) |
| Gas Appliance Vent Terminal ** | 3 ft (91.44 cm) * | 3 ft (91.44 cm) * |
| Vent Termination from any Building Surface | 12" (30.4 cm) | 12" (30.4 cm) |
| Above anticipated snow depth | 12" (30.4 cm) | 12" (30.4 cm) |
| A. Clearance above grade, veranda, porch, deck, or balcony | 12 inches (30 cm) | 12 inches (30 cm) |
| B. Clearance to window or door that may be opened | 12 inches (30 cm) for models <100,000 BTUH (30 kW), 36 inches (91 cm) for models >100,000 BTUH (30 kW) | Two-pipe (direct vent) applications: 9 inches (23 cm) for models <50,000 BTUH (15 kW), 12 inches (30 cm) for models >50,000 BTUH (15 kW). Single-pipe applications: 4 feet. |
| C. Clearance to permanently closed window | 4 Feet | 4 Feet |
| D. Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61 cm) from the center line of the terminal | 4 Feet | 4 Feet |

1. In accordance with the current CSA B149.1-00, Natural Gas and Propane Installation Code.

2. In accordance with the current ANSI Z223.1 / NFPA 54, National Gas Code.

† A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor. For clearance not specified in ANSI Z223.1 / NFPA 54 or CSA B149.1-00.

Clearance in accordance with local installation codes and the requirements of the gas supplier and the manufacturer's Installation Manual.

Any fresh air or make up inlet for dryer or furnace area is considered to be forced air inlet.

Avoid areas where condensate drippage may cause problems such as above planters, patios, or adjacent to windows where steam may cause fogging.

A terminus of a vent shall be either:

Fitted with a cap in accordance with the vent manufacturer's installation instructions, or in accordance with the installation instructions for a special venting system.

* Does not apply to multiple installations of this furnace model. Refer to "VENTING MULTIPLE UNITS" in this section of these instructions.

IMPORTANT: Consideration must be given for degradation of building materials by flue gases. Sidewall termination may require sealing or shielding of building surfaces with a corrosive resistant material to protect against combustion product corrosion. Consideration must be given to wind direction in order to prevent flue products and/or condensate from being blown against the building surfaces. If a metal shield is used it must be a stainless steel material at a minimum dimension of 20 inches. It is recommended that a retaining type collar be used that is attached to the building surface to prevent movement of the vent pipe.

Responsibility for the provision of proper adequate venting and air supply for application shall rest with the installer.

Vent shall extend high enough above building, or a neighboring obstruction, so that wind from any direction will not create a positive pressure in the vicinity of the vent.

VENT SYSTEM

This furnace is certified to be installed with one of two possible vent configurations.

1. Horizontal vent system. This vent system can be installed completely horizontal or combinations of horizontal, vertical, or offset using elbows.
2. Vertical vent system. This vent system can be installed completely vertical or a combination of horizontal, vertical, or offset using elbows.

HORIZONTAL VENT APPLICATIONS AND TERMINATION

When selecting the location for a horizontal combustion air / vent termination, the following should be considered:

1. Observe all clearances listed in vent clearances in these instructions.
2. Termination should be positioned where vent vapors will not damage plants or shrubs or air conditioning equipment.
3. Termination should be located where it will not be affected by wind gusts, light snow, airborne leaves or allow recirculation of flue gases.
4. Termination should be located where it will not be damaged or exposed to flying stones, balls, etc.
5. Termination should be positioned where vent vapors are not objectionable.
6. Horizontal portions of the vent system must slope upwards and be supported to prevent sagging. The vent system may be supported by the use of clamps or hangers secured to a permanent part of the structure every 4 ft. (1.22 m).
7. A vent drain is required when vent passes through any unconditioned space such as an attic or crawl space in order to prevent the accumulation of excess condensate in the inducer motor during operational cycles. Refer to Figures 22 & 23.
8. Sealed combustion air systems must be installed so the vent and the combustion air pipes terminate in the same atmospheric zone. Refer to Figures 21, 22, 23, 24, 25 & 26.

DOWNFLOW VENT ASSEMBLY

1. Place the 2" (5.08 cm) 45° PVC street elbow on the vent connection.
2. Place the 2" (5.08 cm) PVC WYE ("Y") assembly on the 2" (5.08 cm) 45° PVC street elbow.
3. Locate the rubber condensate hose in front of the blower access panel.
4. Slide the hose through the hole in the top cover, and insert the hose on to the barbed fitting on the bottom of the 2" (5.08 cm) PVC WYE ("Y") assembly.

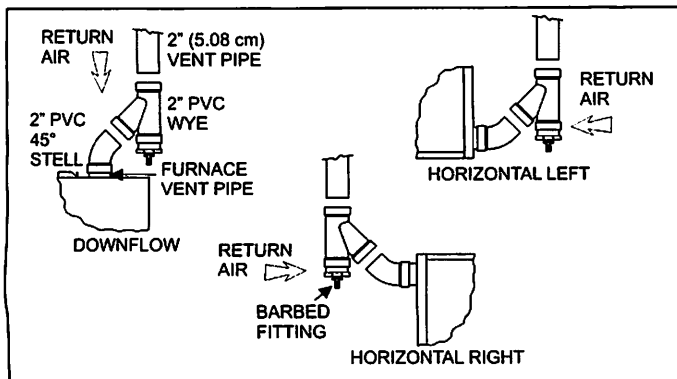


FIGURE 18: Downflow/Horizontal Vent Assembly

HORIZONTAL VENT ASSEMBLY

Horizontal Left Vent Assembly

1. Place the 2" (5.08 cm) 45° PVC street elbow on the vent connection.
2. Place the 2" (5.08 cm) PVC WYE ("Y") assembly on the 2" (5.08 cm) 45° PVC street elbow.
3. Refer to the "DOWNFLOW/HORIZONTAL CONDENSATE INTERNAL DRAIN CONFIGURATIONS" for further details.

Horizontal Right Vent Assembly

1. Place the 2" (5.08 cm) 45° PVC street elbow on the vent connection.
2. Place the 2" (5.08 cm) PVC WYE ("Y") assembly on the 2" (5.08 cm) 45° PVC street elbow.
3. Refer to the "DOWNFLOW/HORIZONTAL CONDENSATE INTERNAL DRAIN CONFIGURATIONS" for further details.

EXTERNAL HORIZONTAL VENT DRAIN (Field Supplied)

When installing the furnace with a horizontal vent configuration that will predominately be in a low ambient condition it is recommended that an external vent drain be installed in the horizontal portion of the venting system. The external vent drain is also recommended for extremely long horizontal vent applications. This is recommended to prevent accumulation of excess condensate in the inducer motor during operational cycles. Refer to Figure 19 for recommended external vent drain configuration and connections.

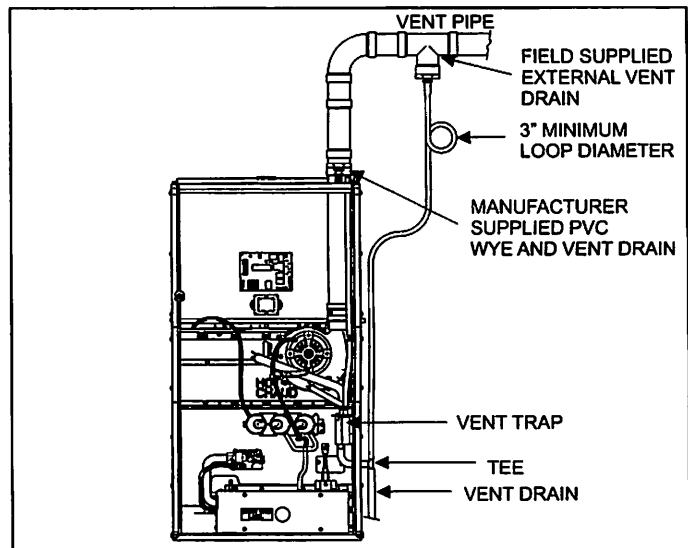


FIGURE 19: External Horizontal Vent Drain

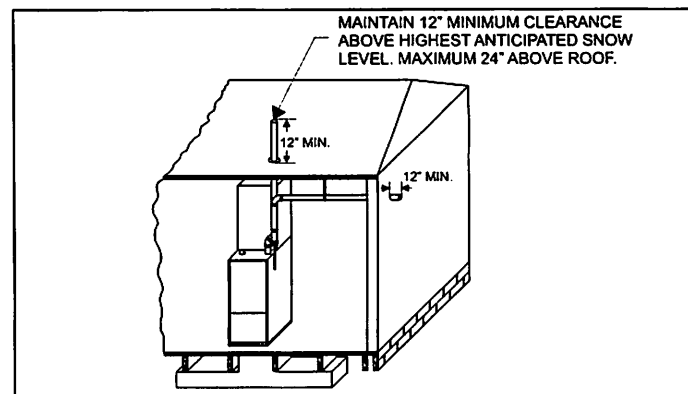


FIGURE 20: Termination Configuration - 1 Pipe

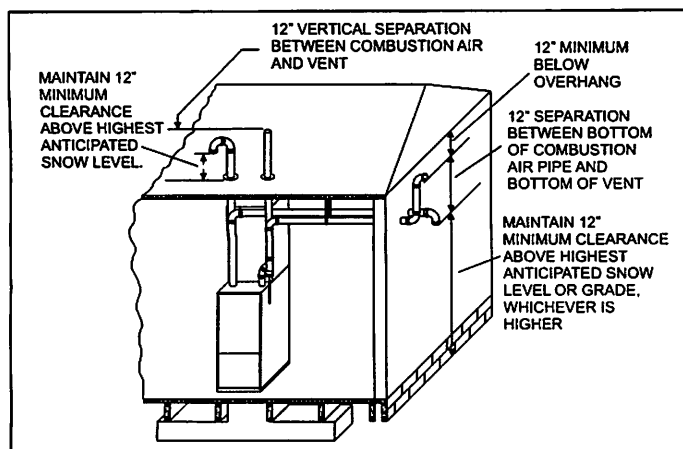


FIGURE 21: Termination Configuration - 2 Pipe

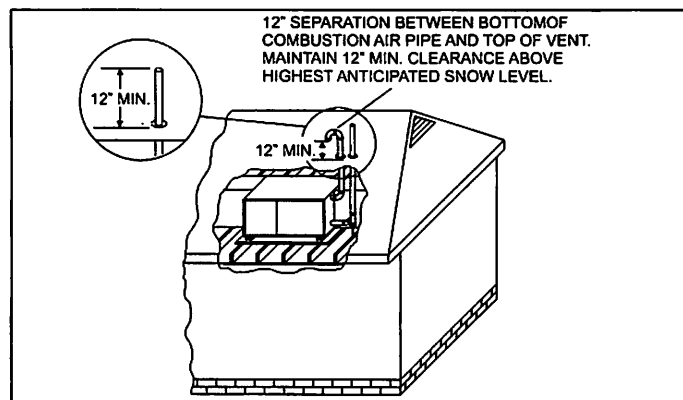


FIGURE 22: Termination Configuration - 2 Pipe Horizontal

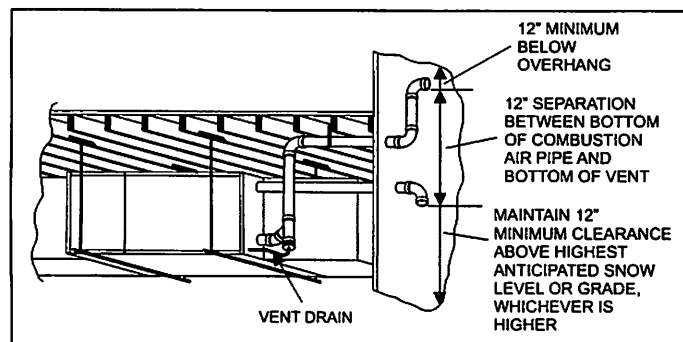


FIGURE 23: Crawl Space Termination Configuration - 2 Pipe

VERTICAL VENT APPLICATIONS AND TERMINATION

Roof mounted vertical terminals may be field fabricated. Standard PVC/ SRD fittings may be used. If installing a vertical venting system through any unconditioned space such as an attic or crawl space it must be insulated.

1. Observe all clearances listed in vent clearances in these instructions.
2. Termination should be positioned where vent vapors are not objectionable.
3. Termination should be located where it will not be affected by wind gusts, light snow, or allow recirculation of flue gases.
4. Termination should be located where it cannot be damaged, plugged or restricted by tree limbs, leaves and branches.
5. Horizontal portions of the vent system must slope upwards and be supported to prevent sagging. The vent system may be supported by the use of clamps or hangers secured to a permanent part of the structure every 4 ft. (1.22 m).

6. A vent drain is required when vent passes through any unconditioned space such as an attic or crawl space in order to prevent the accumulation of excess condensate in the inducer motor during operational cycles. See Figures 20, 21, 22, and 23.

VENTING MULTIPLE UNITS

Only the sealed combustion system can be used for installations requiring more than one furnace in a structure. A separate sealed combustion air pipe and a separate vent pipe must be installed for each furnace. Do not connect more than one furnace to a combustion air pipe or a vent pipe. The combustion air and vent termination must be located as shown in Figures 24 or 25.

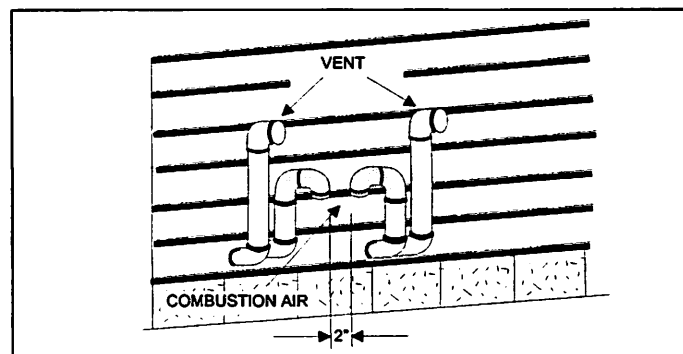


FIGURE 24: Double Horizontal Sealed Combustion Air and Vent Termination

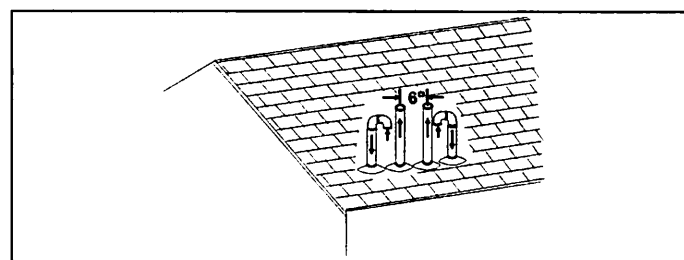


FIGURE 25: Double Vertical Sealed Combustion Air and Vent Termination

COMBUSTION AIR SUPPLY

All installations must comply with Section 5.3, Air for Combustion and Ventilation of the National Fuel Gas Code, ANSI Z223.1 or Sections 7.2, 7.3 or 7.4 of CAN/CGA B149.1 or .2 Installation Code - latest editions.

This furnace is certified to be installed with one of three possible combustion air intake configurations.

1. **OUTDOOR COMBUSTION AIR:** This is a sealed combustion air configuration where the combustion air is supplied through a PVC or ABS pipe that is connected to the PVC coupling attached to the burner box and is terminated in the same atmospheric zone as the vent. This type of installation is approved on all models. Refer to Figures 26 and 28.
2. **AMBIENT COMBUSTION AIR:** Combustion air is supplied from the area surrounding the furnace through the combustion air pipe in the furnace casing. The combustion air and the vent pipes are not terminated in the same atmospheric zone. Refer to Figures 20 & 28 for vent terminations. Refer to "AIR SOURCE FROM INSIDE THE BUILDING" and "VENT AND SUPPLY AIR SAFETY CHECK" for proper installation.
3. **VENTILATED COMBUSTION AIR:** Combustion air is supplied through a PVC or ABS pipe that is connected to the PVC coupling attached to the burner box and is terminated in a ventilated attic or crawl space. The combustion air and the vent pipes are not terminated in the same atmospheric zone. Refer to Figure 28 for crawl space and attic termination. Only the combustion air intake may terminate in the attic. The vent must terminate outside.

Outdoor Combustion Air

Combustion Air Intake/Vent Connections

This installation requires combustion air to be brought in from outdoors. This requires a properly sized pipe (shown in Figures 21, 22 & 23) that will bring air in from the outdoors to the furnace combustion air intake collar on the burner box. The second pipe (shown in Figures 21, 22 & 23) is the furnace vent pipe.

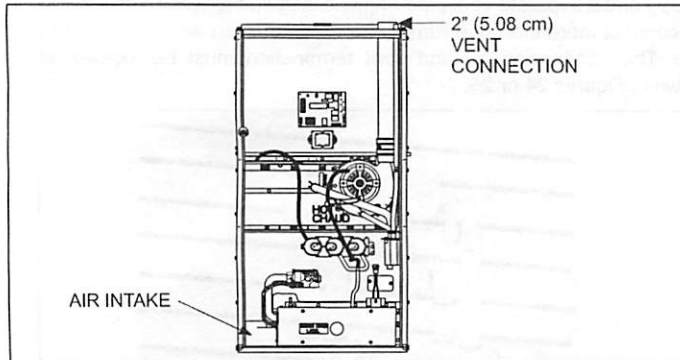


FIGURE 26: Sealed Combustion Air Intake Connection and Vent Connection

The combustion air intake pipe should be located either through the wall (horizontal or side vent) or through the roof (vertical vent). Care should be taken to locate side vented systems where trees or shrubs will not block or restrict supply air from entering the terminal.

Also, the terminal assembly should be located as far as possible from a swimming pool or a location where swimming pool chemicals might be stored. Be sure the terminal assembly follows the outdoor clearances listed in Section #1 "Outdoor Air Contaminants."

The provided 2" diameter rubber sleeve should be installed on the combustion air pipe sticking through the furnace top, when making connection with the outdoor combustion air pipe. This, in combination with the rubber sleeve installed inside the furnace, will facilitate removal of fresh air pipe in front of the blower housing.

Ambient Combustion Air Supply

This type installation will draw the air required for combustion from within the space surrounding the appliance and from areas or rooms adjacent to the space surrounding the appliance. This may be from within the space in a non-confined location or it may be brought into the furnace area from outdoors through permanent openings or ducts. It is not piped directly into the burner box. For downflow models combustion air is brought into the furnace through the unit top panel opening. Do not install a pipe into the combustion air pipe at the top of the furnace. Refer to Figures 20 & 27. If a 3-way transition is provided, the side or bottom openings can also be used for the same purpose.

⚠ WARNING

This type of installation requires that the supply air to the appliance(s) be of a sufficient amount to support all of the appliance(s) in the area. Operation of a mechanical exhaust, such as an exhaust fan, kitchen ventilation system, clothes dryer or fireplace may create conditions requiring special attention to avoid unsatisfactory operation of gas appliances. A venting problem or a lack of supply air will result in a hazardous condition, which can cause the appliance to soot and generate dangerous levels of CARBON MONOXIDE, which can lead to serious injury, property damage and / or death.

An **unconfined space** is not less than 50 cu.ft (1.42 m³) per 1,000 Btu/hr (0.2928 kW) input rating for all of the appliances installed in that area.

Rooms communicating directly with the space containing the appliances are considered part of the unconfined space, if openings are not furnished with doors.

A **confined space** is an area with less than 50 cu.ft (1.42 m³) per 1,000 Btu/hr (0.2928 kW) input rating for all of the appliances installed in that area. The following must be considered to obtain proper air for combustion and ventilation in confined spaces.

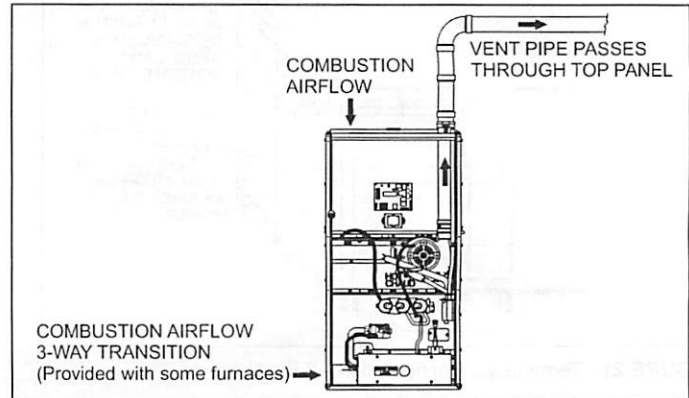


FIGURE 27: Combustion Airflow Path Through The Furnace Casing to the Burner Box

Combustion Air Source From Outdoors

The blocking effects of louvers, grilles and screens must be given consideration in calculating free area. If the free area of a specific louver or grille is not known, refer to Table 11, to estimate free area.

TABLE 9: Estimated Free Area

| | |
|----------------------------------|-------------------------------------|
| Wood or Metal Louvers or Grilles | Wood 20-25%* Metal 60-70% |
| Screens+ | 1/4" (0.635 cm) mesh or larger 100% |

* Do not use less than 1/4" (0.635 cm) mesh

+ Free area or louvers and grilles varies widely; the installer should follow louver or grilles manufacturer's instructions.

Dampers, Louvers and Grilles (Canada Only)

1. The free area of a supply air opening shall be calculated by subtracting the blockage area of all fixed louvers grilles or screens from the gross area of the opening.
2. Apertures in a fixed louver, a grilles, or screen shall have no dimension smaller than 0.25" (0.64 cm).
3. A manually operated damper or manually adjustable louvers are not permitted for use.
4. A automatically operated damper or automatically adjustable louvers shall be interlocked so that the main burner cannot operate unless either the damper or the louver is in the fully open position.

TABLE 10: Free Area

| BTUH Input Rating | Minimum Free Area Required for Each Opening | | |
|-------------------|---|--|-------------------------|
| | Horizontal Duct (2,000 BTUH) | Vertical Duct or Opening to Outside (4,000 BTUH) | Round Duct (4,000 BTUH) |
| 60,000 | 30 sq. in. (76 cm) | 15 sq. in. (38 cm) | 5" (13 cm) |
| 80,000 | 40 sq. in. (102 cm) | 20 sq. in. (51 cm) | 5" (13 cm) |
| 100,000 | 50 sq. in. (102 cm) | 25 sq. in. (64 cm) | 6" (15 cm) |
| 120,000 | 60 sq. in. (152 cm) | 30 sq. in. (76 cm) | 7" (18 cm) |

EXAMPLE: Determining Free Area.

| | | |
|-----------|--|---------------|
| Appliance | 1 Appliance | 2 Total Input |
| 100,000 | + 30,000 = (130,000 ÷ 4,000) = 32.5 Sq. In. Vertical | |
| Appliance | 1 Appliance | 2 Total Input |
| 100,000 | + 30,000 = (130,000 ÷ 2,000) = 65 Sq. In. Horizontal | |

TABLE 11: Unconfined Space Minimum Area in Square Inch

| BTUH Input Rating | Minimum Free Area Required for Each Opening |
|-------------------|---|
| 60,000 | 375 (953 cm ²) |
| 80,000 | 500 (1270 cm ²) |
| 100,000 | 625 (1588 cm ²) |
| 120,000 | 750 (1905 cm ²) |

EXAMPLE: Square feet is based on 8 foot ceilings.

| | | | |
|-------------|------------------|-------------------|---------------|
| 28,000 BTUH | X 50 Cubic Ft. = | 1,400 | = 175 Sq. Ft. |
| 1,000 | | 8' Ceiling Height | |

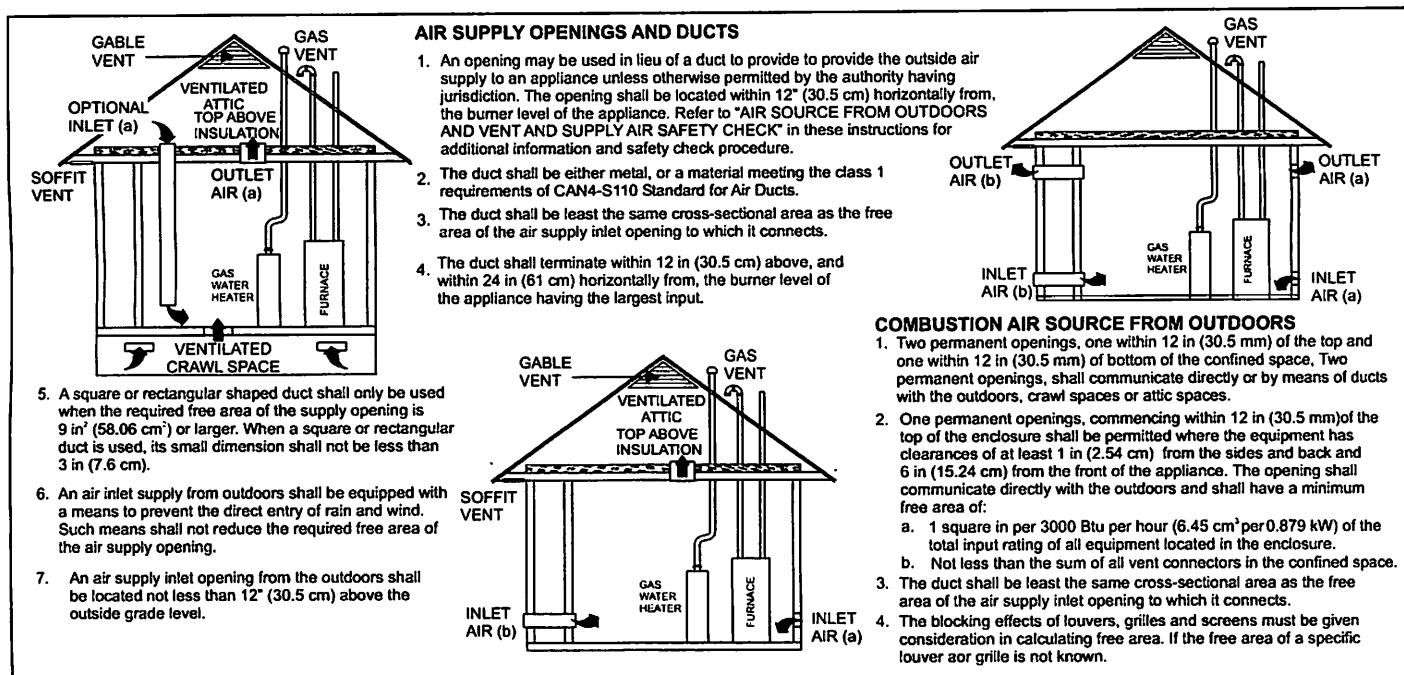


FIGURE 28: Outside and Ambient Combustion Air

Vent and Supply (Outside) Air Safety Check Procedure

Follow the procedure in ANSI Z223.1 National Fuel Gas Code. Refer to the section on the "Recommended Procedure for Safety Inspection of an Existing Appliance" or in Canada B149.1-00 Natural Gas and Propane Installation Code section on "Venting Systems and Air Supply for Appliances" and all local codes. In addition to the procedure specified in ANSI Z223.1, it is recommended that you follow the venting safety procedure below. This procedure is designed to detect an inadequate ventilation system that can cause the appliances in the area to operate improperly causing unsafe levels of Carbon Monoxide or an unsafe condition to occur.

1. Inspect the venting system for proper size and horizontal pitch. Determine that there is no blockage, restriction, leakage, corrosion or other deficiencies, which could cause an unsafe condition
2. Close all building doors and windows and all doors.
3. Turn on clothes dryers and TURN ON any exhaust fans, such as range hoods and bathroom exhausts, so they shall operate at maximum speed. Open the fireplace dampers. Do not operate a summer exhaust fan.
4. Follow the lighting instructions. Place the appliance being inspected in operation. Adjust thermostat so the appliance shall operate continuously.
5. Test each appliance (such as a water heater) equipped with a draft hood for spillage (down-draft or no draft) at the draft hood relief opening after 5 minutes of main burner operation. Appliances that do not have draft hoods need to be checked at the vent pipe as close to the appliance as possible. Use a combustion analyzer to check the CO₂ and CO levels of each appliance. Use a draft gauge to check for a downdraft or inadequate draft condition.
6. After it has been determined that each appliance properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas burning appliance to their normal condition.
7. If improper venting is observed during any of the above tests, a problem exists with either the venting system or the appliance does not have enough combustion air (Supply Air from outside) to complete combustion. This condition must be corrected before the appliance can function safely.

NOTE: An unsafe condition exists when the CO reading exceeds 40 ppm and the draft reading is not in excess of -0.1 in. W.C. (-25 kPa) with all of the appliance(s) operating at the same time.

8. Any corrections to the venting system and / or to the supply (outside) air system must be in accordance with the National Fuel Gas Code Z223.1 or CAN/CGA B149.1-00 Natural Gas and Propane Installation Code (latest editions). If the vent system must be resized, follow the appropriate tables in Appendix G of the above codes or for this appliance, refer to Table 10 of these instructions.

Ventilated Combustion Air

The ventilated attic space or a crawl space from which the combustion air is taken must comply with the requirements specified in "AIR SOURCE FROM OUTDOORS" in this instruction or in Section 5.3, Air for Combustion and Ventilation of the National Fuel Gas Code, ANSI Z223.1 (latest edition). This type installation requires two properly sized pipes. One brings combustion air from a properly ventilated attic space or crawl space and a second pipe that extends from the furnace vent connection (top right of unit) to the exterior of the building. Refer to Table 10 for intake pipe sizing, allowable length and elbow usage. Follow all notes, procedures and required materials in the SEALED COMBUSTION AIR SUPPLY section in these instructions when installing the combustion air pipe from the unit and into a ventilated attic space or crawl space. DO NOT terminate vent pipe in an Attic or Crawl Space.

Ventilated Combustion Air Termination

Refer to Figure 29 for required attic termination for the combustion air intake pipe. For attic termination, use two 90 elbows with the open end in a downward position. Be sure to maintain 12" (30.5 cm) clearance above any insulation, flooring or other material.

A crawl space combustion air installation consists of a straight pipe from the PVC coupling on the burner box that extends into the crawl space and terminates with a 1/4" (0.63 cm) mesh screen and no elbows.

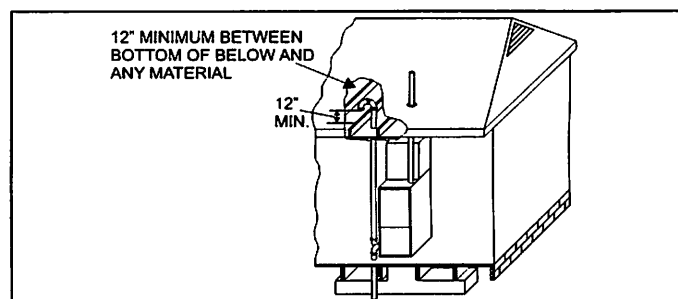


FIGURE 29: Attic Combustion Air Termination

Specially Engineered Installations

The above requirements shall be permitted to be waived where special engineering, approved by the authority having jurisdiction, provides an adequate supply of air for combustion, ventilation and dilution of flue gases.

WARNING

Be sure to instruct the owner not to block this intake pipe.

SECTION VII: CONDENSATE PIPING

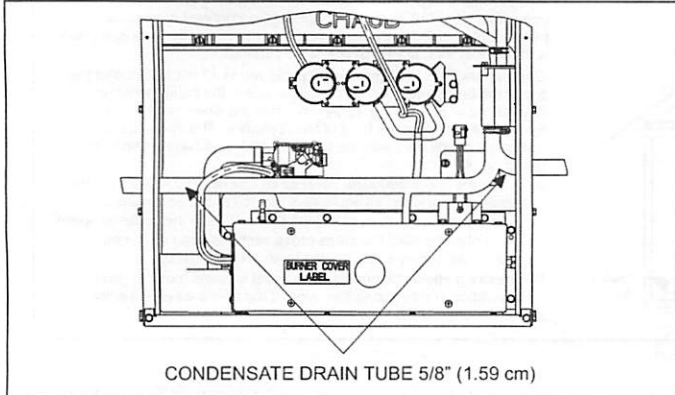


FIGURE 30: Condensate Drain Internal Hose Routing

CONDENSATE DRAIN

The condensate drain connection is provided in the furnace for field installation. It consists of the hoses shown in Table 14, a NPT male connection, and a 1/2" (1.27 cm) female x 3/4" (1.9 cm) PVC slip coupling. Some of the drain hoses will be needed to convert the condensate drain system when the furnace is installed in a horizontal left or right configuration. Refer to Figures 30, 31, 32, 33 & 34 for the condensate hose sizes for condensate drain connections.

IMPORTANT: The condensate drain from the furnace may be connected in common with the drain from an air conditioning coil if allowed by local code.

IMPORTANT: Condensate must be disposed of properly. Follow local plumbing or wastewater codes. The drain line must maintain a 1/4" per foot (0.635 cm per meter) slope to the drain.

CONDENSATE DRAIN TRAP AND DRAIN FREEZE PROTECTION

Special precautions **MUST** be made if installing furnace in an area, which may drop below freezing. This can cause improper operation or damage to the equipment. If the furnace is installed in an area that has the potential of freezing, the drain line and the drain trap must be protected. Use a 3 to 6 watt per foot (0.003 to 0.006 kW per meter) at 115 vac, 40° F (4.4° C) self-regulating, shielded and waterproof heat tape. Wrap the drain trap and the drain line with the heat tape and secure with ties. Follow the heat tape manufacturer's recommendations.

CONDENSATE DRAIN HOSE PART NUMBERS

TABLE 12: Condensate Drain Hose

| Part Number | Hose Number | Description |
|--|-------------|---|
| 028-15156-000 | #1 | Drain tube - Condensate pan (Down flow) |
| 028-15176-000 | #2 | Drain tube - Inducer (Horizontal RT.) |
| -Vent system / Down flow) | | |
| 028-15168-000 | #3 | Drain tube - Inducer (Down flow) |
| 028-15176-000 | #4 | Drain tube - Rain gutter (Down flow & Horizontal RT.) |
| 028-15176-000 | #5 | Drain tube - After Tee (Down flow) |
| 028-15196-000 | #6 | Drain tube - Upper rain gutter (Horizontal LT.) |
| 028-15169-001 | #7 | Drain tube - After Tee (Horizontal RT.) |
| 028-13309-004 | #8 | Drain tube - P-trap (All models) |
| 028-15158-000 | #9 | Drain tube - Vent system (Horizontal LT.) |
| - Before Tee (Horizontal RT.) | | |
| 028-15197-000 | #10 | Drain tube - Condensate pan (Horizontal - drain closer to the front of the furnace, both LT & RT) |
| Hoses #2, #4, #5, along with a barbed nipple, and a barbed tee are part of condensate hose assembly 028-15176-000. | | |

DOWNFLOW/HORIZONTAL CONDENSATE INTERNAL DRAIN CONFIGURATIONS

Downflow

Furnace is shipped with one end of condensate hose #2 left open in the furnace. If the provided Wye's drain is aligned with the opening in the top of the furnace, hose #2 can be used. If it is desired that the Wye and street elbow assembly point away from the opening in the casing top, then the #2 hose will have to be replaced with provided #9 hose. The dogleg end of hose #9 hose should be installed on the drain of the Wye.


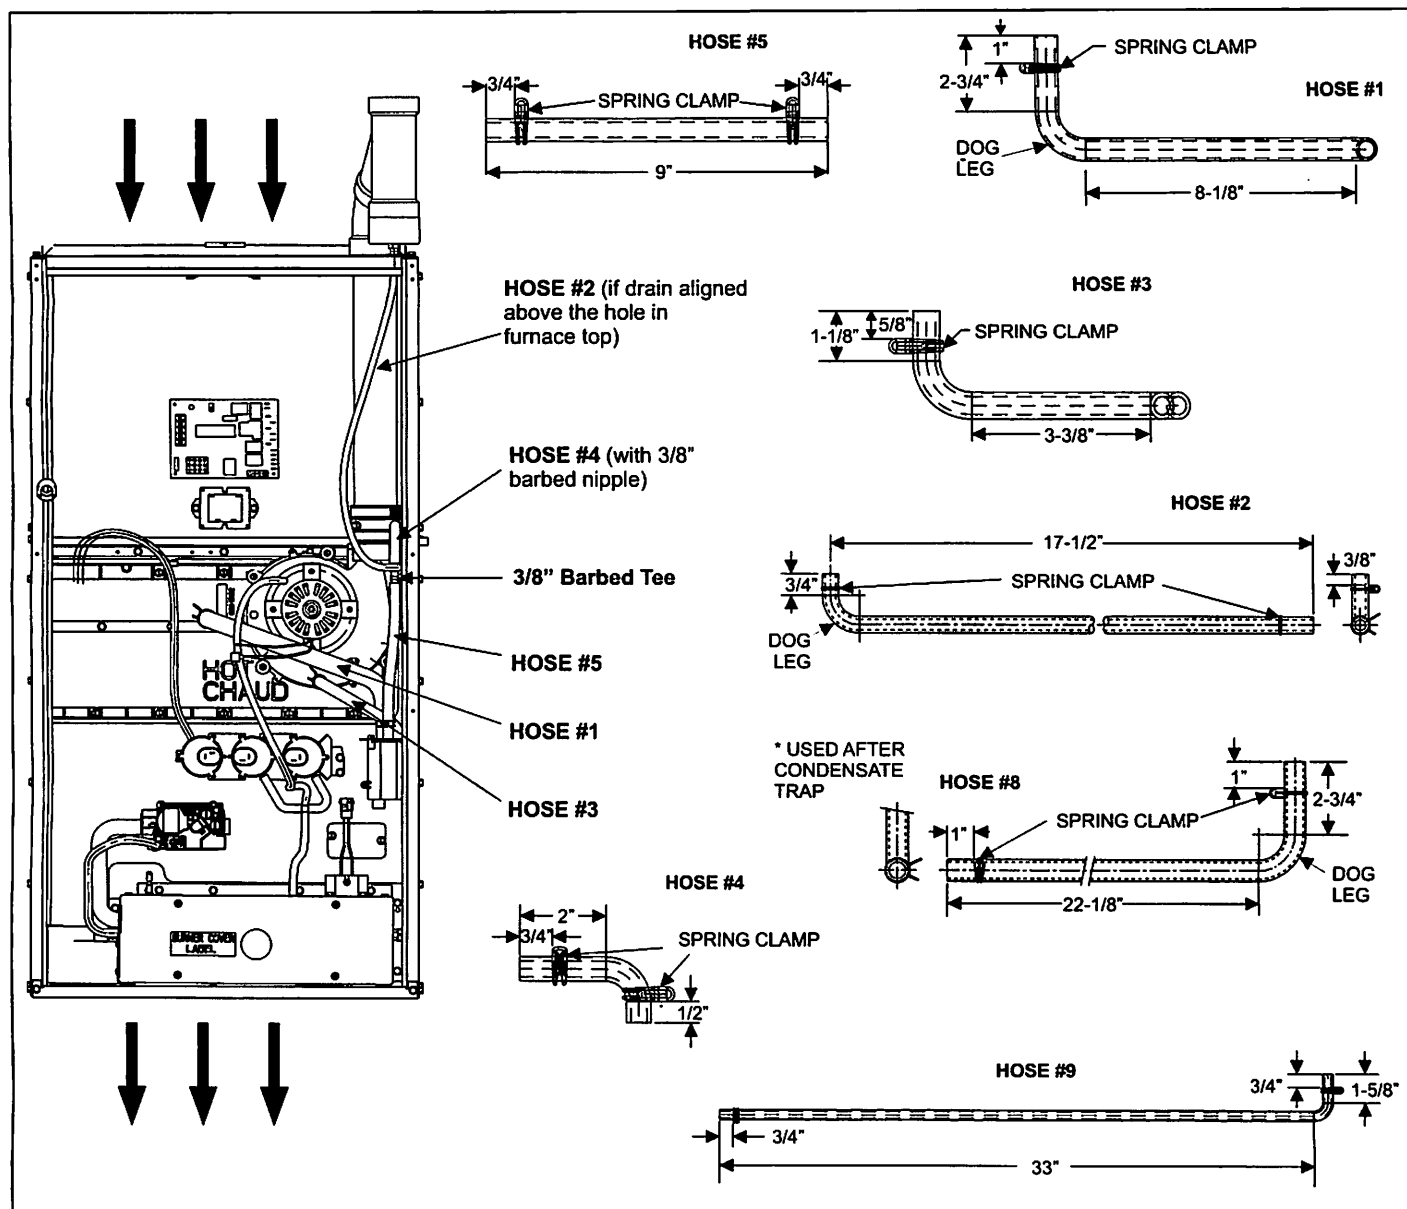


FIGURE 31: Downflow Condensate Drain Hose Configuration

Horizontal Left Air Flow (Inducer Low)

1. Remove all the condensate hoses inside the furnace, leaving the 3/8" barbed nipple and hose # 4, both factory installed, in the rain gutter.
2. Remove the condensate trap and it's bracket from inside the furnace, saving the screws for use later.
3. Remove the yellow cap from the top drain of the rain gutter and install loosely packed 3/8" barbed nipple in it.
4. Remove the large condensate cap from the side of the condensate pan and install it on the middle drain of the condensate pan, from where #1 hose was removed.
5. Install longer dogleg end of hose #10 through the casing hole on to the side drain of the condensate pan, where cap was removed in step #4. Some lubricant may have to be used to facilitate this installation as the hose is designed as a tight fit over the condensate drain. The other, shorter, dogleg end of hose #10 should be installed into the large recessed drain in the condensate trap.
6. Install the condensate trap bracket, with the condensate trap, on to the front side of the furnace, using the screws removed in step #1.
7. Switch the blocked condensate hose to the condensate tap on the bottom of the condensate pan (close to the inducer).
8. Install hose #9 between the external drain on the Wye and the condensate trap; with the dogleg end installed on the protruded (stub) drain of the condensate trap. The length of hose #9 may have to be trimmed to ensure proper condensate drainage.
9. Remove all condensate hoses off the 3/8" barbed tee.
10. Cut 1-1/2" length of straight 3/8" hose off of hose #5 and install it on the 3/8" barbed tee. The other end of the 1-1/2" hose should be installed on the welled opening on the condensate trap.
11. Install one end of the 3/8" barbed tee on hose #4 as shown. Ensure that hose #4 follows a gradual downward slope all the way to the barbed tee.
12. Install hose #6 between the top drain of the rain gutter of the inducer and the remaining open end of 3/8" barbed tee.
13. Ensure that all hoses are properly installed, have no kinks, and are draining properly. All hoses on the condensate trap should be pushed all the way down to ensure against leakage.

FIGURE 32: Horizontal Left Condensate Drain Hose Configuration

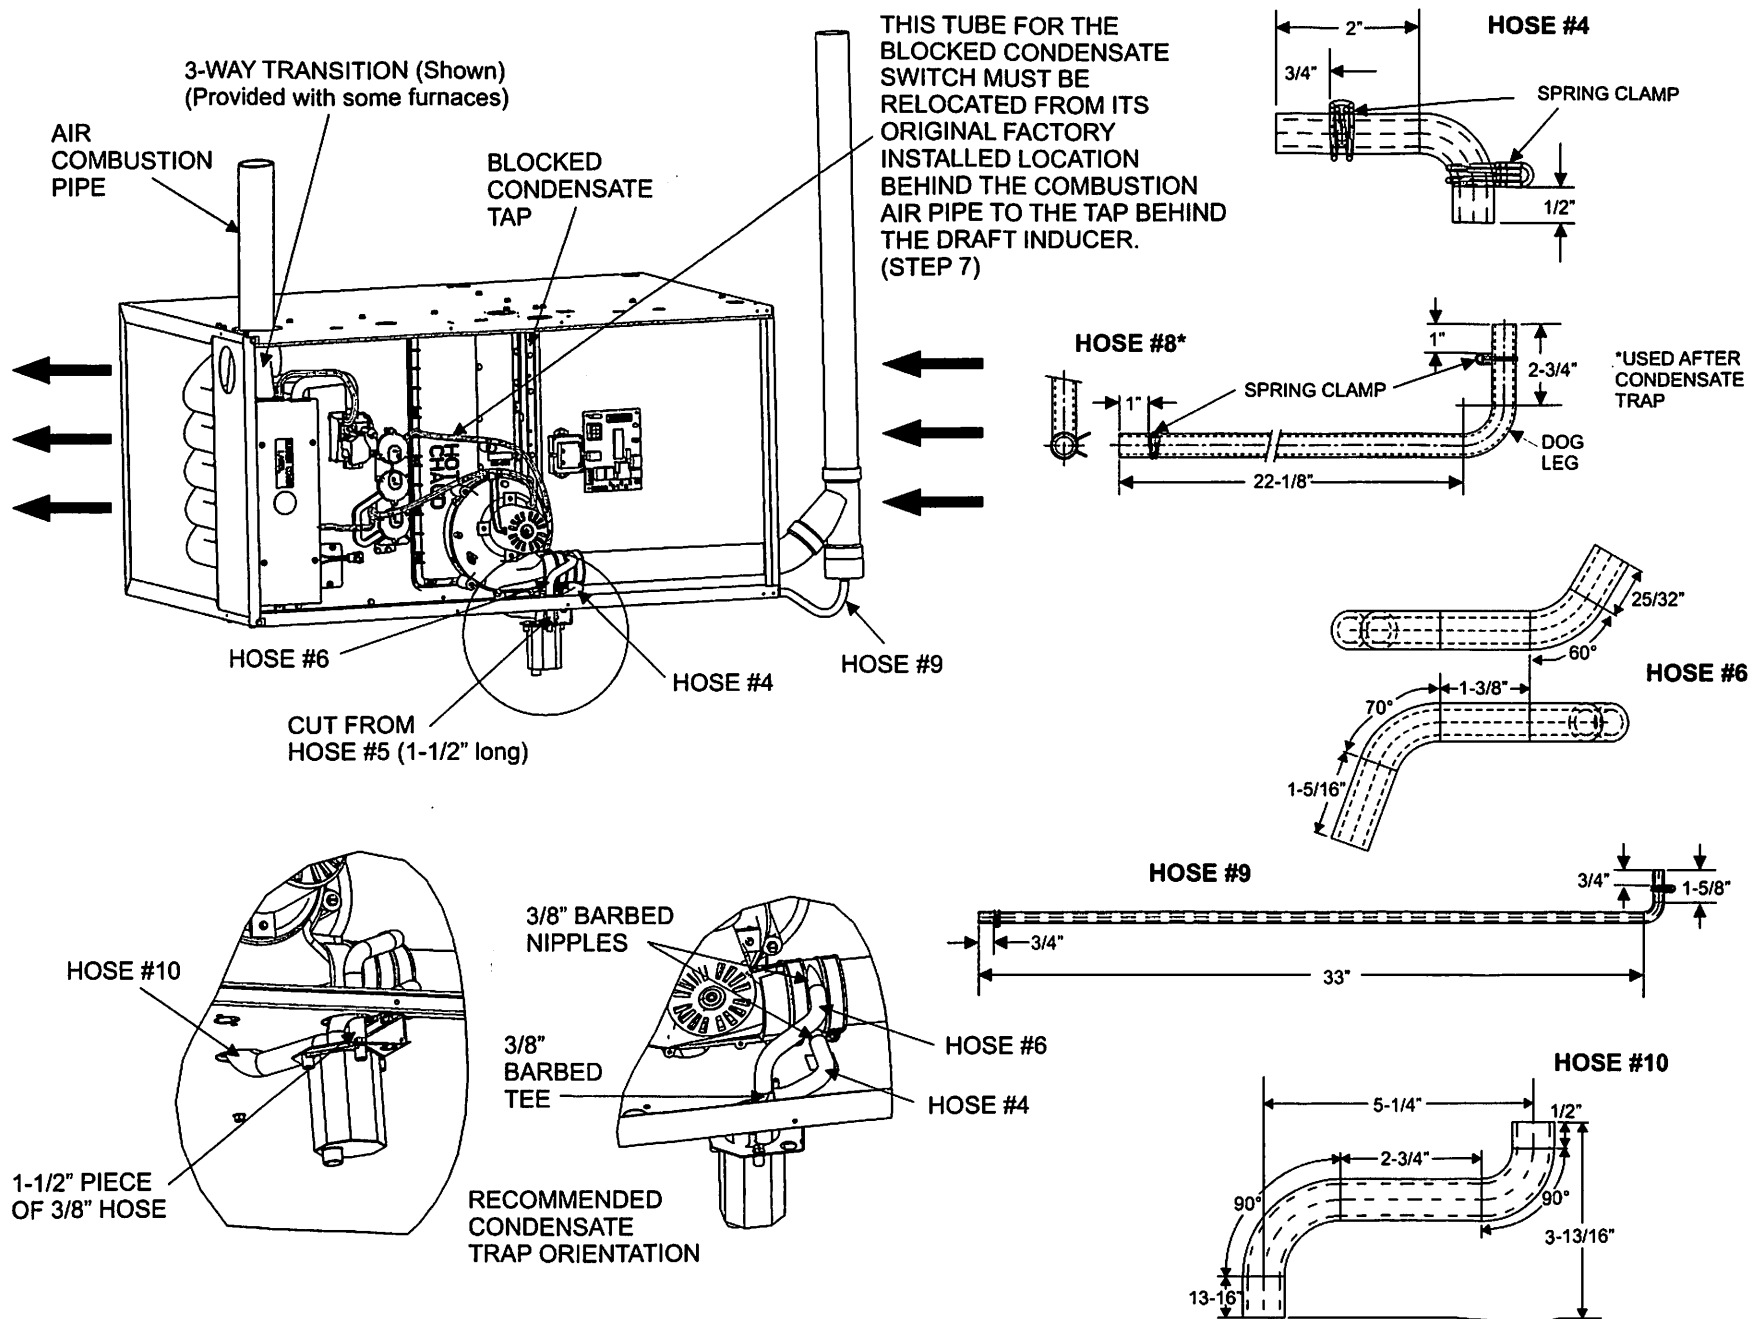

Horizontal Right Air Flow (Inducer High)

Installation without condensate trap bracket:

1. Remove the 2" knockout on the casing side, away from the inducer motor.
2. Remove the condensate trap and it's bracket from the furnace, saving the screws for use later.
3. Remove all the condensate hoses inside the furnace.
4. Remove the condensate trap from the bracket
5. Remove the large condensate cap from the side of the condensate pan, close to the knockout, and install it on the middle of the condensate pan, from where hose #1 was removed.
6. Cut 2-1/2" straight piece from hose #1 and install it through the knockout opening in the casing on the side of the condensate pan, from where the cap was previously removed. Insert the other end of the hose into the large recessed drain on the condensate trap.
7. Remove cap from the rain gutter and insert 3/8" barbed nipple into the rain gutter. Place the cap, just removed, to the other side of the rain gutter on the inducer.
8. Install the condensate trap to the 2" hole on the side of the casing, lining up the condensate pan opening with the larger opening on the condensate trap.
9. Install the dogleg end of hose #9 on the Wye drain and route the hose through the opening on top of the furnace, as shown. Install the other end of the #9 hose to the barbed tee, inside the furnace.
10. Install the dogleg end of hose #4 on 3/8" barbed nipple, in the rain gutter. The other end of hose #4 should be installed on the 3/8" barbed tee, as shown.
11. Install one end of hose #7 on the 3/8" barbed tee inside the furnace. Guide the other end of hose #7 towards the condensate trap, and install it on the tap on the condensate trap.
12. Install the dogleg end of hose #2 on the bottom drain of the inducer. Guide the other end of hose #2 towards the condensate trap, and install it on the small recessed drain in the condensate trap.
13. Ensure that all hoses are properly installed, have no kinks, and are draining properly. All hoses on the condensate trap should be pushed all the way down to ensure against leakage. All hoses on the condensate pan should be pulled all the way up to ensure proper operation.

Installation with condensate trap bracket (Front of casing):

1. Remove the 2" knockout on the casing side, away from the inducer motor.
2. Remove all the condensate hoses inside the furnace, including the 3/8" barbed nipple, factory installed, in the rain gutter.
3. Remove the drain cap from the bottom rain gutter drain and insert the 3/8" barbed nipple removed above in the bottom rain gutter drain. Place the cap, just removed, to the other side of the rain gutter on the inducer.
4. Remove the condensate trap and it's bracket from inside the furnace, saving the screws for later, use.
5. Remove the large condensate cap from the side of the condensate pan and install it on the middle drain of the condensate pan, from where #1 hose was removed.
6. Install longer dogleg end of hose #10 through the casing hole on to the side drain of the condensate pan, where cap was removed in step #3. Some lubricant may have to be used to facilitate this installation as the hose is designed to be a tight fit over the condensate drain. The other, smaller, dogleg end of hose #10 should be installed into the large recessed drain in the condensate trap.
7. Install the condensate trap bracket, with the condensate trap, on to the front side of the furnace, using the screws removed in step #1.
8. Install the dogleg end of hose #9 on the Wye drain and route the hose through the opening on top of the furnace, as shown. Install the other end of the #9 hose to the barbed tee, inside the furnace.
9. Install the dogleg end of hose #4 to the rain gutter on the inducer. The other end of hose #4 should be installed on the 3/8" barbed tee.

10. Install one end of hose #7 on the 3/8" barbed tee inside the furnace. Guide the other end of hose #7 towards the condensate trap, and install it on the tap on the condensate trap.
11. Install the dogleg end of hose #2 on the bottom drain of the inducer. Guide the other end of hose #2 towards the condensate trap, and install it on the small recessed drain in the condensate trap.
12. Ensure that all hoses are properly installed, have no kinks, and are draining properly. All hoses on the condensate trap and condensate pan should be pushed all the way down to ensure against leakage and performance. Some hoses may have to be trimmed for proper fit.

NOTE: The condensate trap can also be installed on the 2" knockout opening, in this configuration, using the provided condensate trap bracket. Some modifications may, however, have to be made to the condensate hoses.

CAUTION

Ensure all condensate hoses are pushed all the way down on the condensate trap, barbed fittings, and condensate pan drains.


CAUTION

Plug all unused condensate trap, condensate pan and inducer drain connection points using plugs provided.

Installation with condensate trap bracket (Back of casing):

1. Remove the 2" knockout on the casing side, away from the inducer motor.
2. Remove all the condensate hoses inside the furnace, including the 3/8" barbed nipple, factory installed, in the rain gutter.
3. Remove the drain cap from the bottom rain gutter drain and insert the 3/8" barbed nipple removed above in the bottom rain gutter drain. Place the cap, just removed, to the other side of the rain gutter on the inducer.
4. Remove the condensate trap and it's bracket from inside the furnace, saving the screws for later, use.
5. Remove the large condensate cap from the side of the condensate pan and install it on the middle drain of the condensate pan, from where #1 hose was removed.
6. Do not remove condensate trap from the condensate trap bracket.
7. Cut 2-1/2" straight piece from hose #1 and install it through the knockout opening in the casing on the side of the condensate pan, from where the cap was previously removed. Insert the other end of the hose into the large recessed drain on the condensate trap.
8. Install the condensate trap bracket to the 2" inch hole on the side of casing, using existing holes, lining up the condensate pan opening with the larger opening on the condensate trap.
9. Install the dogleg end of hose #9 on the Wye drain and route the hose through the opening on top of the furnace, as shown. Install the other end of the #9 hose to the barbed tee, inside the furnace.
10. Install the dogleg end of hose #4 on 3/8" barbed nipple, in the rain gutter. The other end of hose #4 should be installed on the 3/8" barbed tee, as shown.
11. Install one end of hose #7 on the 3/8" barbed tee inside the furnace. Guide the other end of hose #7 towards the condensate trap, and install it on the tap on the condensate trap
12. Install the dogleg end of hose #2 on the bottom drain of the inducer. Guide the other end of hose #2 towards the condensate trap, and install it on the small recessed drain in the condensate trap.
13. Ensure that all hoses are properly installed, have no kinks, and are draining properly. All hoses on the condensate trap should be pushed all the way down to ensure against leakage. All hoses on the condensate pan should be pulled all the way up to ensure proper operation.

FIGURE 33: Horizontal Right Condensate Drain Hose Configuration (Option 1 - Front of Casing)

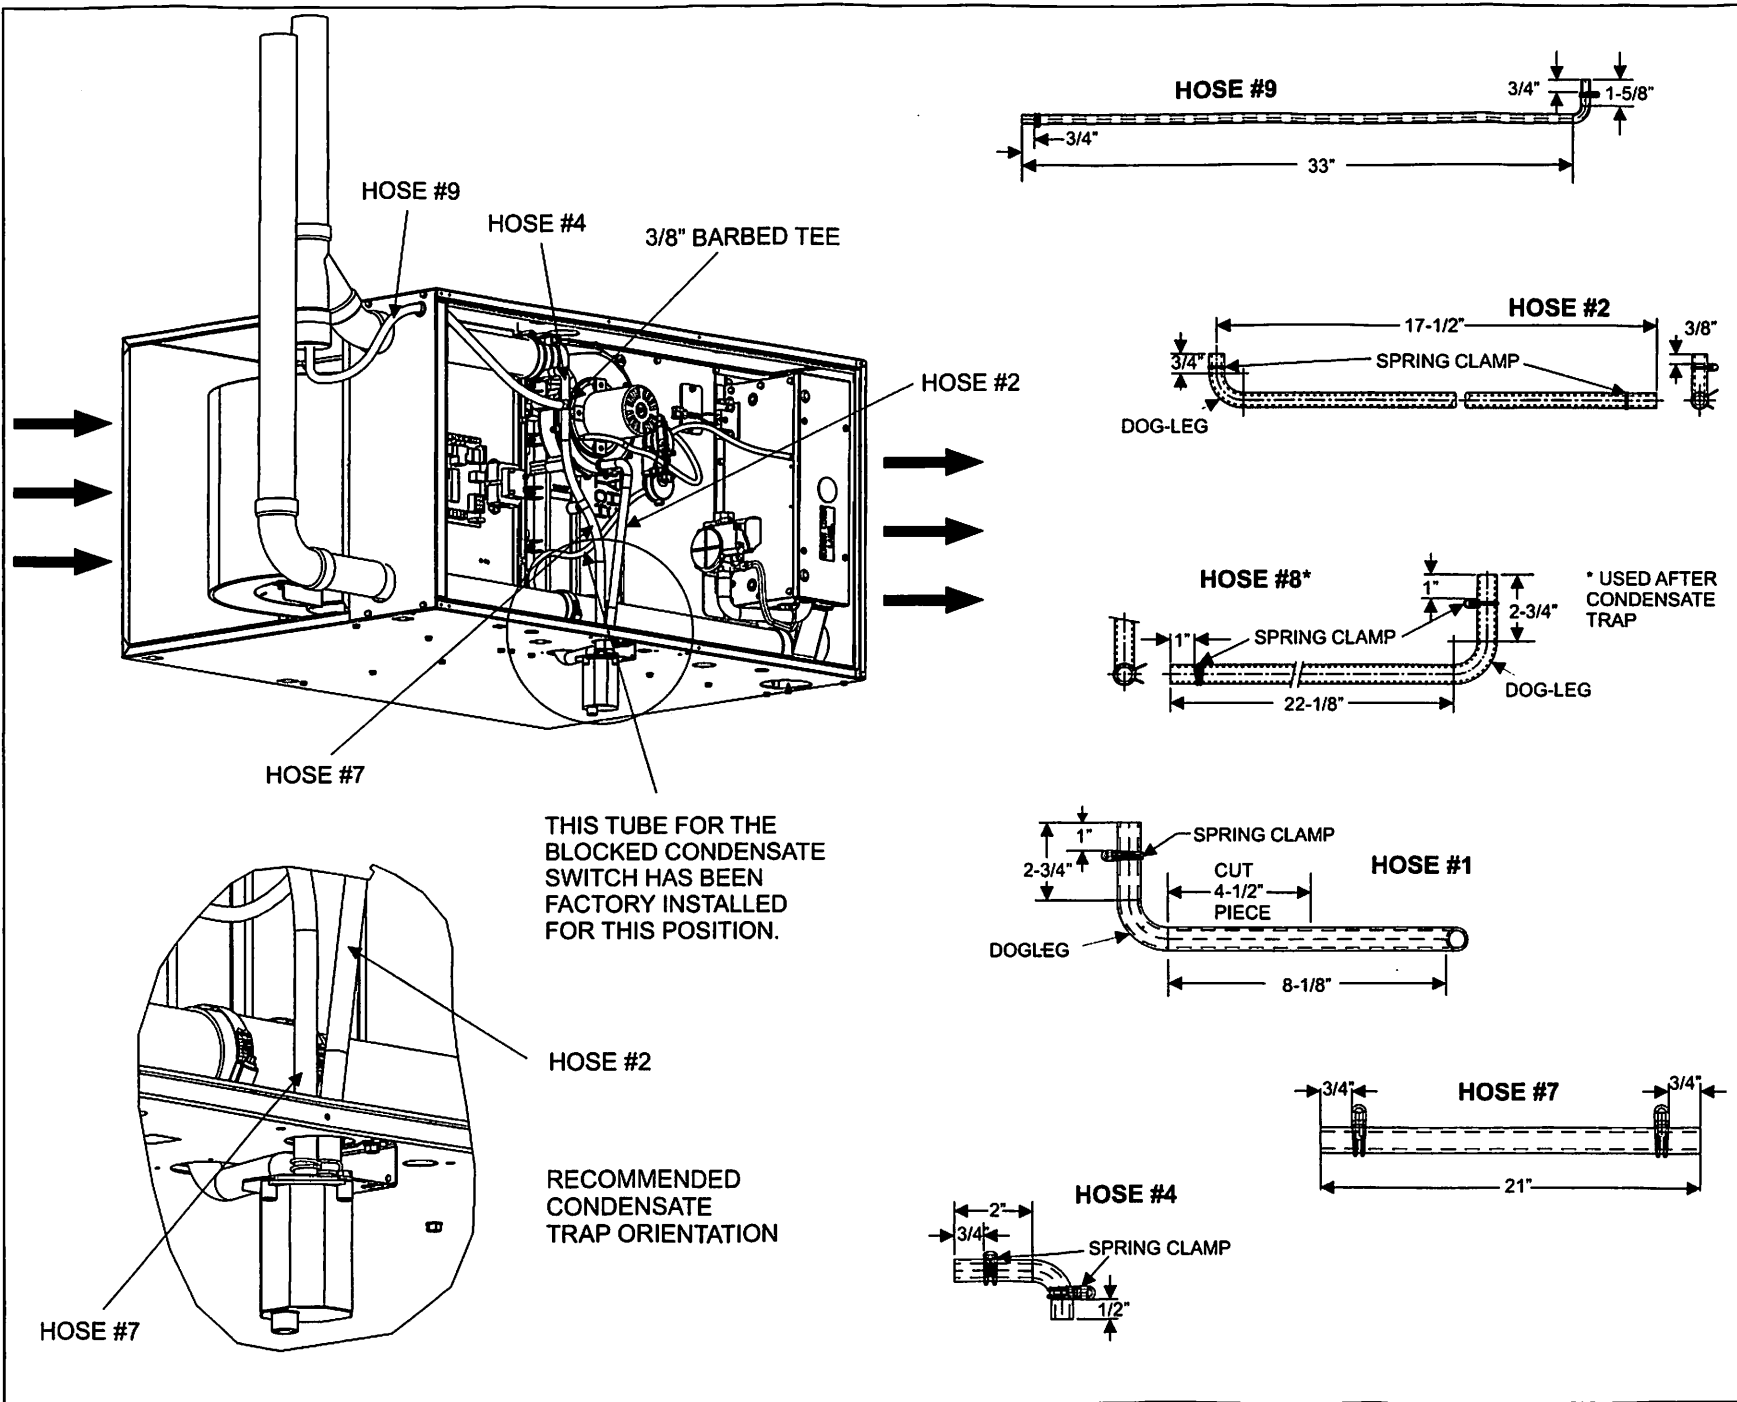

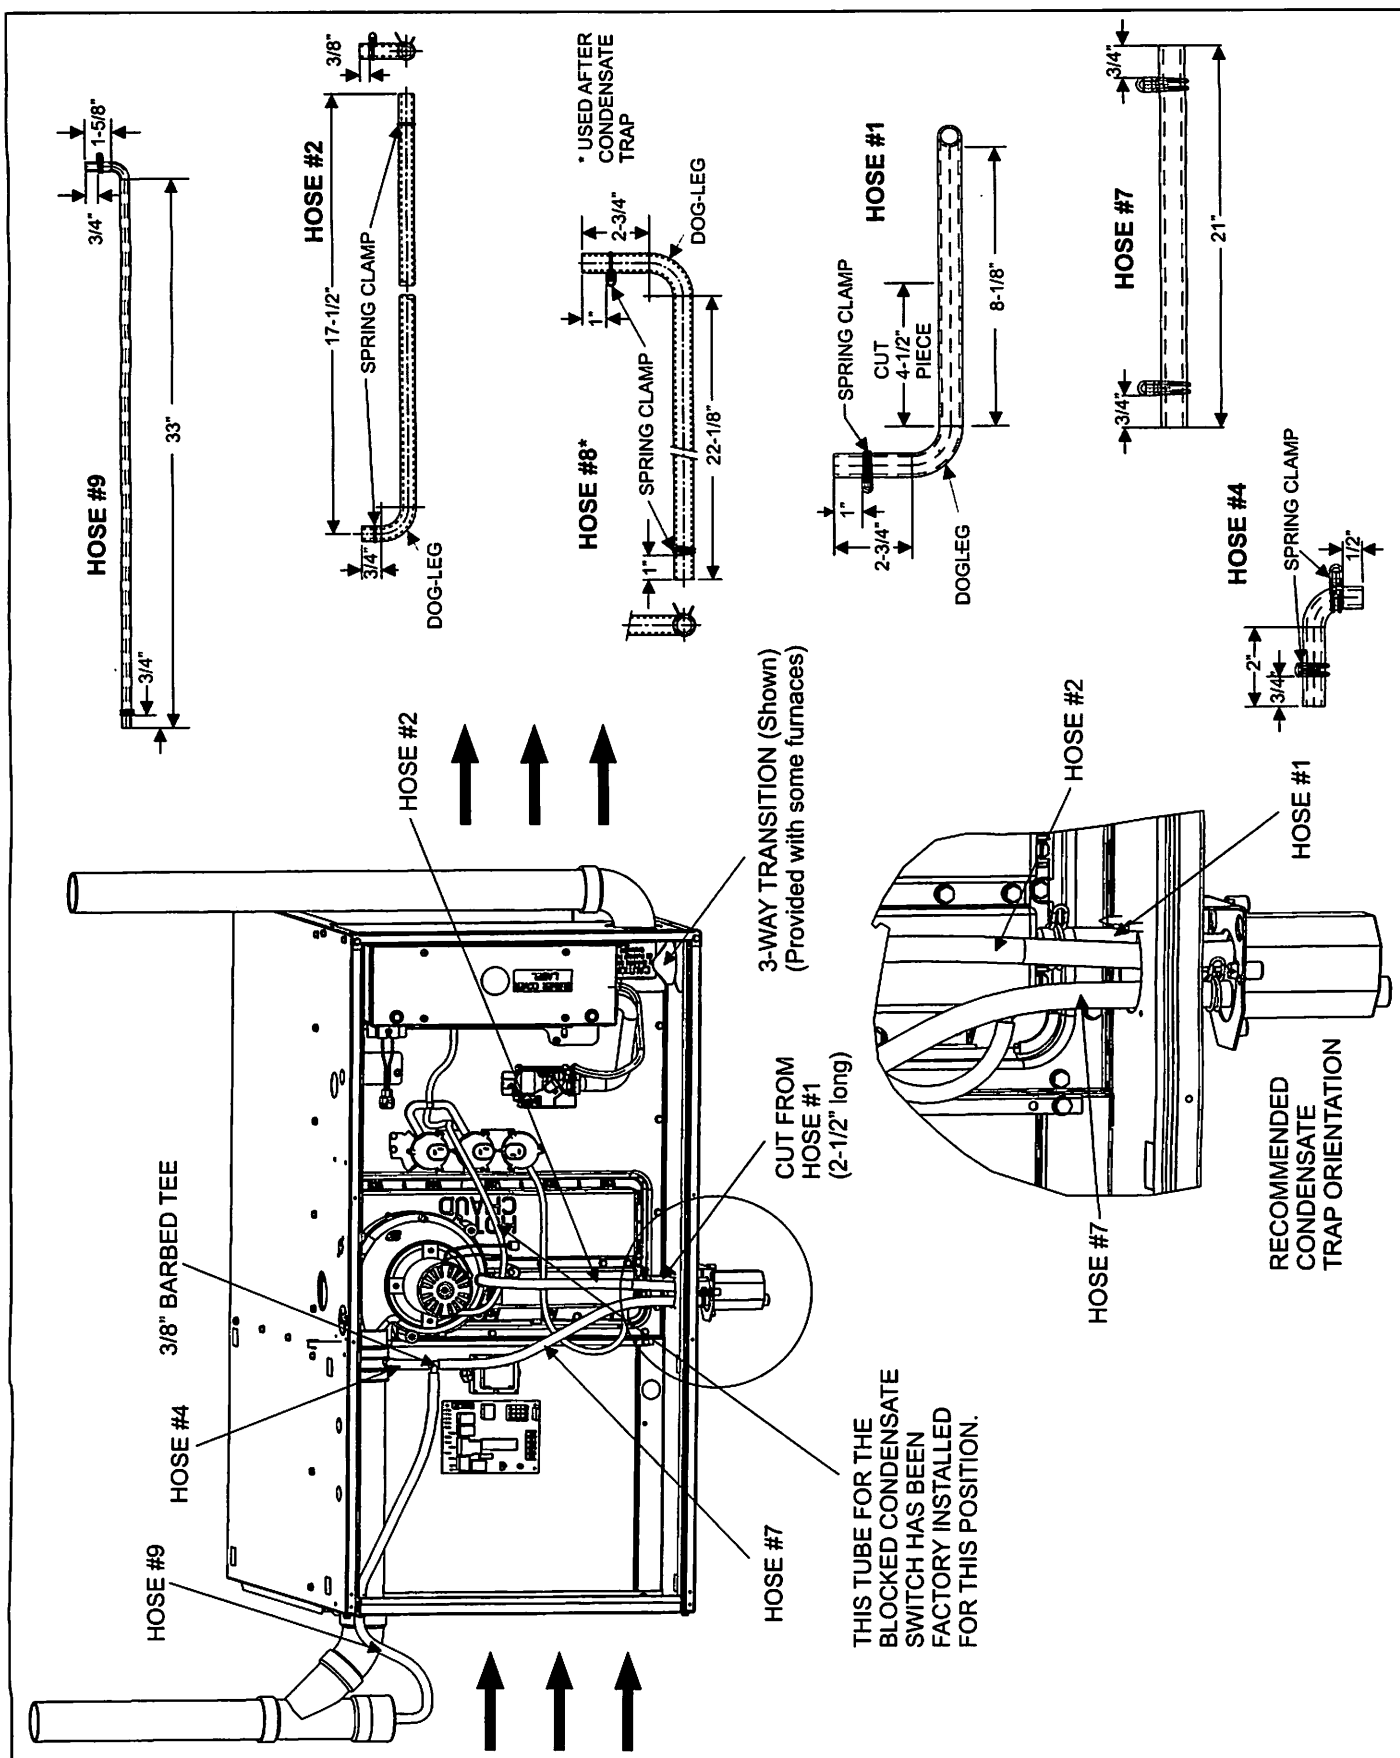


FIGURE 34: Horizontal Right Condensate Drain Hose Configuration (Option 2 - Back of Casing)

CONDENSATE DRAIN TERMINATION

DO NOT terminate condensate drain in a chimney, or where the drain line may freeze. The line must terminate at an inside drain to prevent freezing of the condensate and possible property damage. DO NOT trap the drain line at any other location than at the condensate drain trap supplied with the furnace. A condensate sump pump **MUST** be used if required by local codes, or if no indoor floor drain is available. The condensate sump pump must be approved for use with acidic condensate.

CONDENSATE DRAIN PRE-START UP PROCEDURE

The condensate trap must be filled with water before putting the furnace into operation. Perform the following procedures only after the condensate trap has been properly piped to a drain connection using the procedure in this instruction. The recommended procedure is as follows:

1. Disconnect the condensate drain hose from the induced draft blower discharge.
2. Elevate this hose and fill with water using a funnel.
3. Replace the condensate drain hose and clamps. If this procedure is not followed, the unit may not properly drain on initial start up.

SECTION VIII: SAFETY CONTROLS

CONTROL CIRCUIT FUSE

A 3-amp fuse is provided on the control circuit board to protect the 24-volt transformer from overload caused by control circuit wiring errors. This is an ATO 3, automotive type fuse and is located on the control board.

BLOWER DOOR SAFETY SWITCH

This unit is equipped with an electrical interlock switch mounted in the blower compartment. This switch interrupts all power at the unit when the panel covering the blower compartment is removed.

Electrical supply to this unit is dependent upon the panel that covers the blower compartment being in place and properly positioned.

CAUTION

Main power to the unit must still be interrupted at the main power disconnect switch before any service or repair work is to be done to the unit. Do not rely upon the interlock switch as a main power disconnect.

Blower and burner must never be operated without the blower panel in place.

ROLLOUT SWITCH CONTROLS

These controls are mounted on the burner box assembly. If the temperature in the burner box exceeds its set point, the ignition control and the gas valve are de-energized. The operation of this control indicates a malfunction in the combustion air blower, heat exchanger or a blocked vent pipe connection. Corrective action is required. These are manual reset controls that must be reset before operation can continue.

PRESSURE SWITCHES

This furnace is supplied with a pressure switch, which monitors the flow through the combustion air/vent piping system. This switch de-energizes the ignition control module and the gas valve if any of the following conditions are present. Refer to Figure 35 for tubing connections.

1. Blockage of combustion air piping or terminal.
2. Blockage of vent piping or terminal.
3. Failure of combustion air blower motor.
4. Blockage of condensate drain piping.

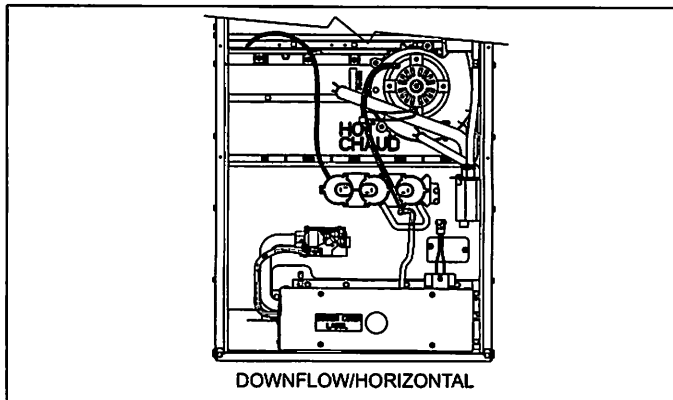


FIGURE 35: Pressure Switch Tubing Routing

LIMIT CONTROLS

There is high temperature limit control located on the furnace vestibule panel near the gas valve. This is an automatic reset control that provides over temperature protection due to reduced airflow, that may be caused by a dirty filter, or if the indoor fan motor should fail. The control module will lockout if the limit trips 5 consecutive times. Control will reset and try ignition again after 1 hour.

SECTION IX: START-UP AND ADJUSTMENTS

The initial start-up of the furnace requires the following additional procedures:

IMPORTANT: All electrical connections made in the field and in the factory should be checked for proper tightness.

When the gas supply is initially connected to the furnace, the gas piping may be full of air. In order to purge this air, it is recommended that the ground union be loosened until the odor of gas is detected. When gas is detected, immediately retighten the union and check for leaks. Allow five minutes for any gas to dissipate before continuing with the start-up procedure.

CAUTION

Perform the following procedures only after the condensate trap has been properly piped to a drain connection using the procedure in this instruction. Be sure proper ventilation is available to dilute and carry away any vented gas.

TOOLS AND INFORMATION THAT WILL BE REQUIRED IN ORDER TO PROPERLY PERFORM THE FURNACE STARTUP PROCEDURE.

1. Call the local gas supplier to obtain heating value of the natural gas. If you cannot obtain the heating value of the gas from the gas supplier, you may use a default value of 1030 BTU/SCF (38.8 MJ / m³).
2. You will need a thermometer or portable digital thermometer to read the supply and return air temperatures.
3. You will need a U-tube manometer or digital equipment that has the ability to read pressures between 0 – 15" in.w.c (0 - 3.73 kPa) in order to measure the gas line and the manifold pressures.
4. You will need a 3/32" Allen wrench for the pressure port plugs in the gas valve.
5. You will need 2 pieces of 1/8" (0.3 cm) ID flexible tubing that is 12" (30 cm) in length, 2 – pieces of 1/8" (0.3 cm) tubing that are 4" (10.1 cm) in length, a 1/8" (0.3 cm) tee and a 1/8" (0.3 cm) adapter to connect the U-tube manometer or the digital pressure measuring equipment to the gas valve pressure ports.

There is an accessory kit (1PK0601) available from Source 1, which has the following items:

- 1 - 12" (30 cm) length x 1/8" (0.3 cm) diameter tubing
- 2 – pieces of 4" (10 cm) length x 1/8" (0.3 cm) diameter tubing
- 1 - 5/16" (0.8 cm) tee
- 1 – 5/16" (0.8 cm) x 1/8" (3.175 mm) reducing coupling
- 1 – 1/8" (0.3 cm) adapter

There is a accessory kit (1PK0602) available from Source 1, which has the following items:

- 12" (30 cm) length x 1/8" (0.3 cm) diameter tubing
- 2 – pieces of 4" (10 cm) length x 1/8" (0.3 cm) diameter tubing
- 1 - 5/16" (0.8 cm) tee
- 1 – 5/16" (0.8 cm) x 1/8" (0.3 cm) reducing coupling
- 1 – 1/8" (0.3 cm) adapter
- 1 - Dwyer – Manometer

These items are required in order to properly perform the required start-up procedure.

IGNITION SYSTEM SEQUENCE

1. Turn the gas supply ON at external valve and main gas valve.
2. Set the thermostat above room temperature to call for heat.
3. System start-up will occur as follows:
 - a. The induced draft blower motor will start and come up to speed. Shortly after inducer start-up, the hot surface igniter will glow for about 17 seconds.
 - b. After this warm up, the ignition module will energize (open) the main gas valve.
 - c. After flame is established, the supply air blower will start in about 30 seconds.

⚠ WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

IMPORTANT: Burner ignition may not be satisfactory on first startup due to residual air in the gas line or until gas manifold pressure is adjusted. The ignition control will make 3 attempts to light before locking out.

With furnace in operation, check all of the pipe joints, gas valve connections and manual valve connections for leakage using an approved gas detector, a non-corrosive leak detection fluid, or other leak detection methods. Take appropriate steps to stop any leak. If a leak persists, replace the component.

The furnace and its equipment shut-off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 PSI (3.45 kPa).

The furnace must be isolated from the gas supply piping system by closing the equipment shut-off valve during any pressure testing of the gas supply piping system.

CALCULATING THE FURNACE INPUT (NATURAL GAS)

NOTE: Burner orifices are sized to provide proper input rate using natural gas with a heating value of 1030 BTU/Ft³ (38.4 MJ/m³). If the heating value of your gas is significantly different, it may be necessary to replace the orifices.

NOTE: Front door of burner box must be secured when checking gas input.

1. Turn off all other gas appliances connected to the gas meter.
2. At the gas meter, measure the time (with a stop watch) it takes to use 2 cubic ft. (0.0566 m³.) of gas.
3. Calculate the furnace input by using one of the following equations.

In the USA use the following formula to calculate the furnace input.

For natural gas multiply the heat content of the gas BTU/SCF or Default 1030 BTU/SCF (38.4 MJ/m³), times 2 cubic ft. (0.056 m) of gas measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time (In seconds) it took to measure 2 cubic ft. (0.056 m) of gas from the gas meter.

For propane (LP) gas multiply the heat content of the gas BTU/SCF or Default 2500 BTU/SCF (93.13 MJ/m³), times 1 cubic ft. (0.028 m) of gas measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time (In seconds) it took to measure 1 cubic ft. (0.028 m) of gas from the gas meter.

The formula for US input calculation using a cubic foot gas meter:

| | | | | | |
|--|---|-----------|--|---|-----------|
| $\frac{\text{BTU/ft}^3 \times 2 \text{ cu.ft.} \times 0.960 \times 3600}{\text{Seconds it took to measure the 2 cu.ft. of gas}}$ | = | BTU/H | $\frac{\text{BTU/ft}^3 \times 1 \text{ cu.ft.} \times 0.960 \times 3600}{\text{Seconds it took to measure the 1 cu.ft. of gas}}$ | = | BTU/H |
| NATURAL GAS INPUT CALCULATION | | | PROPANE (LP) GAS INPUT CALCULATION | | |
| EXAMPLE: | | | EXAMPLE: | | |
| $\frac{1030 \times 2 \times 0.960 \times 3600}{90.5}$ | = | 78,666.90 | $\frac{2500 \times 1 \times 0.960 \times 3600}{108}$ | = | 80,000.00 |
| Natural Gas | | | Propane Gas | | |
| BTU/SCF 1030 | | | BTU/SCF 2500 | | |

In Canada you will use the following formula to calculate the furnace input if you are using a cubic foot gas meter.

For Natural Gas multiply the Heat content of the gas MJ/m³ (or Default 38.4), times 2 cubic ft. of gas x 0.028 to convert from cubic feet to cubic meters measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time it took to measure 2 cubic ft. (0.056 m) of gas from the gas meter.

For Propane (LP) Gas multiply the Heat content of the gas MJ/m³ (or Default 93.13), times 1 cu. ft. of gas x 0.028 to convert from cubic feet to cubic meters measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time it took to measure 1 cubic ft. (0.028 m) of gas from the gas meter.

The formula for metric input calculation using a cubic foot gas meter:

| | | | | | | | | | | |
|---|---|-------|---|--------|---|-------|---|---------|---|-----------|
| $\frac{\text{MJ/m}^3 \times 2 \text{ cu.ft.} \times 0.028 \times 0.960 \times 3600}{\text{Seconds it took to measure the 2 cu.ft. of gas}}$ | = | MJ/H | x | 0.2777 | = | kW | x | 3412.14 | = | BTU/H |
| NATURAL GAS INPUT CALCULATION | | | | | | | | | | |
| EXAMPLE: | | | | | | | | | | |
| $\frac{38.4 \times 2 \times 0.028 \times 0.960 \times 3600}{90.5}$ | = | 82.12 | x | 0.2777 | = | 22.80 | x | 3412.14 | = | 77,796.80 |
| Natural Gas | | | | | | | | | | |
| BTU/SCF 1030 = 38.4 MJ/m ³ | | | | | | | | | | |
| PROPANE (LP) GAS INPUT CALCULATION | | | | | | | | | | |
| EXAMPLE: | | | | | | | | | | |
| $\frac{93.13 \times 1 \times 0.028 \times 0.960 \times 3600}{108}$ | = | 83.44 | x | 0.2777 | = | 23.17 | x | 3412.14 | = | 79,063.70 |
| Propane Gas | | | | | | | | | | |
| BTU/SCF 2500 = 93.13 MJ/m ³ | | | | | | | | | | |

In Canada use the following formula to calculate the furnace input if you are using a gas meter that measures cubic meters.

For Natural Gas multiply the Heat content of the gas MJ/m³ (or Default 38.4), times 0.10 m³ of gas measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time it took to measure 0.10 m³ of gas from the gas meter.

For Propane (LP) Gas multiply the Heat content of the gas MJ/m³ (or Default 93.13), times 0.10 m³ of gas measured at the gas meter, times a barometric pressure and temperature correction factor of 0.960; times 3600, then divided by the time it took to measure 0.10 m³ of gas from the gas meter.

The formula for metric input calculation using a cubic foot gas meter:

| | | | | | | | | | | |
|--|---|-------|---|--------|---|-------|---|---------|---|-----------|
| $\frac{\text{MJ/m}^3 \times \text{m}^3 \times 0.960 \times 3600}{\text{Seconds it took to measure the 0.10 m}^3 \text{ of gas}}$ | = | MJ/H | x | 0.2777 | = | kW | x | 3412.14 | = | BTU/H |
| NATURAL GAS INPUT CALCULATION | | | | | | | | | | |
| EXAMPLE: | | | | | | | | | | |
| $\frac{38.4 \times 0.1 \times 0.960 \times 3600}{160}$ | = | 82.94 | x | 0.2777 | = | 23.03 | x | 3412.14 | = | 78,581.60 |
| Natural Gas | | | | | | | | | | |
| BTU/SCF 1030 = 38.4 MJ/m ³ | | | | | | | | | | |
| PROPANE (LP) GAS INPUT CALCULATION | | | | | | | | | | |
| EXAMPLE: | | | | | | | | | | |
| $\frac{93.13 \times 0.1 \times 0.960 \times 3600}{387}$ | = | 83.17 | x | 0.2777 | = | 23.09 | x | 3412.14 | = | 78,805.20 |
| Propane Gas | | | | | | | | | | |
| BTU/SCF 2500 = 93.13 MJ/m ³ | | | | | | | | | | |

DO NOT ADJUST the manifold pressure regulator if the actual input is equal to or within 8% less than the furnace input specified on the rating plate or if the furnace rise is above the specified rise range on the rating plate.

If the actual input is significantly higher than the furnace input specified on the rating plate then replace the gas orifices with the gas orifices of the proper size for the type of gas you are using.

For altitudes above 2,000 ft. (610 m) the furnace input MUST BE DERATED. Refer to the GAS CONVERSION FOR PROPANE (LP) AND HIGH ALTITUDES IN SECTION IV for information on high altitude conversions.

CAUTION

Be sure to relight any gas appliances that were turned off at the start of this input check.

TABLE 13: Inlet Gas Pressure Range

| INLET GAS PRESSURE RANGE | | |
|--------------------------|-----------------------|-----------------------|
| | Natural Gas | Propane (LP) |
| Minimum | 4.5" W.C. (1.12 kPa) | 8.0" W.C. (1.99 kPa) |
| Maximum | 10.5" W.C. (2.61 kPa) | 13.0" (3.24 kPa) W.C. |

IMPORTANT: The inlet gas pressure operating range table specifies what the minimum and maximum gas line pressures must be for the furnace to operate safely. The gas line pressure **MUST BE**

- 7" W.C. (1.74 kPa) for Natural Gas
- 11" W.C. (2.74 kPa) for Propane (LP) Gas

in order to obtain the BTU input specified on the rating plate and/or the nominal manifold pressure specified in these instructions and on the rating plate.

ADJUSTMENT OF MANIFOLD GAS PRESSURE

Manifold gas pressure may be measured by two different procedures. It may be measured with the burner box cover in place or it may be measured with the burner box cover removed. Follow the appropriate section in the instructions below. Refer to Figure 36 for a drawing of the locations of the pressure ports on the gas valve.

Turn gas off at the ball valve or gas cock on gas supply line before the gas valve. Find the pressure ports on the gas valve marked OUT P and IN P.

1. The manifold pressure must be taken at the port marked OUT P.
2. The gas line pressure must be taken at the port marked IN P.
3. Using a 3/32" (2.4 mm) Allen wrench, loosen the setscrew by turning it 1 turn counter clockwise. **DO NOT REMOVE THE SET SCREW FROM THE PRESSURE PORT.**

Read the manifold gas pressure using either of the two methods below.

Reading the gas pressure with the burner box cover in place:

- A. Disconnect the pressure reference hose from the right side of the burner box. Using a tee fitting and a short piece of hose, connect the negative side of the manometer to the burner box as described below.
- B. Remove one end the 5/16" (0.8 cm) ID flexible tubing over the pressure port on the burner box.
- C. Insert the end of the 5/16" (0.8 cm) tubing, that has the 1/8" (0.3 cm) adapter at the end of the tube, in to the 1/8" (0.3 cm) tee.
- D. Connect the 1/8" (0.3 cm) tee to the burner box adapter and to the negative side of a U-tube manometer or digital pressure measuring equipment with 2 – 1/8" (0.3 cm) tubes.
- E. Use the 5/16" (0.8 cm x 1/8" (0.3 cm) reducing coupling and a 4" (10.2 cm) piece of 1/8" (0.3 cm) tubing to connect the positive side of the manometer to the gas valve pressure reference port. Refer to Figure 37 for connection details.

Reading the gas pressure with the burner box cover removed - Remove the screws securing the burner box front cover plate. Remove the cover. The gasket and may stick in place. Connect the positive side of the manometer to the gas valve as described above. There will be no second connection to the manometer, as it will reference atmospheric pressure. Refer to Figure 37 for connection details.

IMPORTANT: The cap for the pressure regulator must be removed entirely to gain access to the adjustment screw. Loosening or tightening the cap does not adjust the flow of gas.

1. Refer to Figure 36 for location of pressure regulator adjustment cap and adjustment screw on main gas valve.
2. Turn gas and electrical supplies on and follow the operating instructions to place the unit back in operation.
3. Adjust manifold pressure by adjusting gas valve regulator screw for the appropriate gas per the following:

TABLE 14: Nominal Manifold Pressure

| NOMINAL MANIFOLD PRESSURE | |
|---------------------------|------------------------|
| Natural Gas | 3.5" w.c. (0.87 kPa) |
| Propane (LP) Gas | 10.0" w.c. (2.488 kPa) |

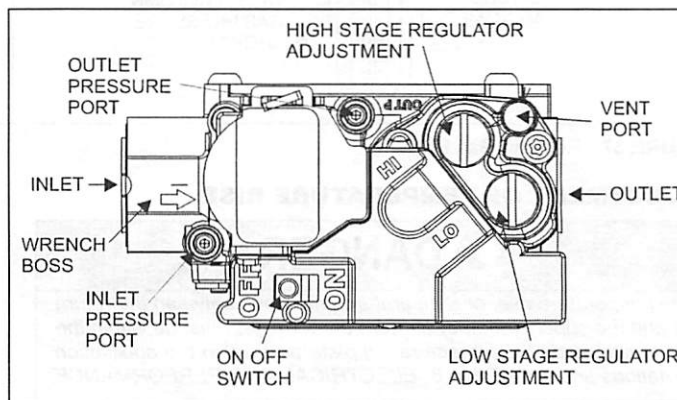


FIGURE 36: Gas Valve

IMPORTANT: If gas valve regulator is turned in (clockwise), manifold pressure is increased. If screw is turned out (counterclockwise), manifold pressure will decrease.

4. After the manifold pressure has been adjusted, re-calculate the furnace input to make sure you have not exceeded the specified input on the rating plate. Refer to "CALCULATING THE FURNACE INPUT (NATURAL GAS)".
5. Once the correct BTU (kW) input has been established, turn the gas valve to OFF and turn the electrical supply switch to OFF; then remove the flexible tubing and fittings from the gas valve pressure tap and the pressure reference hose from the right side of the burner box and tighten the pressure tap plug using the 3/32" Allen wrench. Replace the burner box front cover (if it was removed) and place the pressure reference hose back on the gas valve.
6. Turn the electrical and gas supplies back on, and with the burners in operation, check for gas leakage around the gas valve pressure port for leakage using an approved gas detector, a non-corrosive leak detection fluid, or other leak detection methods.

WARNING

The manifold pressure must be checked with the screw-off cap for the gas valve pressure regulator in place. If not, the manifold pressure setting could result in an over-fire condition. A high manifold pressure will cause an over-fire condition, which could cause premature heat exchanger failure. If the manifold pressure is too low, sooting and eventual clogging of the heat exchanger could occur. Be sure that gas valve regulator cap is in place and burner box to gas valve pressure reference hose is connected.

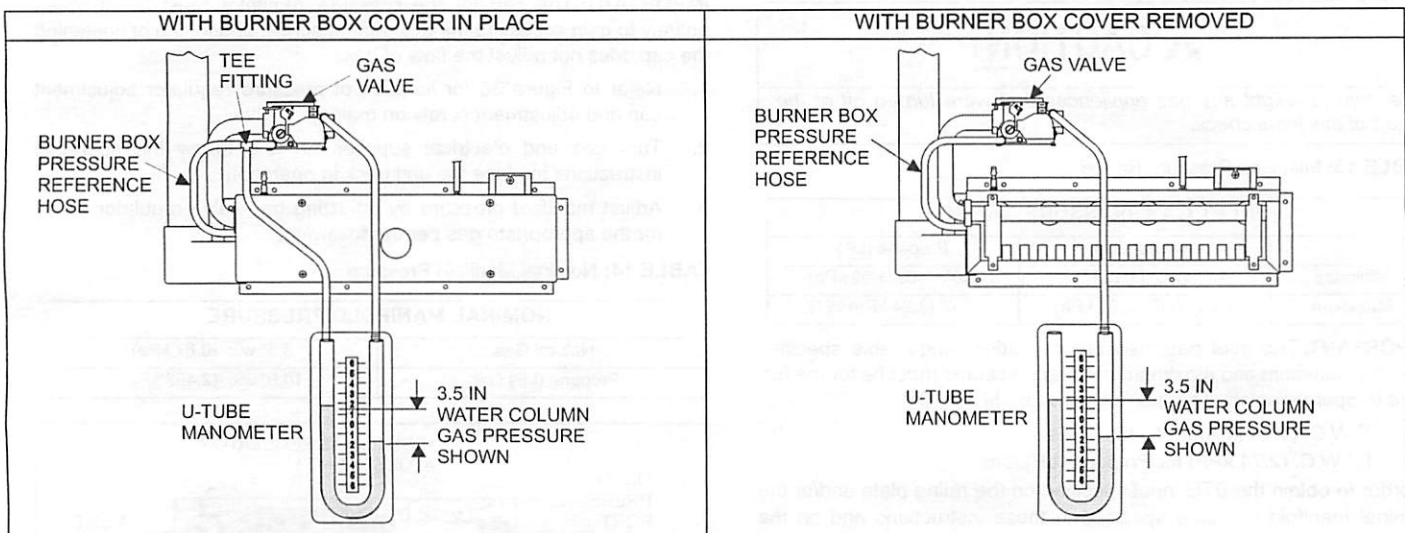


FIGURE 37: Reading Gas Pressure

ADJUSTMENT OF TEMPERATURE RISE

⚠ DANGER

The temperature rise, or temperature difference between the return air and the supply (heated) air from the furnace, must be within the range shown on the furnace rating plate and within the application limitations shown in Table 8 "ELECTRICAL AND PERFORMANCE DATA".

The supply air temperature cannot exceed the "Maximum Supply Air Temperature" specified in these instructions and on the furnace rating plate. Under NO circumstances can the furnace be allowed to operate above the Maximum Supply Air Temperature. Operating the furnace above the Maximum Supply Air Temperature will cause premature heat exchanger failure, high levels of Carbon Monoxide, a fire hazard, personal injury, property damage, and/or death.

The temperature rise, or temperature difference between the return air and the heated supply air from the furnace, must be within the range shown on the furnace rating plate and within the application limitations as shown in Table 8.

After about 20 minutes of operation, determine the furnace temperature rise. Take readings of both the return air and the heated air in the ducts, about six feet (1.83 m) from the furnace where they will not be affected by radiant heat. Increase the blower speed to decrease the temperature rise; decrease the blower speed to increase the rise.

VARIABLE SPEED MOTORS

The variable speed motor CFM / Timer Control Board must be configured so the blower will provide a sufficient airflow so that the furnace operates within the temperature rise range on the rating plate and within the application limitations shown in Table 8 in these Instructions.

ADJUSTMENT OF FAN CONTROL SETTINGS

Heating Indoor Fan Off Delay

This furnace is equipped with a time-on/time-off heating fan control. The fan on delay is fixed at 30 seconds. The fan off delay has 4 settings (60, 90, 120 and 180 seconds). The fan off delay is factory set to 120 seconds. The fan-off setting must be long enough to adequately cool the furnace, but not so long that cold air is blown into the heated space. The fan-off timing may be adjusted by positioning the jumper on two of the four pins as shown in Figure 38.

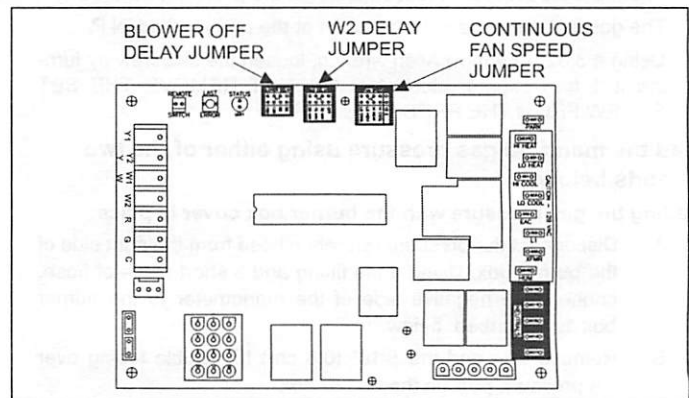


FIGURE 38: Furnace Control Board

Heating and Cooling Airflow

The heating and the cooling airflows are preset at the factory. The heating airflow is set to the maximum CFM. The cooling airflow is set to provide 90 percent of the maximum CFM. The heating and cooling airflows must be field adjusted to match the HVAC system at installation. See Table 17 for the HEAT, COOL and ADJ jumper settings to use for specific airflows.

CFM Board - Delay Taps Selection

The set of jumper pins on the CFM board labeled "DELAY" are used to set the delay profiles for the furnace. These can be chosen so as to maximize the comfort and sound levels for various regions of the country.

Tap A is the default profile. It provides a 30-second ramp-up from zero airflow to full capacity and a 30-second ramp-down from full capacity back to zero airflow. Whenever there is a change in airflow mode, such as from low heat to high heat, the motor will take 30 seconds to ramp from one speed to the other.

Tap B is the humid profile. This profile is best-suited for installations where the humidity is frequently very high during cooling season, such as in the southern part of the country. On a call for cooling, the blower will ramp up to 50% of full capacity and will stay there for two minutes, then will ramp up to 82% of full capacity and will stay there for five minutes, and then will ramp up to full capacity, where it will stay until the wall thermostat is satisfied. In every case, it will take the motor 30 seconds to ramp from one speed to another.

Tap C is the dry profile. This profile is best suited to parts of the country where excessive humidity is not generally a problem, where the summer months are usually dry. On a call for cooling the motor will ramp up to full capacity and will stay there until the thermostat is satisfied. At the end of the cooling cycle, the blower will ramp down to 50% of full capacity where it will stay for 60 seconds. Then it will ramp down to zero. In every case, it will take the motor 30 seconds to ramp from one speed to another.

Tap D is the normal profile, best suited for most of the country, where neither excessive humidity nor extremely dry conditions are the norm. On a call for cooling, the motor will ramp up to 63% of full capacity and will stay there for 90 seconds, then will ramp up to full capacity. At the end of the cooling cycle, the motor will ramp down to 63% of full capacity and will stay there for 30 seconds, then will ramp down to zero. In every case, it will take the motor 30 seconds to ramp from one speed to another.

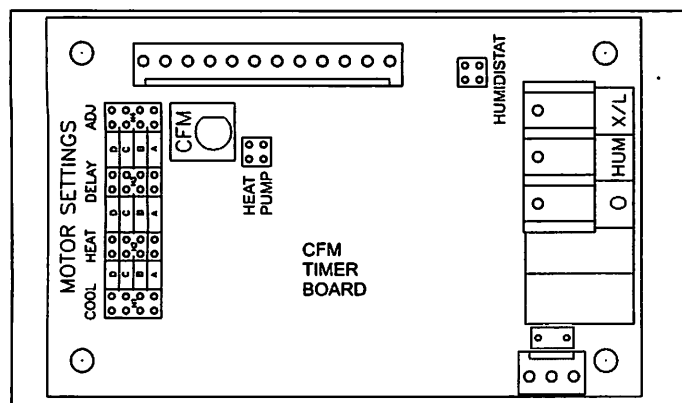


FIGURE 39: CFM / Timer Board

Continuous Blower Operation

The blower will run continuously whenever the wall thermostat fan switch is in the "ON" position. The furnace blower will run at the speed selected on the "FAN SPEED" jumpers on the main control board (HI COOL, LO COOL, HI HEAT or LO HEAT). When the jumper is in the "VS G" position, the blower will run at 50% of the high cool speed.

Intermittent Blower Cooling

On cooling/ heating thermostats with a fan switch, when the fan switch is set in the auto position and the thermostat calls for cooling, a circuit is completed between the R, Y and G terminals. The motor is energized through the Y1 cool terminal and runs on the speed selected on the COOL tap of the CFM Timer board. The fan off setting is fixed at 60 seconds for SEER enhancement. The control board can accommodate two-stage cooling. When a two-stage cool thermostat is connected to the Y1 and Y2 terminals on the board, the blower will operate on LOW COOL speed when Y1 is energized and on HI COOL speed when Y1 and Y2 are energized.

Intermittent Blower Heating

On cooling/ heating thermostats with a fan switch, when the fan switch is set in the auto position and the thermostat calls for heating, a circuit is completed between the R and W terminals. The indoor fan motor is energized through the W1 heat terminal and runs on the speed selected on the HEAT tap of the CFM Timer board.

Humidistat

When a humidistat is installed in the system, the "Humidistat Installed?" jumper on the CFM board should be moved to the "YES" position. The cooling CFM will then be reduced by 15% whenever the humidistat indicates high humidity.

TABLE 15: Air Flow Data

| HIGH / LOW SPEED COOLING AND HEAT PUMP CFM | | | | | | | | | |
|--|------|--------|------|-----------------------|------|--------|------|-----------------|----------|
| 60,000 INPUT - 3 Ton | | | | 80,000 INPUT - 3 Ton | | | | JUMPER SETTINGS | |
| CFM | | m³/min | | CFM | | m³/min | | COOL Tap | ADJ Tap |
| High | Low | High | Low | High | Low | High | Low | | |
| 1329 | 898 | 39.5 | 25.4 | 1312 | 878 | 37.2 | 24.9 | A | B |
| 1133 | 774 | 32.1 | 21.9 | 1117 | 741 | 31.6 | 21.0 | B | B |
| 1226 | 842 | 36.2 | 23.8 | 1202 | 810 | 34.0 | 22.9 | A | A |
| 1039 | 708 | 29.4 | 20.0 | 996 | 683 | 28.2 | 19.3 | B | A |
| 1110 | 755 | 31.4 | 21.4 | 1084 | 725 | 30.7 | 20.5 | A | C |
| 915 | 637 | 25.9 | 18.0 | 892 | 618 | 25.3 | 17.5 | C | B |
| 930 | 646 | 26.3 | 18.3 | 898 | 619 | 25.4 | 17.5 | B | C |
| 719 | 529 | 20.4 | 15.0 | 700 | 511 | 19.8 | 14.5 | D | B |
| 856 | 603 | 24.2 | 17.1 | 827 | 580 | 23.4 | 16.4 | C | A |
| 657 | 526 | 18.6 | 14.9 | 642 | 500 | 18.2 | 14.2 | D | A |
| 762 | 566 | 21.6 | 16.0 | 746 | 532 | 21.1 | 15.1 | C | C |
| 612 | 523 | 17.3 | 14.8 | 596 | 500 | 16.9 | 14.2 | D | C |
| 80,000 INPUT - 4 Ton | | | | 100,000 INPUT - 5 Ton | | | | JUMPER SETTINGS | |
| CFM | | m³/min | | CFM | | m³/min | | COOL Tap | ADJ Tap* |
| High | Low | High | Low | High | Low | High | Low | | |
| 1758 | 1183 | 49.8 | 33.5 | 2196 | 1498 | 62.2 | 42.4 | A | B |
| 1646 | 1106 | 46.6 | 31.3 | 1858 | 1167 | 52.6 | 33.0 | B | B |
| 1699 | 1140 | 48.1 | 32.3 | 2045 | 1363 | 57.9 | 38.6 | A | A |
| 1531 | 1033 | 43.4 | 29.3 | 1661 | 1054 | 47.0 | 29.8 | B | A |
| 1527 | 1047 | 43.2 | 29.6 | 1884 | 1201 | 53.3 | 34.0 | A | C |
| 1449 | 969 | 41.0 | 27.4 | 1597 | 1022 | 45.2 | 28.9 | C | B |
| 1368 | 930 | 38.7 | 26.3 | 1506 | 947 | 42.6 | 26.8 | B | C |
| 1213 | 832 | 34.3 | 23.6 | 1395 | 891 | 39.5 | 25.2 | D | B |
| 1309 | 897 | 37.1 | 25.4 | 1477 | 922 | 41.8 | 26.1 | C | A |
| 1116 | 762 | 31.6 | 21.6 | 1254 | 761 | 35.5 | 21.5 | D | A |
| 1170 | 808 | 33.1 | 22.9 | 1304 | 801 | 36.9 | 22.7 | C | C |
| 1031 | 703 | 29.2 | 19.9 | 1114 | 657 | 31.5 | 18.6 | D | C |
| 120,000 INPUT - 5 Ton | | | | | | | | JUMPER SETTINGS | |
| CFM | | m³/min | | | | | | COOL Tap | ADJ Tap* |
| High | Low | High | Low | | | | | | |
| 2342 | 1528 | 66.3 | 43.3 | | | | | A | B |
| 1904 | 1229 | 53.9 | 34.8 | | | | | B | B |
| 2140 | 1404 | 60.6 | 39.8 | | | | | A | A |
| 1700 | 1096 | 48.1 | 31.0 | | | | | B | A |
| 1918 | 1247 | 54.3 | 35.3 | | | | | A | C |
| 1643 | 1044 | 46.5 | 29.6 | | | | | C | B |
| 1522 | 967 | 43.1 | 27.4 | | | | | B | C |
| 1418 | 852 | 40.2 | 24.1 | | | | | D | B |
| 1494 | 945 | 42.3 | 26.8 | | | | | C | A |
| 1287 | 772 | 36.4 | 21.9 | | | | | D | A |
| 1337 | 802 | 37.9 | 22.7 | | | | | C | C |
| 1132 | 668 | 32.1 | 18.9 | | | | | D | C |
| HIGH / LOW HEAT CFM | | | | | | | | | |
| 60,000 INPUT - 3 Ton | | | | 80,000 INPUT - 3 Ton | | | | JUMPER SETTINGS | |
| CFM | | m³/min | | CFM | | m³/min | | HEAT Tap | ADJ Tap* |
| High | Low | High | Low | High | Low | High | Low | | |
| 1137 | 720 | 32.2 | 20.4 | 1386 | 962 | 39.2 | 27.2 | A | Any |
| 974 | 625 | 27.6 | 17.7 | 1322 | 892 | 37.4 | 25.3 | B | Any |
| 883 | 593 | 25.0 | 16.8 | 1250 | 849 | 35.4 | 24.0 | C | Any |
| 825 | 561 | 23.4 | 15.9 | 1159 | 768 | 32.8 | 21.7 | D | Any |
| 80,000 INPUT - 4 Ton | | | | 100,000 INPUT - 5 Ton | | | | JUMPER SETTINGS | |
| CFM | | m³/min | | CFM | | m³/min | | HEAT Tap | ADJ Tap* |
| High | Low | High | Low | High | Low | High | Low | | |
| 1732 | 1173 | 49.0 | 33.2 | 1912 | 1237 | 54.1 | 35.0 | A | Any |
| 1631 | 1110 | 46.2 | 31.4 | 1688 | 1079 | 47.8 | 30.6 | B | Any |
| 1493 | 1008 | 42.3 | 28.5 | 1545 | 967 | 43.7 | 27.4 | C | Any |
| 1359 | 931 | 38.5 | 26.4 | 1422 | 899 | 40.3 | 25.5 | D | Any |
| 120,000 INPUT - 5 Ton | | | | | | | | JUMPER SETTINGS | |
| CFM | | m³/min | | | | | | HEAT Tap | ADJ Tap* |
| High | Low | High | Low | | | | | | |
| 2238 | 1465 | 63.4 | 41.5 | | | | | A | Any |
| 2014 | 1313 | 57.0 | 37.2 | | | | | B | Any |
| 1863 | 1211 | 52.8 | 34.3 | | | | | C | Any |
| 1686 | 1075 | 47.7 | 30.4 | | | | | D | Any |

All CFM's are shown at 0.5" w.c. external static pressure. These units have variable speed motors that automatically adjust to provide constant CFM from 0.0" to 0.6" w.c. static pressure. From 0.6" to 1.0" static pressure, CFM is reduced by 2% per 0.1" increase in static. Operation on duct systems with greater than 1.0" w.c. external static pressure is not recommended.

NOTE: At some settings, LOW COOL and/or LOW HEAT airflow may be lower than what is required to operate an airflow switch on certain models of electronic air cleaners. Consult the instructions for the electronic air cleaner for further details.

The ADJ "D" tap should not be used.

FILTER PERFORMANCE

The airflow capacity data published in Table 17 represents blower performance **WITHOUT** filters. To determine the approximate blower performance of the system, apply the filter drop value for the filter being used or select an appropriate value from the Table 18.

NOTE: The filter pressure drop values in Table 18 are typical values for the type of filter listed and should only be used as a guideline. Actual pressure drop ratings for each filter type vary between filter manufacturers.

TABLE 16: Filter Performance - Pressure Drop Inches W.C. and (kPa)

| AIRFLOW RANGE | | MINIMUM OPENING SIZE | | FILTER TYPE | | | | | |
|---------------|-------------------|----------------------|-----------------|-------------|---------|------------------------------|---------|---------|---------|
| | | | | DISPOSABLE | | WASHABLE FIBER ^{1*} | | PLEATED | |
| CFM | m ³ /m | in ² | cm ² | In W.C. | kPA | In W.C. | kPA | In W.C. | kPA |
| 0 - 750 | 0 - 21.4 | 230 | 584.2 | 0.01 | 0.00249 | 0.01 | 0.00249 | 0.15 | 0.03736 |
| 751 - 1000 | 21.25 - 28.32 | 330 | 838.2 | 0.05 | 0.01245 | 0.05 | 0.01245 | 0.20 | 0.04982 |
| 1001 - 1250 | 28.33 - 35.40 | 330 | 838.2 | 0.10 | 0.02491 | 0.10 | 0.02491 | 0.20 | 0.04982 |
| 1251 - 1500 | 35.41 - 42.48 | 330 | 838.2 | 0.10 | 0.02491 | 0.10 | 0.02491 | 0.25 | 0.06227 |
| 1501 - 1750 | 42.49 - 49.55 | 380 | 965.2 | 0.15 | 0.03736 | 0.14 | 0.03487 | 0.30 | 0.07473 |
| 1751 - 2000 | 49.56 - 56.63 | 380 | 965.2 | 0.19 | 0.04733 | 0.18 | 0.04484 | 0.30 | 0.07473 |
| 2001 & Above | 56.64 - Above | 463 | 1176.0 | 0.19 | 0.04733 | 0.18 | 0.04484 | 0.30 | 0.07473 |

1. Washable Fibers are the type supplied with furnace (if supplied).

APPLYING FILTER PRESSURE DROP TO DETERMINE SYSTEM AIRFLOW

To determine the approximate airflow of the unit with a filter in place, follow the steps below:

1. Select the filter type.
2. Determine the External System Static Pressure (ESP) without the filter.
3. Select a filter pressure drop from the table based upon the number of return air openings or return air opening size and add to the ESP from Step 2 to determine the total system static.
4. If total system static matches a ESP value in the airflow table (i.e. 0.20, 0.60, etc.) the system airflow corresponds to the intersection of the ESP column and Model/Blower Speed row.

FIELD INSTALLED ACCESSORIES - NON-ELECTRICAL

| MODEL NO. | DESCRIPTION | USED WITH |
|-----------|--|-----------------------|
| 1NP0580 | PROPANE (LP) CONVERSION KIT | ALL MODELS |
| 1CT0302 | CONCENTRIC INTAKE/VENT 2" | 60, 80, 100 INPUT MBH |
| 1CT0303 | CONCENTRIC INTAKE/VENT 3" | 100, 120 MBH |
| 1PS0507 | HIGH ALTITUDE PRESSURE SWITCH KIT (Does Not Include Orifices) | 60/1200 |
| 1PS0508 | | 80/1200 |
| 1PS0509 | | 80/1600 |
| 1PS0510 | | 100/2000 |
| 1PS0511 | | 120/2000 |
| 1NK0301 | CONDENSATE NEUTRALIZER KIT | ALL MODELS |
| 1HT0901 | SIDEWALL VENT TERMINATION KIT | ALL MODELS |
| 1CB0317 | COMBUSTIBLE FLOOR BASE | 17-1/2" CABINET |
| 1CB0321 | | 21" CABINET |
| 1CB0324 | | 24-1/2" CABINET |
| 1TK0917 | COIL TRANSITION KIT | 17-1/2" CABINET |
| 1TK0921 | | 21" CABINET |
| 1TK0924 | | 24-1/2" CABINET |
| 1VK0901 | 3-WAY TRANSITION KIT | All MODELS |

FIGURE 40: Wiring Diagram

