


MODEL **AFG** Oil
Burner




For Armstrong Furnaces

Instruction Manual

Type "F" air tube combinations
Voltage: 120 Vac/60 Hz

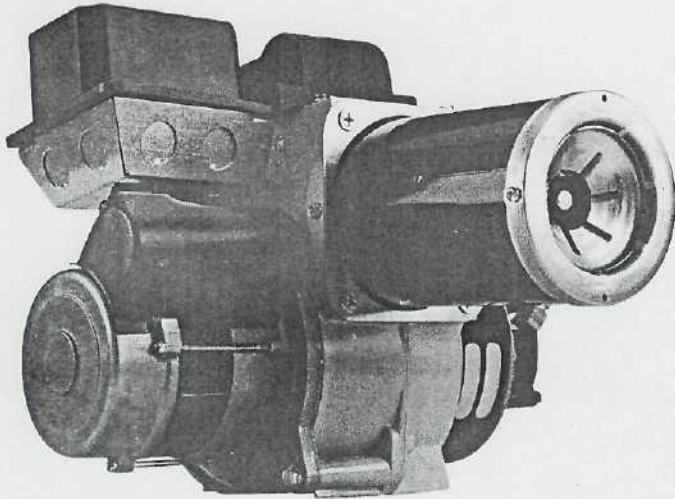

Model AFG Burner

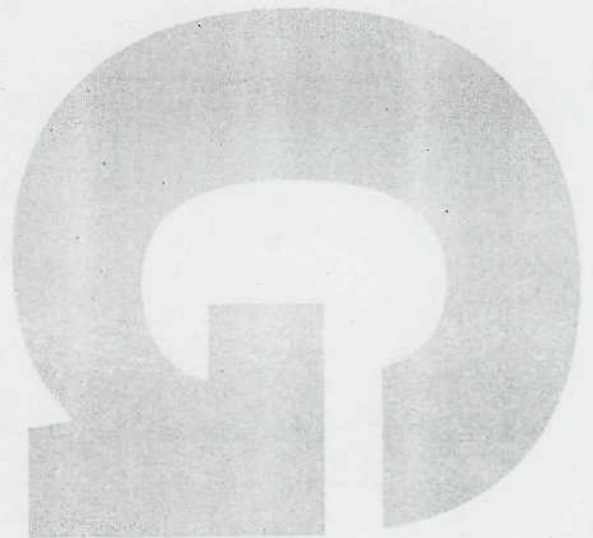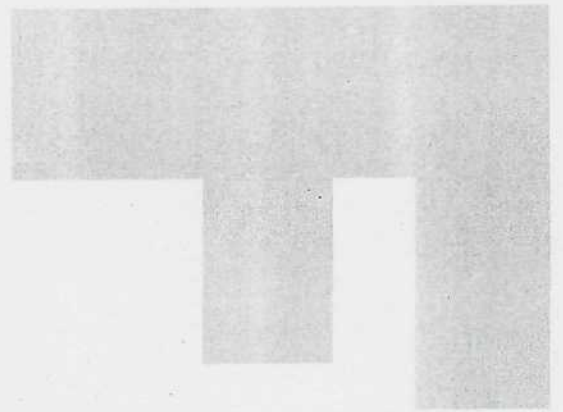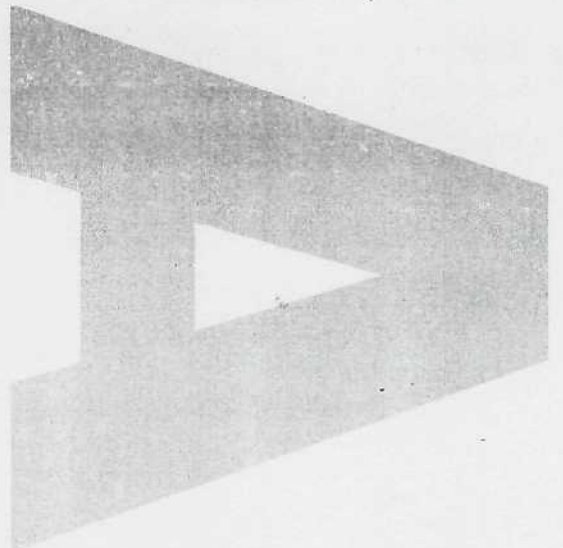

Beckett

Prepare before installing

Verify specifications.....3
Be aware of hazard definitions.....3
Check certifications/approvals.....3
Notice special requirements.....3

Prepare burner & site

Inspect/prepare installation site.....4
Prepare burner.....<,#.....5
Check/adjust "Z" dimension.....6
Furnace/Burner Specification Table.....7

Adjust, pipe & wire burner

Connect fuel lines.....8
Wire burner.....8, 9

Start up & adjust burner

Start up burner/set combustion.....10
Set combustion with instruments.....10

Service & maintain burner

Perform regular maintenance.....10
To replace the blower wheel.....10
Replacement parts.....11
Owner's information.....12
Owner service & maintenance.....12
Warranty.....12

Verify specifications

Capacity	V heads
	Firing rate.....0.40-3.00 GPH
	Input56,000 - 420,000 Btu/h
Fuels	U. S. . . . No. 1 or No. 2 heating oil only (ASTM D396)
	Canada No. 1 stove oil or No. 2 furnace oil only
Electrical	Power supply.....120 Vac/60 Hz/single phase
	Operating load.....5.8 Amps maximum, Note 1
	Motor.....1/7 hp, 3450 rpm, NEMA48M frame
rotation CCW when facing shaft end
	Ignition.....Continuous duty iron-core transformer OR.....Continuous duty solid state igniter
Fuel unit	Outlet pressure.....Note2
Air tube	ATCcode . . . See Burner Specification Table, page 7
Dimensions	Height (maximum).....11 1/2 inches
	Width (maximum).....12 7/8 inches
	Depth (chassis only).....6 9/16 inches
	Air tube diameter.....4 inches
Note 1. A burner with an electronic igniter or a PSC motor will have a lower operating current. The actual load should be determined by a current meter.	
Note 2. See Burner Specification Table, page 7, for required outlet pressure.	

Be aware of hazard definitions

DANGER Denotes presence of a hazard which, if ignored, will result in severe personal injury, death, or substantial property damage.

WARNING Denotes presence of a hazard which, if ignored, could result in severe personal injury, death, or substantial property damage.

CAUTION Denotes presence of a hazard which, if ignored, could result in minor personal injury or property damage.

NOTICE Intended to bring special attention to information, but not related to personal injury or property damage.

Check certifications/approvals

- Underwriters Laboratories has certified this burner to comply with ANSI/UL 296 and has listed it for use with #1 or #2 fuel oil as specified in ASTM D396. *Low sulfur #1 and #2 fuel oils reduce heat exchanger deposits with all burners compared to the standard fuels. Reduced deposits extend the service interval for cleaning and improve the efficiency of the appliance over time. Low sulfur fuels reduce particulate and oxides of nitrogen emissions as well. The Oilheat Manufacturers' Association recommends these fuels as the preferred fuels for this burner.*
- State and local approvals are shown on burner rating label (see below).
- All oil burners should be installed in accordance with regulations of the latest revision of the National Fire Protection Association Standard **NFPA 31** and in complete accordance with all local codes and authorities having jurisdiction. Regulation of these authorities take precedence over the general instructions provided in this installation manual.
- For recommended installation practice in Canada, refer to the latest version of CSA Standard B139.



Notice special requirements

ESUB This equipment must be installed, adjusted and started only by a qualified service agency - an individual or agency, licensed and experienced with all codes and ordinances, who is responsible for the installation and adjustment of the equipment. The installation must comply with all local codes and ordinances and with the latest revision of the National Fire Protection Standard for Oil-Burning Equipment, NFPA31 (orCSAB139).

TS instructions before proceeding. Follow all instructions completely. Failure to follow these instructions could result in equipment malfunction, causing severe personal injury, death or substantial property damage.

NOTICE Concealed damage — If you discover damage to the burner or controls during unpacking, notify the carrier at once and file the appropriate claim.

NOTICE When contacting Beckett for service information — Please record the burner serial number (and have available when calling or writing). You will find the serial number on the silver label located on the left rear of the burner or on the cover mounting plate. See illustration below.

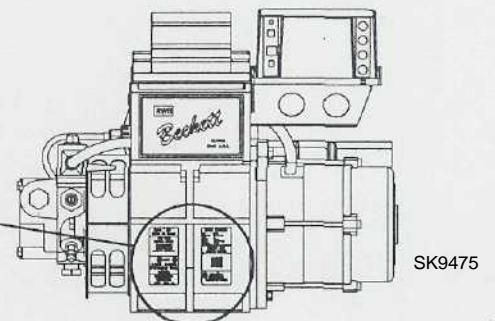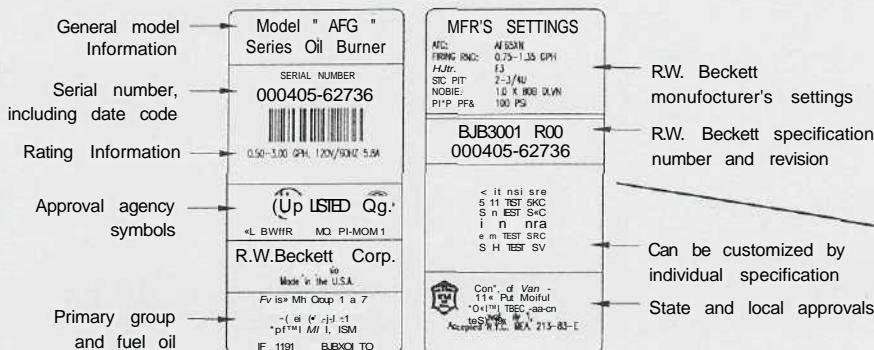

Prepare burner & site

Inspect/prepare installation site

Chimney or vent

- inspect the chimney or vent, making sure it is properly sized and in good condition for use.
- For those installations not using a chimney, such as through-the-wall vented appliances, follow the instructions given by the appliance and power venter manufacturers.

Direct air supply

- AFG burners can be equipped with combustion air boots to allow use of outside air for combustion.

Combustion air supply

See NFPA Standard 31 for complete details.

WARNING If the burner is not supplied with a reliable combustion air source, the burner cannot properly burn the fuel. This would result in incomplete combustion, causing sooting and possible emission of carbon monoxide. Severe personal injury, death or substantial property damage could occur.

Appliance located in confined space

The confined space should have two (2) permanent openings: one near the top of the enclosure and one near the bottom of the enclosure. Each opening shall have a free area of not less than (1) one square inch per 1,000 BTU's per hour of the total input rating of all appliances within the enclosure. The openings shall have free access to the building interior, which should have adequate infiltration from the outside.

Exhaust fans and other air-using devices

Size air openings large enough to allow for all air-using devices in addition to the minimum area required for combustion air. If there is any possibility of the equipment room developing negative pressure (because of exhaust fans or clothes dryers, for example), either pipe combustion air directly to the burner or provide a sealed enclosure for the burner and supply it with its own combustion air supply.

Outside air kit applications

Refer to separate instruction sheet supplied with AFG outside air kit for installation. This optional kit allows combustion air to be piped directly to the burner (Beckett part number 51747).

WARNING You must install the outside air kit strictly following the kit installation instructions. Do not attempt to install outside air piping without using the AFG outside air kit and instructions. Failure to do so could result in burner or heating appliance failure, causing potential severe personal injury, death or substantial property damage.

Inspect/prepare installation site (*continued*)

Clearances to burner and appliance

- Provide space around burner and appliance for easy service and maintenance.
- Check minimum clearances against those shown by the appliance manufacturer and by applicable building codes.

Prepare burner

Low Firing Rate Baffle

The AFG Low Firing Rate Baffle (LFRB), item 7, page 11, reduces the air flow and pressure. The LFRB is sometimes used for firing rates under 1.00 GPH as listed in the table below. Refer to the appliance manufacturer's instructions or the Beckett *OEM Specification Guide* part number 6711. Do not omit the LFRB when specified. Omitting the baffle when specified or installing the baffle when not specified could result in poor burner performance.

Burner head type	Low Firing Rate Baffle, if specified:
FO	up to 0.65 gph
F3	up to 0.85 gph
F4 or F6	up to 0.90 gph

Burner fuel unit

- Verify that the burner fuel unit is compatible with the oil supply system. For more details, refer to "Connect fuel lines" on page 8.

Install burner nozzle (if not already installed)

CAUTION Make certain the correct nozzle is selected for the actual fuel unit pressure. Nozzles are rated for 100 psig operation. For applications with fuel unit pressure above 100 psig, the nozzle rated capacity will be lower than the appliance firing rate. Use only the specified spray pattern unless combustion test results indicate the need for a change. Failure to use the correct nozzle size and type can result in unacceptable combustion, possibly causing severe personal injury, death or substantial property damage.

- Remove the plastic plug protecting the nozzle adapter threads
- Place a $\frac{3}{4}$ " open-end wrench on the nozzle adapter. Insert the nozzle into the adapter and finger tighten. Finish tightening with a $\frac{5}{8}$ " open-end wrench. Use care to avoid bending the burner electrodes. See CAUTION, above right.

If the nozzle is already installed, remove the nozzle line assembly to verify that the nozzle size and spray pattern are correct for the application (per appliance manufacturer's information or Beckett *OEM Specification Guide*, part number 6711). Verify that the electrode tip settings comply with Figure 1.

- If the nozzle is not installed, obtain a nozzle of the manufacturer, capacity and spray angle specified in appliance manufacturer's information or Beckett *OEM Specification Guide*, part number 6711.

Recommended nozzle spray angles	
"F" head	See Burner Specification Table, page 7

Prepare burner & site

Prepare burner (continued)

Install burner nozzle (if not already installed) (continued)


CAUTION Use care when removing and installing oil nozzles:

- Inspect the nozzle adapter before installing nozzle. If it is grooved or scratched on the sealing surface, replace the nozzle line assembly. Otherwise, oil could leak at the nozzle-adapter joint, causing serious combustion problems.
- Protect the nozzle orifice and strainer when installing. If the orifice gets dirt in it or is scratched, the nozzle will not function properly.
- Do not over-torque the nozzle when installing. This will cause deep grooves in the nozzle adapter, preventing a seal when a new nozzle is installed.
- Use a wrench or vise to hold the nozzle adapter. DO NOT attempt to remove or replace nozzle without holding adapter. The nozzle alignment could be seriously damaged. Use a nozzle wrench that secures the adapter or use $\frac{3}{4}$ " and $\frac{5}{8}$ " open-end wrenches.
- Do not squeeze the electrodes too tightly when handling the nozzle line assembly. This could change the electrode tip settings or damage the ceramic electrode insulators.
- Carefully check and realign electrode tips after replacing nozzle, ensuring the electrode settings comply with Figure 1.

Check/adjust electrodes

Check the electrode tip settings. Adjust if necessary to comply with the dimensions shown in Figure 1. To adjust, loosen the electrode clamp screw and slide/rotate electrodes as necessary. Securely tighten the clamp screw when finished.

Figure 1 - Electrode settings

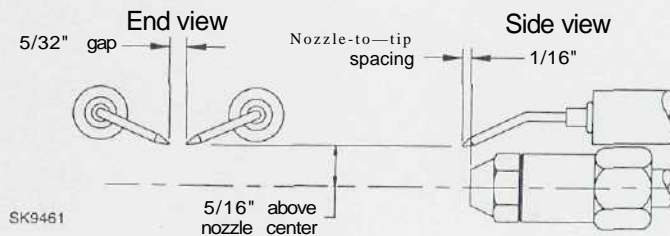

Servicing nozzle line assembly


- Turn off power to burner before proceeding.
- Disconnect oil connector tube from nozzle line.
- Loosen the two screws securing igniter retaining clips and rotate both clips to release igniter baseplate. Then tilt igniter back on its hinge.
- Remove splined nut.
- Remove nozzle line assembly from burner, being careful not to damage the electrodes or insulators while handling. To ease removal of long assemblies (over 9 inches), rotate assembly 180° from installed position after pulling partially out of tube.
- To replace the nozzle assembly, reverse the above steps.



Prepare burner & site

Check/adjust "Z" dimension - "F" head

Figure 2 - "F" heads (see Table 3 for dimensions)

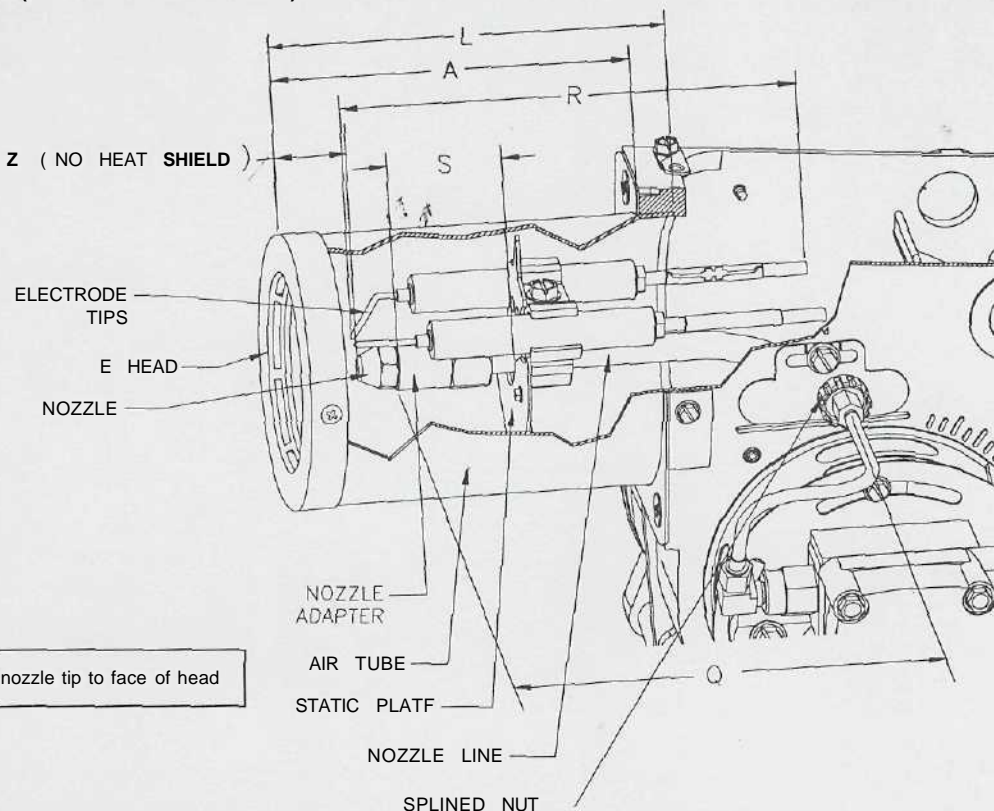

Z = Distance from nozzle tip to face of head

SK9458

- See Figure 2 above. The important "Z" dimension is the distance from the face of the nozzle to the flat face of the head. This distance for **F heads** is **1 %**. The "Z" dimension is factory set for burners shipped with the air tube installed. Even if factory set, verify that the "Z" dimension has not been changed.
- Use the following procedure to adjust the "Z" dimension, if it is not correct:
 - Turn off power to the burner.
 - Disconnect the oil connector tube from the nozzle line.
 - See Figure 2. Loosen the splined nut from the nozzle line. Loosen the hex head screw securing the escutcheon plate to the burner housing.
 - Place the end of a ruler at the face of the nozzle and, using a straight edge across the head, measure the distance to the face of the head. A Beckett T501 gauge may also be used.
 - Slide the nozzle line forward or back until this dimension for **F heads** is **1 %**.
 - Tighten the hex head screw to secure the escutcheon plate to the burner chassis. Then tighten the splined nut and attach the oil connector tube.
- Recheck the "Z" dimension periodically when servicing to ensure the escutcheon plate has not been moved. You will need to reset the "Z" dimension if you replace the air tube or nozzle line assembly.

Table 3 - Dimensions for Figure 2

	For usable length A (inches):
Dimension (inches)	Fhead
H (nozzle to head), $\pm \sqrt{32}$	NA
L (total tube length)	$A + \sqrt{2}$
R (electrode length), $\pm \sqrt{At}$	$A + 2\sqrt{4}$
S (adapter to static plate), $\pm \sqrt{Vie}$	(Note 1)
Q (nozzle line length)	$A + 1 = \frac{1}{k}$
Z (F head)	$1 \sqrt{a}$
Note 1: 1 % for dimension A less than 4"; 1 % for dimension A from 4" through 4 $\sqrt{1}$ 2^{13} fe for dimension A greater than 4W	

NOTICE The Beckett **Z gauge** (part number 2-2000) is available to permit checking the F head "Z" dimension without removing the burner from the appliance.

Furnace/Burner Specifications

Armstrong Furnace Model	Armstrong Burner Number	Beckett Burner Model	Beckett Spec. No.	Furnace Output, BTU	Nozzle	Pump Pressure, psig	Beckett Air Tube Part Number	Insertion Length	Head	Static Plate Dia.
57DD/Belt	46576-001	AFG	ARM1401C	57,000	.50 X 80°A	100	AF50XZT	5	F0	2-3/4"
72DD	46576-001	AFG	ARM1401C	72,000	.65 X 80°B	100	AF50XZT	5	F0	2-3/4"
84DD/Belt	46576-002	AFG	ARM201C	84,000	.65 X 80°B	140	AF50YB	5	F6	2-3/4"
95DD/Belt	46576-002	AFG	ARM201C	105,000	.75 X 80°B	140	AF50YB	5	F6	2-3/4"
112DD/Belt	46576-003	AFG	ARM301C	112,000	.85 X 80°B	140	AF50YB	5	F6	2-3/4"
125DD/Belt	46576-003	AFG	ARM301C	125,000	1.00 X 80°B	140	AF50YB	5	F6	2-3/4"
140DD	46576-004	AFG	ARM401C	140,000	1.10X80°B	140	AF55YB	5-5/8	F6	2-3/4"
168DD	46576-004	AFG	ARM401C	168,000	1.25 X 80°B	140	AF55YB	5-5/8	F6	2-3/4"
196Belt	46576-005	AFG	ARM903C	196,000	1.50X80°B	140	AF56WF	5-3/4	F16	2-3/4"
57Hor	46613-001	AFG	ARM1701	57,000	.50 X 80°A	100	AF50XZT	5	F0	2-3/4"
72Hor	46613-001	AFG	ARM 1701	72,000	.65 X 80°B	100	AF50XZT	5	F0	2-3/4"
84Hor	46613-002	AFG	ARM 1702	84,000	.65 X 80°B	140	AF50YB	5	F6	2-3/4"
95Hor	46613-002	AFG	ARM1702	105,000	.75 X 80°B	140	AF50YB	5	F6	2-3/4"
112Hor	46613-003	AFG	ARM 1703	112,000	.85 X 80°B	140	AF50YB	5	F6	2-3/4"
125Hor	46613-003	AFG	ARM1703	125,000	1.00X80°B	140	AF50YB	5	F6	2-3/4"
168Hor	46613-004	AFG	ARM 1704	168,000	1.25X80°B	140	AF56WF	5-3/4	F16	2-3/4"
196Hor	46613-004	AFG	ARM 1704	196,000	1.50 X 80°B	140	AF56WF	5-3/4	F16	2-3/4"

Connect fuel lines

Carefully follow the fuel unit manufacturer's literature and the latest edition of NFPA 31 for oil supply system specifications. If this information is unavailable, use the following basic guidelines;

NOTICE 1 Fuel units with automatic bypass do not require a bypass plug.

WARNING The burner fuel unit is shipped without the bypass plug installed. You must install this plug on two-pipe oil systems. DO NOT install the plug in the fuel unit if connected to a one-pipe oil system. Failure to comply could cause fuel unit seal failure, oil leakage and potential fire and injury.

Fuel supply level with or above burner -

The burner may be equipped with a single-stage fuel unit for these installations. Connect the fuel supply to the burner with a single supply line if you want a one-pipe system (making sure the bypass plug is NOT installed in the fuel unit). Manual bleeding of the fuel unit is required on initial start-up. If connecting a two-pipe fuel supply, install the fuel unit bypass plug.

WARNING The oil supply inlet pressure to the fuel unit cannot exceed 3 psi. Install a pressure-limiting device in accordance with NFPA 31.

Fuel supply below the level of the burner -

When the fuel supply is below the level of the burner, a two-pipe fuel supply system is required. Depending on the fuel line diameter and horizontal and vertical length, the installation may also require a two-stage pump. Consult the fuel unit manufacturer's literature for lift and vacuum capability.

Fuel line installation -

- Continuous lengths of heavy wall copper tubing are recommended. Always use flare fittings. Never use compression fittings.
- Always install fittings in accessible locations. Fuel lines should not run against the appliance or the ceiling joists (to avoid vibration noise).

WARNING Never use Teflon tape on any fuel fitting. Tape fragments can lodge in fuel line components and fuel unit, damaging the equipment and preventing proper operation.

Fuel line valve and filter -

- Install two high quality shutoff valves in accessible locations on the oil supply line. Locate one close to the tank and the other close to the burner, upstream of the filter.

NOTE Some states require these valves to be fusible-handle design for protection in the event of fire. We recommend this as good industry practice for all installations.

- Install a generous capacity filter inside the building between the fuel tank shutoff valve and the burner, locating both the filter and the valve close to the burner for ease of servicing. Filter should be rated for 50 microns or less.

Wire burner

Burner packaged with appliance

- Refer to furnace wiring diagram for electrical connections.


NOTICE 1 All wiring must be in accordance with the latest revision of National Electric Code NFPA 70 and local codes and regulations.

WARNING The wiring diagrams in this manual are for *general reference only*, and apply only to burners equipped with R8184G or R7184 primary controls. For other controls, refer to the control manufacturer's literature or the diagrams supplied with the appliance. Failure to apply correct wiring could result in severe personal injury, death or substantial property damage.

NOTICE 1 The R7184 primary control with valve-on delay (*prepurge*) and burner motor-off delay (*postpurge*), shown in Figure 7, page 9, requires a constant 120 VAC power source supplied to the BLACK wire on the control. The RED wire goes to the appliance limit circuit. Please note that other control manufacturers may use different wire colors for power and limit connections.

Figure 6 - Typical wiring, R8184G or equivalent primary control


DANGER Electrical shock hazard. Disconnect power before servicing.

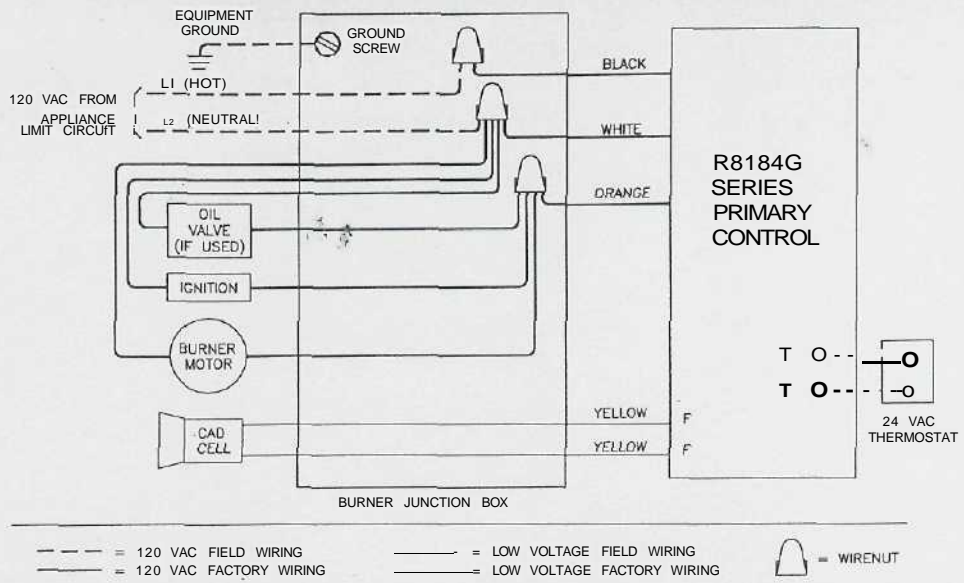

SK9437

Figure 7 - Typical wiring, R7184 primary control (R7184P shown)

DANGER Electrical shock hazard. Disconnect power before servicing.

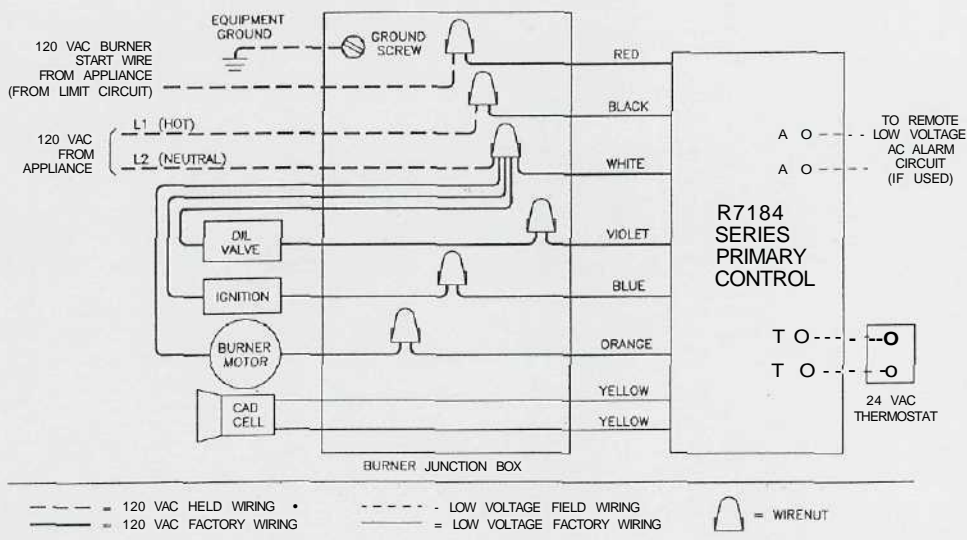

SK9359

Table 5 - R7184 primary control features

FEATURE	R7184A	R7184B	R7184P
Interrupted ignition	YES	YES	YES
Limited reset, limited recycle	YES	••• YES	YES
Diagnostic LED, cad cell indicator	YES	YES	YES
Valve-on delay		YES	YES
Burner motor-off delay			YES
Alarm contacts			Optional

Start up & adjust burner

Service & maintain burner

Startup burner/set combustion

TM - MEI Do not attempt to start the burner when excess fuel or vapor has accumulated in the appliance. Starting the burner under these conditions could result in a puffback of hot combustion gases, high smoke levels, or otherwise hazardous operation.

1. Open the shutoff valves in the oil supply line to the burner.
2. Close air band and partially open air shutter. This is an initial air setting for the pump bleeding procedure only. Additional adjustments must be made with instruments.
3. Set the thermostat substantially above room temperature.
4. Close the line voltage switch to start the burner. If the burner does not start immediately you may have to reset the safety switch of the burner primary control.
5. **Bleed air from** fuel unit as soon as burner motor starts rotating. To bleed the fuel unit, attach a clear plastic hose over the vent fitting. Loosen the fitting and catch the oil in an empty container. Tighten the fitting when all air has been purged from the oil supply system.
 - If the burner locks out on safety during bleeding, reset the safety switch and complete the bleeding procedure. Note — Electronic safety switches can be reset immediately; others may require a three- to five-minute wait.
 - If burner stops after flame is established, additional bleeding is probably required. Repeat the bleeding procedure until the pump is primed and a flame is established when the vent fitting is closed.
 - For R7184 primary controls, see *Technician's Quick Reference Guide*, part number 61351 or 61465, for special pump priming sequence.
 - Prepare for combustion tests by drilling a 1/8" sampling hole in the flue pipe between the appliance and the barometric draft regulator.
6. **Initial** air adjustment — Using a smoke tester, adjust the air shutter (and air band, if necessary) to obtain a clean flame. Now the additional combustion tests with instruments can be made

Set combustion with instruments

WAIffl?PI The combustion must be adjusted using test instruments. Failure to do so could result in burner or appliance failure, causing potential severe personal injury, death or substantial property damage.

1. Let burner run for approximately 5 to 10 minutes.
2. Set the over-fire or stack draft as specified by appliance manufacturer (usually -0.01 to -0.02 inches w.c. over-fire for natural draft applications).
3. Follow these four steps to properly adjust the burner:

Step 1: Adjust air until a trace smoke level is achieved.

Step 2: At the trace of smoke level, measure the CO₂ (or O₂). This is the vital reference point for further adjustments.

 - Example: 13.5% CO₂ (2.6% O₂)

Step 3: Increase the air to reduce CO₂ by 1 to 2 percentage points. (O₂ will be increased by approximately 1.4 to 2.7 percentage points.)

 - Example: Reduce CO₂ from 13.5% to 11.5% (O₂ - 2.6% to 5.3%)

Step 4: Recheck smoke level. It should be zero.

 - This procedure provides a margin of reserve air to accommodate variable conditions.
 - If the draft level has to be changed, recheck the smoke and CO₂ levels. Adjust the burner air if necessary.
4. Once combustion is set, tighten all fasteners on air band, air shutter and head adjusting plate or escutcheon plate.
5. Burner equipped with cover • Reinstall the cover and repeat Steps 2 and 4 above. If CO₂ increases (O₂ decreases), remove the cover and adjust the air setting so the CO₂ (O₂) with cover on meets requirements of Step 3.
6. Start and stop the burner several times to ensure satisfactory operation. Test the primary control and all other appliance safety controls to verify that they function according to the manufacturer's specifications.

Perform regular maintenance


WARNING This equipment must be serviced only by a qualified service agency. The appropriate test instruments must be used. Failure to do so could result in burner or appliance failure, causing potential severe personal injury, death or substantial property damage.

- Replace the oil supply line filter. The line filter cartridge must be replaced to avoid contamination of the fuel unit and nozzle.
 - Inspect the oil supply system. All fittings should be leak-tight. The supply lines should be free of water, sludge and other restrictions.
 - Remove and clean the pump strainer if applicable.
 - Replace the nozzle with an equivalent nozzle.
 - Clean and inspect the electrodes for damage, replacing any that are cracked or chipped.
 - Check electrode tip settings. Replace electrodes if tips are rounded.
 - Inspect the igniter spring contacts.
 - Clean the cad cell grid surface, if necessary.
3. **Make sure Low Firing Rate Baffle** is in place if required for the burner application. Omitting the baffle can result in unacceptable burner combustion.
 4. **Inspect all gaskets.** Replace any that are damaged or would fail to seal adequately.
 5. **Clean the blower wheel, air inlet, air guide, retention head and static plate** of any lint or foreign material.
 6. **If motor is not permanently lubricated,** oil motor with a few drops of SAE 20 nondetergent oil at each oil hole. DO NOT over oil motor. Excessive oiling can cause motor failure.
 7. **Check motor current.** The amp draw should not exceed the nameplate rating by more than 10%.
 8. **Check all wiring for secure connections or insulation breaks.**
 9. **Check the pump pressure and cutoff function.**
 10. **Check primary control safety lockout timing.**
 11. **Check ignition system for proper operation.**
3. **Inspect the vent system and chimney for soot accumulation or other restriction.**
 4. **Clean the appliance thoroughly** according to the manufacturer's recommendations.
 5. **Check the burner performance.** Refer to the section "**Set combustion with instruments**".

It is good practice to make a record of the service performed and the combustion test results.

To replace the blower wheel:


1. Turn off all power to the burner before servicing.
2. Disconnect the burner motor wires.
3. Remove the bolts securing the motor to the burner housing.
4. Remove the motor and blower wheel.
5. Remove the existing blower wheel.
6. As shown at right, slide the new blower wheel onto the shaft.
 - Place a .030" (√32' ± VM") feeler gauge on the motor as shown.
 - Slide blower wheel toward motor until it contacts feeler gauge.
 - Rotate the blower wheel until the setscrew is centered on the flat of the motor shaft. Tighten the setscrew to secure the wheel.
7. DO NOT use a motor that has endshield openings outside the blower wheel circumference (represented by the dashed line).
8. Install the motor on the burner housing. Tighten screws. Reconnect wires.

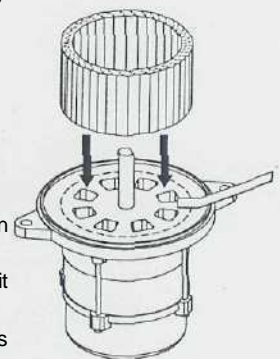

SK9190A

Restore power, start the burner and perform combustion tests. Refer to the section "Set combustion with instruments".

Replacement parts

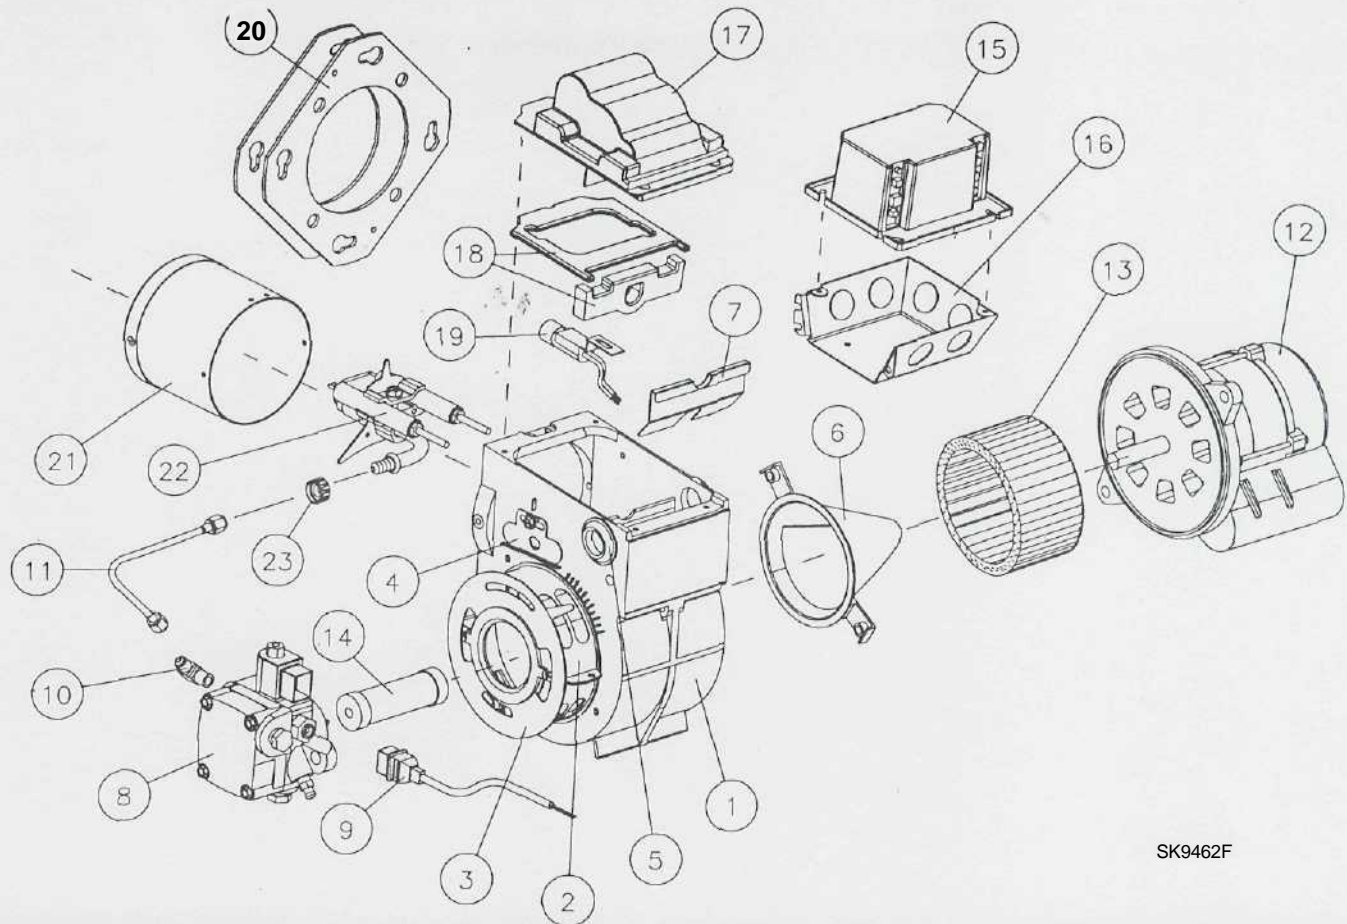

SK9462F

item	Description	Part Number
1	Burner housing assembly	5877
2	Air band assembly - 8 slot	5151501
(Note 1)	Screw 10-24 xfc" (1)	4198
	Nut 10-24 square (1)	4150
3	Air shutter-4 slot	3709
(Note 1)	Screws 10-24x5/16" (2)	4292
4	Escutcheon plate (F heads)	3493
(Note 1)	Screw 10-24 x 5/16" (1)	4292
5	Hole plug	2139
6	Air guide (Note 2)	31231U
(Note 1)		
7	Low Firing Rate Baffle - silver (Note 3)	5880
(Note 1)		
8	Fuel unit A2EA6520N621LfCfeanClrf;	21844U
(Note 4)	Mounting screws 1/4-20 x 7/8" (2)	4189
9	Valve cordset (for 21844 pump)	21807
10	Pump elbow	2256
11	Connector tube assembly - 8"	5394
12	Motor - PSC	21805U
	Mounting screws 1/4-20 x 7/8" (2)	4189

Item	Description	Part Number
13	Blower wheel (use only RWB replacement)	2999U
14	Coupling	2454
15	Primary Control R7184B - valve-on delay	7456U
16	Electrical box	5770
17	Igniter-includes gaskets	51771U
18	Igniter gasket kit	51304
19	Cad cell detector	7006U
20	Flange	323009BK
	Gasket	3811
21	Air tube combination - see Table, page 7	Specify
22	Electrode kit F head air tubes up to 9"	5780
23	Splined nut	3666

Note 1	These items are included in the 5877 burner housing assembly
Note 2	Factory installed. Please do not remove from burner!
Note 3	See "Prepare burner", page 5, for Low Firing Rate Baffle usage
Note 4	Cordset, connector tube, and screws included in 21844U kit

Service & maintain burner

Owner's information

WARNING This burner must be installed, adjusted and started only by a **qualified service agency** — an individual or agency, licensed and experienced with all codes and ordinances, who is responsible for the installation and adjustment of the equipment.

- Have your equipment **inspected at regular intervals** by a **qualified service agency** to assure continued proper operation.
- Installation and adjustment of the burner requires technical knowledge and the use of combustion test instruments. **Do not tamper** with the unit or controls. Call your **qualified service agency**.
- **Incorrect operation of the burner could result in severe personal injury, death or substantial property damage.**

The following could result in fire hazard, severe personal injury, death or substantial property damage. Read carefully.

- **Never** attempt to **use** gasoline in your heating appliance.
- **Never store gasoline or combustible materials** near the burner or appliance.
- **Never** attempt to burn **garbage or refuse** in your appliance.
- **Never** attempt to **light the burner/appliance** by throwing burning material into the appliance.
- **Never** attempt to use crankcase **or waste oil** or material other than the approved fuel oils in this burner.
- **Never** restrict the air inlet openings to the burner or the combustion air ventilation openings in the room.

Owner service and maintenance

Properly installed and maintained, **your AFG burner** will provide **years** of efficient, trouble-free operation. **Please** take care of your equipment by following **the** warnings provided and by doing the following (notify your qualified service agency if you find anything wrong):

Regular Service

- Have your burner/heating appliance serviced annually by your qualified service agency, unless an extended service interval has been determined as follows.
- With properly configured burners, there are special Clearburn® practices (such as low sulfur fuels, fuel additive programs, outside combustion air, high effectiveness filtration, etc.) that can extend service intervals. Discuss this with your qualified service agency to determine the proper regular service interval for your heating system.

Daily

Check the room in which your burner/appliance is installed. Make sure:

- air ventilation openings are clean and unobstructed
- nothing is blocking the burner inlet air openings
- no combustible materials are stored near the heating appliance
- there are no signs of oil or water leakage around the burner or appliance

Weekly

- Check your oil tank level. Always keep your oil tank full, especially during the summer, in order to prevent condensation of moisture on the inside surface of the tank.

Warranty

Beckett warrants its equipment specifically to those who have purchased it for resale, including your qualified service agency (dealer). In the event of any problems with your equipment or its installation, you should contact your dealer for assistance.

The Oilheat Manufacturers' Association supports the use of low sulfur fuels as defined by ASTM D396, Grades No. 1 Low Sulfur and No. 2 Low Sulfur, as the preferred heating fuel for the following reasons:

- Low sulfur fuels reduce deposits on heat exchanger surfaces, extending the service interval between cleanings.
- The reduced deposits increase the efficiency of the appliance.
- Low sulfur fuels reduce particulate emissions.
- Low sulfur fuels reduce oxides of nitrogen emissions.

R.W. BECKETT CORPORATION

U.S.A.: P.O. Box 1289 • Elyria, Ohio 44036

Canada: R.W. Beckett Canada, Ltd. • Unit #3, 430 Laird Road • Guelph, Ontario N1G 3X7

Form Number 6104ARAFG R0303

Printed in U.S.A. © 2003 R.W. Beckett Corporation

